

DIGITAL NAVIGATION SYSTEM

User's Manual



DIGITAL NAVIGATION SYSTEM

ELANTRA

User's Manual



Preface

Thank you for purchasing this Audio Navigation System.

This user's manual explains how to use the Hyundai Motor Audio Navigation System.

Before using the product, read the contents of this user's manual carefully and use this product safely.

- The screens shown in this manual may differ with the actual screens of the product.
- The design and specification of this product may change without prior notification for product improvement.
- When transferring the vehicle to another individual, include this user's manual so that the next driver can continue its use.

iPod®

iPod® is a registered trademark of Apple Inc.

Bluetooth®

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Hyundai is under license. A Bluetooth® enabled cell phone is required to use Bluetooth® wireless technology.



All Map Database cannot be copied without permission.

This is protected by U.S. copyright laws. All rights not expressly granted are reserved.

You may not otherwise reproduce, modify, and distribute the content without M&Soft, Inc's prior written consent.

Table of contents

PART 1 PRE-OVERVIEW

Introduction	1-2
Controller and functions	1-3
Basic operation and setting	1-6

PART 2 AUDIO SYSTEM

Operating the radio	2-2
Operating the CD Player	2-10
Operating external devices	2-22

PART 3 NAVIGATION SYSTEM

Limitations of the navigation system	3-2
Map Functions	3-5
Setting a destination	3-12
Operating after setting a destination	3-28
Route guidance	3-30
Setup and Information	3-36

PART 4 XM DATA

Entering XM Data mode	4-2
-----------------------------	-----

PART 5 VOICE COMMAND SYSTEM

Operating voice command	5-2
Setting up the voice command system	5-4
Voice command list	5-6

Table of contents

PART 6

Bluetooth® HANDS FREE

Before using the Bluetooth® Handsfree	6-2
Converting Bluetooth® Handsfree mode	6-2
Pairing and connecting a Bluetooth® phone	6-4
Bluetooth® Handsfree screen layout	6-9
Making a call	6-11
Answering a call	6-13
Operating menus during a call	6-14
Phone Book	6-16
Call History List	6-19
Phone Music	6-21
Bluetooth® settings	6-24
Important information	6-30

PART 7

REAR CAMERA

About Rear Detection Camera	7-2
-----------------------------------	-----

PART 8

APPENDIX

Troubleshooting guide	8-2
Map legend	8-5
INDEX	8-8

PART 1 PRE-OVERVIEW

PART 1 PRE-OVERVIEW

Introduction	1-2	How to operate menu by voice	
Important information about this		command	1-8
manual	1-2	Conditions for voice recognition	
Precaution for safe usage	1-2	system.....	1-8
		Giving voice command	1-9
Controller and functions	1-3	Sound setting	1-9
Control panel	1-3	FAD/BAL	1-9
Steering remote control	1-5	BASS/MID/TREB	1-10
		Auto volume control ON/OFF	1-10
		Touch screen beep ON/OFF	1-10
Basic operation and setting	1-6	Display setting	1-10
Turning the Power ON	1-6	Display mode	1-10
System Power ON	1-6	Brightness	1-10
Turning the Power OFF	1-6	Display OFF	1-10
Turning the Audio ON/OFF	1-6	Display ON	1-10
Adjusting audio volume.....	1-7	Setting Display OFF	1-11
How to operate the screen menu	1-7	Display Photo Frame	1-11
Operating typical screen menu	1-7		
Inputting letter by using screen			
keyboard.....	1-7		
Displaying the list	1-7		
Selecting an item in a list	1-8		
Sorting items from list	1-8		

PART 1 PRE-OVERVIEW

Introduction

Important information about this manual

This user manual contains instructions related to safety. Closely observe and comply with all of the safety instructions found within this manual.

WARNING !

Disobeying the warnings listed within this user's manual may cause fatal or serious injuries. Warnings indicate matters which may directly lead to accidents.

CAUTION!

Disobeying the cautions listed within this user manual may lead to accidents or cause injury. Cautions indicate matters which may lead to vehicle damage or malfunction.

INFORMATION

Information which the user must be aware or allows for more convenient use of the device.

Precaution for safe usage

WARNING !

- Do not operate the Audio Navigation system while driving.
- Do not disassemble, assemble, or modify the Audio Navigation system.
- Do not watch the screen for prolonged periods of time while driving.
- Set the volume to a level which allows the driver to be aware of external conditions.

CAUTION!

- Do not operate the Audio Navigation system for prolonged periods of time with the vehicle ignition in ACC. Such operations may lead to battery discharge.
- Be cautious not to spill water or introduce foreign objects into the device.
- Do not cause severe shock to the device. Direct pressure onto the front side of the monitor may cause damage to the LCD or touch panel.

- In case of product malfunction, please contact your place of purchase or service center.
- When cleaning the touch screen, make sure to turn off the device and use a dry and smooth cloth. Never use tough materials, chemical cloths, or solvents (alcohol, ammonia, benzene, thinners, etc.) as such materials may damage the device panel or cause color and quality deterioration.

Reference Page

This indicates the title and page that you should refer to.



This indicates a key on the control panel.



This indicates a key on the steering remote control.

Voice Command

This indicates an operation by voice command.

Controller and functions

Control panel



- 1** Power key & Volume control knob
- Push knob (over 0.8 second) : turns the power off.
 - Push knob (under 0.8 second) : each time the knob is pressed, the Audio is turned on and off.
 - Tune knob : the range of volume adjustment is between 0 ~ 35.

- 2** FM/AM
- Each press will change the bands in the following order: FM1 → FM2 → AM → FM1 ...

- 3** XM
- Each press will change the bands in the following order: XM1 → XM2 → XM3 → XM1 ...

4 MEDIA

Each press will change the bands in the following order: DISC(CD, MP3) → (USB or iPod) → (AUX) → (Phone Music) → DISC(CD, MP3)...

5 SEEK/TRACK Up/Down

- SHORT KEY(less than 0.8 second)
 - FM/AM Mode : automatically searches for the previous or next broadcast frequency and starts playing.
 - XM Mode : receives the previous or next channel.
 - CD Mode : plays the previous or next track.
 - MP3, USB Mode : Plays the previous or next file.
 - iPod Mode : plays the previous or next song.
- LONG KEY(over 0.8 second)
 - FM/AM Mode : quickly moves through the frequencies while the button is pressed. Once released, automatically searches for broadcasts which can be received.
 - XM Mode : quickly moves to the previous or next channel.
 - CD Mode : REW/FF the current playing track.

PART 1 PRE-OVERVIEW

- MP3, USB Mode : REW/FF the current playing file.
- iPod Mode : REW/FF the current playing song.

6 SETUP

Displays the Setup menu screen.

7 MAPVOICE

Displays the map screen for the current position.

8 ROUTE

Displays the Route menu screen.

9 DEST

Displays the displays setting screen.

10 TUNE

- FM/AM Mode : push the key to search for the desired frequency. Press the key to receive the selected frequency.
- XM Mode : push the key to search for the desired channel. After a brief moment, the selected channel will be displayed.

- CD Mode : push the key to search for the desired track. Press the key to play the selected track.
- MP3, USB Mode : push the key to search for the desired file. Press the key to play the selected file.
- iPod Mode : push the key to search for the desired song. Press the key to play the selected song.

11 ENTER

Completes the command.

12 PHONE

Displays the Bluetooth® handsfree screen.

13 DISC eject

Ejects the inserted disc.

14 DISP

DISP displays the displays setting screen.

15 DISC insert indicator LED

Displays whether a DISC has been inserted.

16 RESET

Resets the system - if software locks-up.

i INFORMATION

If pressing the power off knob for over 0.8 second and the system does not shut down, and carefully use and insert a straightened paper clip at the access hole shown next to the right DISC indicator LED to reset the software. The system power will shut-off and restart.

Steering remote control



1 MODE

Each time the Mode key is pressed, the mode changes in the following order: FM1 → FM2 → AM → XM1 → XM2 → XM3 → (DISC) → (USB or iPod) → (AUX) → (Phone Music) → FM1 ...

If an unsupported DISC is inserted, if there is no disc, or if an external device (e.g. iPod, USB memory stick, etc.) has not been connected, the mode will not be recognized and automatically switch to the next mode.

- Press this key for over 0.8 second to turn the Audio ON and OFF.
- Press this key when the Power is turned off to turn the power on.

2 MUTE

Turns the sound on and off.

When the MUTE is turned on, the MUTE icon will become displayed. When in the Navigation screen, the MUTE icon at the top of the screen will disappear after 3seconds.

3 Volume Up/Down

Increases or decreases the volume within a range between 0 ~ 35. Volume for navigation and voice guidance can be adjusted in the setup mode.

4 Seek Up/Down

• SHORT KEY(less than 0.8 second)

- FM/AM : receives the previous or next preset frequency.
- XM Mode : receives the previous or next preset channel.
- CD Mode : plays the previous or next track.
- MP3, USB Mode : plays the previous or next file.
- iPod Mode : plays the previous or next song.

• LONG KEY(Over 0.8 second)

- FM/AM Mode : quickly moves through the frequencies while the key is pressed. Once released, automatically searches for broadcasts which can be received.
- XM Mode : quickly moves to the previous or next channel.
- CD Mode : REW/FF the current playing track.
- MP3, USB Mode : REW/FF the current playing file.
- iPod Mode : REW/FF the current playing song.

5 Voice Recognition

Starts Voice Recognition.

6 CALL

Press this key to receive an incoming call. If pressed while in Audio/Navigation mode, the Bluetooth® handsfree screen will be displayed.

7 END


Press this key to reject an incoming call.

If pressed while on a call, then the call will be terminated.

PART 1 PRE-OVERVIEW

Basic operation and setting


Turning the Power ON

1. Turn the ignition key onto ACC or ON. If the system power had been on when the ignition was turned off, the system will turn back on automatically.
2. If the system power had been off when the ignition was turned off, the system will remain off. In this case, press the  key to turn on the system power.



System Power ON


INFORMATION

As system booting starts from the point the door lock is unlocked, the device may complete booting before the ACC is turned on or the  key is pressed. Consequently, the booting screen may not be displayed upon initially turning on the system power.




3. Once system booting is complete, the most recent operated mode will be displayed. For example, turning on the system will display FM1 radio mode if the last operated mode prior to turning off the system had been FM1 radio mode.


Turning the Power OFF

If the  key is pressed for over 0.8 second, a beep will sound and the system power will be turned off.

Turning the Audio ON/OFF




Press the  key for under 0.8 second with the system power on to turn the Audio on and off.

Voice Command

1. Press the  key on the steering remote control.
2. After the beep sound, say a command.
"Audio On"
"Audio Off"

INFORMATION

Conducting the following operations while the AUDIO is off will automatically turn on the Audio system.

- Pressing the Audio related keys ( ,  , ).
- Inserting a DISC or connecting an external device.

Adjusting audio volume

Turn the **VOL** knob in clockwise direction to increase the volume and counter-clockwise to decrease the volume.

i INFORMATION

- The range of volume adjustment is between 0 ~ 35.
- Adjustments to the volume cannot be made while the AUDIO is turned off.

How to operate the screen menu

Operating typical screen menu

- If a menu button on the screen is pressed, the corresponding function will begin operation.
- The same menu button may perform different functions depending on the length of time the button is pressed (under 0.8 seconds or over 0.8 second). For more information, refer to the specific function within this user manual.
- The current operated button will be highlighted upon display.

- Buttons which cannot be operated under the current conditions will be displayed in disabled state. Pressing a disabled button will not perform any operation.

Inputting letter by using screen keyboard



- ABC** : Displays the English alphabet keypad.
- AÇÈ** : Displays the French alphabet keypad. (if available)
- 0-9** : Displays the number and symbol keypad.

Delete : Deletes the previously inputted letter. Pressing for over 0.8 second will delete all content.

Done : The input is completed.

← : Restores to previous screen. The inputted text will not be saved.

Displaying the list



List : Even if input is not complete, the current matching items from the database will be displayed.

i INFORMATION

The number at the upper-right side of the screen displays the number of current matches.

PART 1 PRE-OVERVIEW

Selecting an item in a list



▲ ▼: Moves to the next page or previous page.

▶ ◀: The **▶** button will be displayed if the text is too long to be displayed in one button.

Press the **▶** button to move the cursor to the end of the text. Press the **◀** button to move the cursor to the front of the text.

Sorting items from list



Select the desired sorting method to reorganize the list in accordance to the selected method.

How to operate menu by voice command


Conditions for voice recognition system

Most of the functions within the Audio and Navigation system can be operated by voice. Please follow the instructions below for optimal voice recognition performance.



- Close all windows and the sunroof. The voice recognition can be improved when in a quiet environment.
- Press the voice recognition button and say the desired voice command after the sound of the beep.
- The microphone is positioned above the driver so that voice commands can be said while maintaining a proper posture.
- Pronounce the voice commands naturally and clearly as if in normal conversation.


Giving voice command




1. Press the  key on the steering remote control.




A voice command window will be displayed on the lower side of the screen followed by a "Command please" system voice comment.

2. Once the  icon changes into the  icon on the pop-up screen with a beep sound, say the desired voice command.

 [Voice command list], page 5-6.

 [Searching a destination by voice command], page 5-19.

INFORMATION





Press the  key shortly to input the desired voice command. The system voice instruction comment will immediately terminate. When the  icon changes into the  icon with a beep sound, it is possible to input voice commands.

Sound setting

Press the **Sound** button on the main screen of each Audio mode (FM/AM, XM, CD, MP3, USB, iPod) to display the Sound setting screen.



FAD/BAL

The position of the sound can be adjusted by using the up-down and left-right (, , , ) buttons on the left side of the screen.

Press the **Center** button to position the sound in the center of the vehicle.

PART 1 PRE-OVERVIEW

BASS/MID/TREB

The BASS/MID/TREB can be adjusted by using the left/right buttons (◀, ▶) of each control.

Auto volume control ON/OFF

Each time the **Auto volume control** button is pressed, the Auto volume control function is turned on or off.

i INFORMATION

The Auto Volume Control is a function which automatically adjusts the volume level in accordance to changes in vehicle speed.

Touch screen beep ON/OFF

Each time the **Touch screen beep** button is pressed, the beeping sound that follows each press on the screen will turn on or off.

Display setting

Press the **DISP** key on the control panel to display the Setup menu screen.



Display mode

Press the button for the desired display mode from **Automatic**, **Day**, and **Night** modes. The current selected mode is highlighted.

- **Automatic**

The display is automatically converted between Daylight and Night modes in accordance to the on/off state of the vehicle taillights.

- **Day**

The bright screen is always maintained regardless of the on/off state of the vehicle taillights.

- **Night**

The dark screen is always maintained regardless of the on/off state of the vehicle taillights.

Brightness

Use the left/right buttons (◀, ▶) for control to make adjustments.

Display OFF

Press the **Display Off** button.

Display ON

Press anywhere on the black screen. The screen prior to display setting will be displayed.

Setting Display Off

Display Photo Frame

1. Press the **Power Off Set** button in the DISPLAY setup screen.
2. Press the **Photo Frame** button in the <Setting Display Off> setup screen.



3. The registered image will be displayed once power is turned off.

i INFORMATION

For Photo Frame setup, the frame must be set in USB Image mode. (For details on setting the Photo Frame, refer to the USB IMAGE page.)

4. To delete an image registered as a frame, press the **Delete Image** button.

PART 2 AUDIO SYSTEM

PART 2 AUDIO SYSTEM

Operating the radio	2-2	Operating the CD Player	2-10	Selecting to MP3 music	2-19
FM/AM Radio	2-2	About CD Player	2-10	REW/FF MP3 file	2-20
Listening to the FM/AM radio	2-2	Precautions upon handling discs ...	2-10	Viewing detail information for	
FM/AM screen and functions	2-2	For safe and efficient operation	2-10	MP3 file	2-20
Selecting FM/AM broadcast		Supported disc formats	2-11	Setting Repeat function for	
frequency	2-3	Disc/Content format compatibility ...	2-12	MP3 file	2-20
Storing FM/AM preset	2-4	Inserting/Ejecting Disc	2-13	Setting Random function for	
Scanning FM/AM broadcast		CD	2-14	MP3 file	2-20
frequency	2-5	Listening to CD music	2-14	Scanning MP3 file	2-21
XM radio	2-6	CD screen and functions	2-14		
Listening to the XM radio	2-6	Selecting the CD track	2-14		
XM screen and functions	2-6	REW/FF CD track	2-15		
Switching the XM mode		Setting Repeat function for			
(Channel / Category)	2-7	CD music	2-15		
Selecting XM broadcast channel	2-7	Setting Random function for			
Storing XM preset	2-9	CD music	2-15		
Scanning XM broadcast channel	2-9	Scanning CD track	2-16		
		MP3	2-17		
		MP3 disc related information and			
		precaution	2-17		
		Listening to MP3 music	2-18		
		MP3 screen and functions	2-18		

PART 2 AUDIO SYSTEM

Operating external devices 2-22

iPod® 2-22

Connecting iPod device 2-22

Listening to iPod music 2-22

iPod screen and functions 2-23

Selecting an iPod song 2-23

REW/FF iPod song 2-24

Setting Repeat function for

iPod song 2-25

Setting Random function for

iPod song 2-25

USB MP3 2-26

USB MP3 related information and
precaution 2-26

Precautions upon handling USB ... 2-26

Connecting the USB 2-28

Listening to USB music 2-28

USB IMAGE Mode 2-29

Starting USB IMAGE Mode 2-29

USB IMAGE mode menu screen
configuration 2-29

Operating USB IMAGE Mode 2-30

AUX 2-31

Connecting AUX 2-31

Playing AUX 2-31

AUX screen 2-31


PART 2 AUDIO SYSTEM

Operating the radio


FM/AM Radio

Listening to the FM/AM radio




1. Press the **FM/AM** key on the control panel.
The FM/AM radio band of the most recent listened station will be displayed.
2. Press the **FM/AM** key to change the desired radio band. Each press will change the bands in the following order: FM1 → FM2 → AM → FM1 ...
3. Select the desired broadcast frequency.
 [Selecting FM/AM broadcast frequency], page 2-3.


Voice Command

1. Press the  key on the steering remote control.
2. After the beep sound, say a command.
" Radio"
"(Radio) AM"
"(Radio) FM"
"(Radio) FM <1 or 2>"
"AM Frequency <530 to 1710>"
"FM Frequency <87.5 to 107.9>"
"AM Preset <1 to 6>"
"FM <1 or 2> Preset <1 to 6>"

FM/AM screen and functions

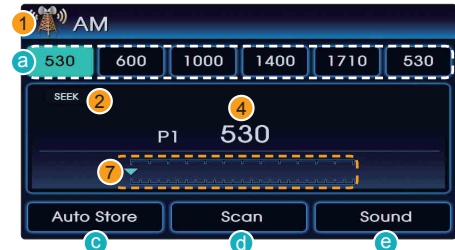

- 1 Mode display : displays the FM1/FM2/ AM modes.
- 2 SEEK/SCAN/PRESET SCAN/AUTO PRESET indicator : if SEEK/SCAN/PRESET SCAN / AUTO PRESET is operating, the switch is displayed.




- 3 Program Service name : displays the program service name if data is being broadcast.
 - 4 Frequency : displays the current playing frequency.
 - 5 Program type name : displays the program type name if data is being broadcast.
 - 6 Radio Text : displays the radio text information if data is being broadcast.
 - 7 Frequency Bar : displays the position of the current frequency within the total frequency range.
- a **Preset** buttons : the desired frequency can be preset and selected.
 [Storing FM/AM preset], page 2-4.
 - b **R-Text** ON/OFF button : turns the Radio Text information on and off.

INFORMATION

If the **R-Text** is on OFF state, text will not be displayed even if there is text being transmitted from the broadcast station.

If the **R-Text** is on ON state, the frequency bar will not be displayed. Even if the **R-Text** is on ON state, text may not be displayed if

text is not being received from the broadcast station.

- c **Auto Store** button : searches the 6 frequencies with the most superior reception and automatically stores as preset buttons in corresponding order.
 [Storing FM/AM preset], page 2-4.
- d **Scan** button : scans all frequencies or just the preset frequencies for 5 seconds each.
 [Scanning FM/AM broadcast frequency], page 2-5.
- e **Sound** button : adjusts the FAD/BAL, BASS/MID/TREB controls.
 [Sound setting], page 1-10.




Selecting FM/AM broadcast frequency

There are 3 ways to select the broadcast frequency - (a) selecting through preset, (b) selecting through SEEK, (c) selecting through manual search.


(a) Selecting a frequency through preset

Press the preset button of the desired broadcast frequency.

INFORMATION


- Press the  or  key on the steering remote control shortly. The preset frequencies of the current band will be selected in order.
- There are 6 preset frequencies each for FM1, FM2, and AM modes.
 [Storing FM/AM preset], page 2-4.

Voice Command

1. Press the  key on the steering remote control.
2. After the beep sound, say a command.
 - "Preset <1 to 6>"
 - "Preset Up"
 - "Preset Down"



PART 2 AUDIO SYSTEM

(b) Selecting a Broadcast frequency through SEEK


Press the  key on the control panel for less than 0.8 second.

Once the SEEK function is operating (SEEK indicator blinking), the next or previous broadcast frequency with superior reception will be searched automatically.


INFORMATION

- Press the  key on the control panel or steering remote control for more than 0.8 second to quickly move to the nearest desired frequency. Once the button is released, the next frequency with superior reception will be searched automatically.
- If the SEEK function is operating, pressing the  key on the control panel again will terminate SEEK operation and select the current frequency.

Voice Command

1. Press the  key on the steering remote control.
2. After the beep sound, say a command.
"Seek Up"
"Seek Down"

(c) Selecting a broadcast frequency through manual search


Press the  key to search for desired frequency.

Each click on the  key will increase or decrease the frequency by 1 step (FM: 0.2 MHz, AM: 10 kHz).

Storing FM/AM preset

There are 2 ways to store preset frequencies - (a) storing manually and (b) auto store.

(a) Storing manually


1. Select the desired frequency.
 [Selecting FM/AM broadcast frequency],
page 2-3.

2. Press the preset button to store for over 0.8 second. The frequency will become stored along with a beep sound.


INFORMATION

Six preset frequencies each for FM1/ FM2/AM modes can be stored using the above instructions.


(b) Auto store

After selecting the desired band, press the  button. The 6 frequencies with the most superior reception will be stored as preset buttons in corresponding order.


INFORMATION

If the  button is pressed again while operating Auto Store, then the Auto Store operation will be terminated and the previously played frequency will be restored.


Voice Command

1. Press the  key on the steering remote control.
2. After the beep sound, say a command.
"Auto preset"



Scanning FM/AM broadcast frequency

1. Press the  button.
 - SCAN (less than 0.8 second) : scans all frequencies and plays only frequencies with superior reception for 5 seconds each.

Voice Command

1. Press the  key on the steering remote control.
 2. After the beep sound, say a command.
"Scan"
- PRESET SCAN (over 0.8 second): scans the 6 frequencies stored as delete this part in the current band for 5 seconds each.

Voice Command

1. Press the  key on the steering remote control.
 2. After the beep sound, say a command.
"Preset Scan"
2. Press the  button again to continue listening to a frequency. The scan will be terminated and the current frequency will continue to be played.

INFORMATION

When scanning has completed an entire revolution, the scan function will terminate automatically and the previous played frequency will be restored.

PART 2 AUDIO SYSTEM

XM radio


Listening to the XM radio



1. Press the **XM** key on the control panel. The XM radio band screen of the most recent listened station will be displayed.
2. Press the **XM** key to change the desired radio band. Each press will change the bands in the following order: XM1 → XM2 → XM3 → XM1 ...
3. Select the desired broadcast channel.
🔗 [Selecting XM broadcast channel], page 2-7.

2-6 AUDIO SYSTEM

Voice Command

1. Press the  key on the steering remote control.
2. After the beep sound, say a command.
"XM"
"XM <1 or 2 or 3>"
"XM Channel <0 to 255>"
"XM <1 or 2 or 3> Preset <1 to 6>"


XM screen and functions





- 1 Mode display : displays the XM1/XM2/ XM3 modes.
- 2 SCAN/PRESET SCAN indicator : if SCAN/ PRESET SCAN is operating, the switch is displayed.


- 3 Channel number : displays the current playing channel.
- 4 Channel mode indicator : displays the channel mode in orange.
- 5 Category mode indicator : displays the category mode in orange.
- 6 Channel name : displays the channel name.
- 7 NAME : displays the artist and other related information.
- 8 Title name : displays the title name.
- 9 Category name : displays the category name.

- a **Preset** buttons : the desired channel can be preset and selected. 🔗 [Storing XM preset], page 2-7.
- b **Mode** buttons : switches between channel mode and category mode. 🔗 [Switching the XM mode], page 2-7.
- c **List** button : displays the channel or category list. 🔗 [Selecting XM broadcast channel], page 2-7.
- d **Search** button : selects the channel by directly inputting the channel number.

 [Selecting XM broadcast channel], page 2-7.

 **Scan** button : scans all frequencies or just the preset channels for 5 seconds each.

 [Scanning XM broadcast channel], page 2-9.

 **Sound** button : adjusts the FAD/BAL, BASS/MID/TREB controls.

 [Sound setting], page 1-10.

Switching the XM mode (Channel / Category)

Each time the **Mode** button is pressed, the mode will switch between channel mode and category mode.

Use the tune knob to change categories and press the tune knob change to selected category.



Selecting XM broadcast channel


There are 5 ways to select a broadcast channel - (a) selecting through preset, (b) selecting with channel Up/Down, (c) Selecting a channel through manual search, (d) selecting through channel/ category list, (e) selecting by directly inputting the channel number.

(a) Selecting a channel through preset


Press the preset button of the desired channel.

INFORMATION


- Press the  or  key on the steering remote control for less than 0.8 second. The preset channels of the current band will be selected in order.
- There are 6 preset channels each for XM1, XM2, and XM3.

 [Storing XM preset], page 2-9.

Voice Command


1. Press the  key on the steering remote control.
2. After the beep sound, say a command.
"Preset <1 to 6>"
"Preset Up"
"Preset Down"

(b) Selecting with Channel Up/Down

Press the  key on the control panel for less than 0.8 second.


The previous or next channel will be selected.

INFORMATION


- If in Channel mode, the channel is selected from all channels. If in Category mode, the first channel of each category is selected.
- Press the  key on the control panel or steering remote control for more than 0.8 second to quickly move to the nearest desired channel. Once the button is released, the current channel will be selected.

PART 2 AUDIO SYSTEM

Voice Command

1. Press the  key on the steering remote control.
2. After the beep sound, say a command.
"Channel Up"
"Channel Down"


(c) Selecting a channel through manual search

Press the  key to display the previous or next channel information. After a brief moment, the selected channel will be displayed.

INFORMATION

If in channel mode, the channel is selected from all channels. If in category mode, the first channel of each category is selected. (Category search)

(d) Selecting channel through channel/category list

1. Press the  button.
 - If in category mode, the all category list screen will be displayed.
Select the desired category button to display the channel list screen for the corresponding category.




- If in channel mode, the all channels list screen will be displayed.




2. Select the desired channel button. The previous screen will be restored and the selected channel will begin playing.

(e) Selecting channel by directly inputting the channel number

1. Press the  button. The channel input screen will be displayed.




2. Input desired channel number, and press the  button.

The previous screen will be restored and the selected channel will begin playing.


INFORMATION

To prevent inputting a channel which exceeds the channel range, numbers which cannot be inputted are set to disabled state.

Voice Command

1. Press the  key on the steering remote control.
2. After the beep sound, say a command.
"Channel<0 to 255>"


Storing XM preset

1. Select the desired channel.  [Selecting XM broadcast channel], page 2-7.
2. Press the preset button for over 0.8 second. The frequency will be saved along with beep sound.


INFORMATION

Six preset frequencies each for XM1/ XM2/ XM3 modes can be stored using the above instructions.


Scanning XM broadcast channel


1. Press the  button.
 - SCAN (under 0.8 second): scans all channels for 5 seconds each if in channel mode. If in category mode, scans all channels within the current category for 5 seconds each.

Voice Command

1. Press the  key on the steering remote control.
2. After the beep sound, say a command.
"Scan"
 - PRESET SCAN (over 0.8 second): scans the 6 preset channels within the current band for 5 seconds each.

Voice Command

1. Press the  key on the steering remote control.
2. After the beep sound, say a command.
"Preset Scan"

1. Press the  button again to continue playing the channel. The scan will be terminated and the current channel will continue to be played.

INFORMATION

- When scanning has completed an entire revolution, the scan function is automatically terminated and the previous played channel will be restored.
- Channel 0 is the radio ID and contains information required for XM Activation.

PART 2 AUDIO SYSTEM

Operating the CD Player

About CD Player

Precautions upon handling discs

- After using a disc, keep it in the original case to prevent it from becoming scratched, which may cause the CD to make popping sounds.
- Do not use heart-shaped discs, octagon-shaped discs, or any other abnormally shaped disc. Such discs may be the cause of malfunctions.
- Do not clean discs with chemical solutions such as record sprays, antistatic sprays, anti-static liquids, benzene, or thinners. Such materials may cause the surface of DISC to be unrecoverable.
- Do not expose the disc to direct sunlight for prolonged periods of time. Such exposure may lead to disc deformation.
- Dust, scratch, and other substances may cause popping sound while playing as well as sound deterioration.
- Never place paper on either side of the disc or write on disc surfaces. Sharp writing utensils and inks used in felt-tip pens may cause damage to disc surfaces
- Clean fingerprints and dust off the signal surface (coated side) of the disc with a soft cloth.
Only soft cloths should be used as there are no grooves for dust to get in as is the case with LPs.
- Copy-protected CDs such as S-type CDs may not function in the device.
- DATA CDs are not supported by the device. (However, such discs may operate abnormally.)
- Be cautious not to introduce foreign substances into the disc insert slot. Foreign substances may cause damage to the interior of the device.
- The device may fail to operate properly in extremely hot or cold temperatures. Discontinue the use of the device unless normal temperature is maintained. (The operational temperature range is: -10°C ~ 65°C).
- Steam can be condensed on the fiberoptic lens due to rain, wet conditions, or upon operating the heating system.
- Skipping may occur to the audio when driving on bumpy roads for prolonged periods of time or upon severe shock to the vehicle.
- Do not use chemical solvent to clean the device. Such solvents may cause damage to the surfaces of the device. Always use a clean and dry cloth.

For safe and efficient operation

- Do not disassemble the CD Player for repair purposes. Contact your place of purchase in the case of malfunction. (Complete service assistance will not be provided if the user disassembles the device.)
- Do not use water to clean the device. Exposure to water may cause damage to the device.

⚠ WARNING !

Always pay full attention to driving.
Avoid operating your system in such a way that you are distracted from driving your vehicle.

Supported disc formats

- The disc types supported by this device are as shown below.

Disc Size
3-inch (7.6 cm)
5-inch (12.7cm)

Disc Type	Disc Media	Disc Format
CD	CD	CD-DA
	CD-R	MP3
	CD-RW	WMA
	Multisession-CD	DTS-CD
		CD-ROM
		CD-G
		CD-EXTRA
	CD-TEXT	

Disc format	Audio format
CD	LPCM
MP3	MPEG1, Layer3
	MPEG2, Layer3
	MPEG2.5
WMA	Ver9

- CD-R or CD-RW DISC burned with a bulk CD without quality guarantees may not be recognized by the device.
- Inserting an abnormal disc may result in faulty operation or recognition.

PART 2 AUDIO SYSTEM

Disc/Content format compatibility

- Ordinary disc compatibility
- This device has been designed/ manufactured to be compatible with software bearing the following logo marks.



Audio-CD

CD-R

CD-RW

- CD-R/RW discs (Audio CD and MP3 CD) created with CD-writing devices or personal computers may not properly function in the device. This may be caused by damaged recording method, contamination by dirt and other foreign substance on the disc surfaces or play lens, and various other reasons.
- Special formats or special features regarding software
- CD-R/RW Compatibility.
- This device operates as a CD-ROM including CD-R and CD-RW DISC written in CD Audio or MP3 CD Format.

However, other contents may cause abnormal disc operation such as noise.

- The writing of CD-R and CD-RW discs with this device is not supported.
 - Although CD-R/RW discs burned as audio CDs which have not been finalized are not supported by the device, some information such as play time may be displayed.
 - PC-created DISC compatibility.
 - When recording a disc with a personal computer, even discs recorded in a "format compatible" with the formats described above may not operate on the device caused by software settings of the recording application. In such cases, contact the software developer.
 - Additional information regarding compatibility can be found on the CD-R/ RW software disc box.
- DVD-R/RW are not supported by the device.

- Compressed audio compatibility

This device plays audio files compressed by MPEG-1 audio stream layer 3(MP3) using 32, 44.1 and 48kHz fixed bit rates. Incompatible files are not supported.

- Variable bit rate files may operate, but the play time information may not be properly displayed.
 - Physical formats of CD : Model 1, Model 2 XA format 1.
 - This device only supports tracks with file extension of ".MP3" or ".WMA".
 - This device does not support multi-session discs.
 - This device supports a maximum of 256 folders and maximum 512 files.
- Folders and files which exceed this limit will not be supported.
- There are various bit rates which can be encoded onto a MP3 file.

This device has been designed to be compatible with various bit rates.

Audio which has been encoded at 128kbps will sound similar to CD audio sound quality.

Although this device supports low bit rate MP3 tracks, such tracks may only provide low quality sound.

- For stable operation, the use of files in 95kbps ~ 192kbps bit rate range and 44.1kHz SAMPLING frequency is recommended.

Inserting/Ejecting Disc

- Inserting a Disc

Insert the disc into the slot.

The disc will begin playing automatically after it has been inserted.

i INFORMATION

If the operation mode had been Audio mode before inserting the disc, the device will convert to the DISC mode screen and begin playing.

If the operation mode had been Navigation mode, then Navigation mode screen will remain and the disc play status will be displayed through the Audio bar.

- Ejecting a Disc

Press the  key.

The disc will immediately be stopped and ejected.

i INFORMATION

- If the operation mode had been in Audio mode before ejecting the disc, the device will be converted back to Audio mode.

If the operation mode had been in Navigation mode, then Navigation mode screen will remain.

- If the disc is straddled on the slot without removing for approximately 10 seconds, the disc will be re-inserted automatically into the disc player.

In such a case, the disc will not begin playing automatically.

PART 2 AUDIO SYSTEM


CD

Listening to CD music




1. Insert the CD or press the **MEDIA** key on the control panel if the CD is already inserted.
2. Select the desired track. [Selecting the CD track], page 2-15.

Voice Command

1. Press the  key on the steering remote control.
2. After the beep sound, say a command.
"DISC"
"CD"
"CD Track <1 to 665>"

CD screen and functions

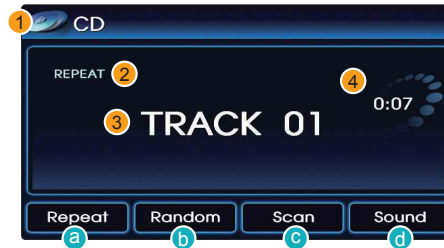

- 1 Mode display : displays that the current mode is CD mode.
 - 2 REPEAT/RANDOM/SCAN indicator : if REPEAT/RANDOM/SCAN is operating, the switch is displayed.
 - 3 Track number : displays the track number.
 - 4 Play Time : displays the play time.
- a** **Repeat** buttons : repeat the current playing track.
[Setting Repeat function for CD music], page 2-15.
- b** **Random** button : plays the tracks on the disc in random order.

[Setting Random function for CD music], page 2-16.

c **Scan** button : scans all tracks on the disc for 10 seconds each.

[Scanning CD track], page 2-16.


d **Sound** button : adjusts the FAD/BAL, BAS, MID, TRE controls.

[Sound setting], page 1-10.


Selecting the CD track

There are 2 ways to select a CD Track - (a) selecting through Track Up/Down, (b) selecting through searching Track.


(a) Selecting through Track Up / Down

Press the  key on the control panel or steering remote control for less than 0.8 second. The next or previous track will begin playing.



INFORMATION


If the  key on the control panel or steering remote control is pressed shortly while the track has played for more than 3 seconds, the start of the current track will begin playing. If the track has been playing for less than 2 seconds, the start of the previous track will begin playing.

Voice Command


1. Press the  key on the steering remote control.
2. After the beep sound, say a command.
"Next Track"
"Previous Track"

(b) Selecting track through search

1. Press the  key to search for desired to display track. Each click on the  key will display the information of the next or previous track. The current playing track will continue to be played.


2. Press the  key at the desired track. The searched track will begin playing.

REW/FF CD track

Press and hold the  key on the control panel or steering remote control for over 0.8 second.


The track will play 20 times faster while holding the button and return to normal play when the button is released.

Setting Repeat function for CD music


Press the  button. Each press will change the function in the following order:
REPEAT → REPEAT OFF → REPEAT

- REPEAT : repeats the current playing track.

Voice Command


1. Press the  key on the steering remote control.
2. After the beep sound, say a command.
"Repeat Track"
Say "Normal Play" in order to terminate the set Repeat.

Setting Random function for CD music

Press the  button. Each press will change the function in the following order:
RANDOM → RANDOM OFF → RANDOM...

- RANDOM : plays all tracks in the disc in random order.

Voice Command

1. Press the  key on the steering remote control.
2. After the beep sound, say a command.
"Random"
Say "Normal Play" in order to terminate the set Random function.


PART 2 AUDIO SYSTEM

Scanning CD track

1. Press the **Scan** button. Each press will change the function in the following order:
SCAN → SCAN OFF → SCAN...

 - SCAN : scans all tracks in the disc for 10 seconds each.

Voice Command

1. Press the  key on the steering remote control.
2. After the beep sound, say a command.
"Scan"
Say "Normal Play" in order to terminate the set Scan function.
2. Press the **Scan** button again to continue listening to the track. The scan will be terminated and the current track will continue to be played.

INFORMATION

When scanning has completed an entire revolution, the scan function is automatically terminated and the previous played track will be restored.

MP3

MP3 disc related information and precaution

- Information

- The MP3 file standards supported by the device are as follows.
- Acceptable standard: MPEG1 AUDIO LAYER 3
- Acceptable sampling frequency: 32, 44.1, 48 (KHz)
- Acceptable bit rate: 32, 40, 48, 56, 64, 80, 96, 112, 128, 160, 192, 224, 256, 320 (Kbps)
- Recommended bit rate & reference sampling frequency: 96, 128, 192 Kbps fixed bit rate / 44.1KHz
- ID3 tag
This device supports ID3v1.0, ID3v1.1, ID3v2.2, ID3v2.3, and ID3v2.4 ID3 tags.
- Supported media
The MP3 media supported by the device are CD-ROM and USB.

- Supported media formats
This device supports ISO9660 LEVEL1 and LEVEL2. Detailed specification is as below.
- Maximum directory layers: 8 layers
- Maximum folder length: 64 Bytes, file name length: 64 Bytes
- Supported characters for folder name/ file name: Alphanumeric characters, Korean standard character set 2350 characters, Simplified Chinese 4888 characters
- Maximum number of folders which can be stored onto one disc: 256 folders (including ROOT directory)
- Maximum number of files which can be stored onto one disc: 512 files
- Precautions upon burning MP3 files
- The use of ISO 9660 LEVEL 2 JOLIET format is recommended when burning MP3 files. Burning in other formats may abnormally display the file names.
- It is possible to display up to 32 characters for file and folder names in case of UNICODE, and up to 64 characters in case of ASCII. Although the full length of the file name can be displayed by using the scroll function, the full


length of folder names may not be displayed as the scroll function does not operate when displaying folder names.

- Precaution

Please use a MP3 bit rate which is less than 128 kbps. The sound quality cannot be guaranteed for MP3s exceeding 128kbps.

PART 2 AUDIO SYSTEM

Listening to MP3 music

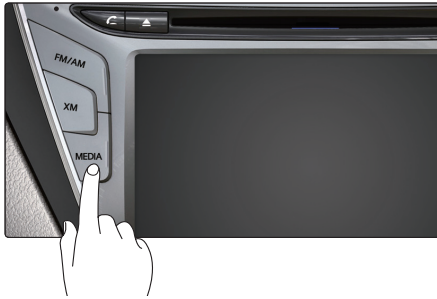


1. Insert the MP3 disc or press the **MEDIA** key on the control panel if the MP3 disc is already inserted.
2. Select the desired file. [Selecting the MP3 file], page 2-19.

Voice Command

1. Press the key on the steering remote control.
2. After the beep sound, say a command.
"DISC"
"CD"
"MP3"

MP3 screen and functions

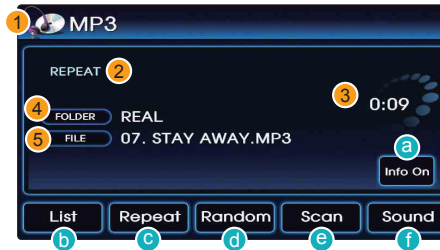


- 1 Mode display : displays that the current mode is MP3 disc mode. (MP3 files on DVD discs are not supported.)
- 2 REPEAT/RANDOM/SCAN indicator : if REPEAT/RANDOM/SCAN is operating, the switch is displayed.
- 3 Play Time : displays the play time.
- 4 Folder name : displays the folder name.
- 5 File name : displays the file name.

- a **Info On/Off** button : displays or hides the detailed file information for the current playing file.
 [Viewing detail information for MP3 file], page 2-20.
- b **List** button : displays the MP3 folders and file lists for the disc.
 [Selecting the MP3 file], page 2-19.
- c **Repeat** button : repeats the current playing folder or file.
 [Setting repeat function for MP3 file], page 2-20.
- d **Random** button : plays all files on the disc or folder in random order.
 [Setting random function for MP3 file], page 2-20.
- f **Scan** button : scans all files on the disc or folder for 10 seconds each.


Selecting to MP3 music

There are 3 ways to select an MP3 file - (a) selecting through file up/down, (b) selecting through searching files, (c) selecting through MP3 list.


(a) Selecting through File Up / Down

Press the  key on the control panel or steering remote control for less than 0.8second. The next or previous file will begin playing.

INFORMATION

If the  key on the control panel or steering remote control is pressed shortly while the song has played for more than 3 seconds, the start of the current song will begin playing. If the song has been playing for less than 2 seconds, the start of the previous song will begin playing.



Voice Command

1. Press the  key on the steering remote control.

2. After the beep sound, say a command.


"Next File"
"Previous File"
"Next Folder"
"Previous Folder"

(b) Selecting through search


1. Press the  key to search for desired to display file. Each click on the  key will display the information of the next or previous file. The current playing file will continue to be played.

INFORMATION

If the operation of the Tune knob is too rapid, there may be a delay in displaying the file information.

2. Press the  key at the desired file.
The searched file will begin playing.

(c) Selecting through MP3 List

1. Press the  button. The file list of the folder for the current playing file will be displayed.

INFORMATION


If many songs and folders are recorded onto a DISC, file loading time may be longer and cause the play list to be improperly displayed or song search through TUNE operation to operate improperly. In such cases, wait until file loading is complete and try again.



2. Press the desired menu to return to the main screen and play the selected file.


PART 2 AUDIO SYSTEM

REW/FF MP3 file

Press and hold the  key on the control panel or steering remote control for over 0.8 second.

The file will play 20 times faster while holding the button and return to normal play when the button is released.

Viewing detail information for MP3 file

1. Press the  button. The detailed information (Title, Artist, Album, Genre) for the current playing MP3 will be displayed.



2. Press the  button. The detailed information will be turned off.

CAUTION!

- If the ID3 TAG info is not included in the MP3 file, the artist/song title/genre information may not be displayed.
- ID3 TAG : Standard format being used to add various information to the MP3 file, such as song title, copyrighter, music channel, etc.


Setting Repeat function for MP3 file

Press the  button.

Each press will change the function in the following order: Repeat → Folder Repeat → Repeat Off → Repeat ...

- Repeat : repeats the current playing file.
- Folder Repeat : repeats the files in the current folder.

Voice Command

1. Press the  key on the steering remote control.
2. After the beep sound, say a command.
"Repeat File"
"Repeat Folder"
Say "Normal Play" in order to terminate the set Repeat function.


Setting Random function for MP3 file

Press the  button.

Each press changes the setting as follows : Random → Folder Random → Random Off → Random ...

- Folder Random : plays the files in the current folder in random order.
- Random : plays all files in the disc in random order.

Voice Command


1. Press the  key on the steering remote control.
2. After the beep sound, say a command.
"Random"
"Random Folder"
Say "Normal Play" in order to terminate the set Random function.

Scanning MP3 file

1. Press the **Scan** button.
Each press will change the function in the following order : Scan → Folder Scan → Scan Off → Scan ...
 - Folder Scan : plays all files in the current folder for 10 seconds each.
 - Scan: scans all files in the disc for 10 seconds each.



Voice Command

1. Press the  key on the steering remote control.
 2. After the beep sound, say a command.
"Scan"
"Folder Scan"
Say "Normal Play" in order to terminate the set Scan function.
2. Press the **Scan** button again to continue listening to the file. The scan will be terminated and the current file will continue to be played.

INFORMATION

When scanning has completed an entire revolution, the scan function is automatically terminated and the previously played file will be restored.

PART 2 AUDIO SYSTEM

Operating external devices

iPod®


iPod® is a registered trademark of Apple Inc.

Connecting iPod devices

Connect the iPod device as shown in the picture.

The Hyundai iPod Power cable is needed in order to operate iPod with the audio buttons on the audio system. The USB cable provided by Apple may cause malfunction and should not be used for Hyundai vehicles.

The Hyundai iPod Power cable maybe purchased through your Hyundai dealership.

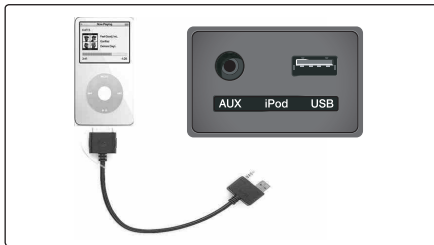

- Unsupported iPod devices : iPod generations before iPod 3G, iPod Shuffle, and iPad.

⚠ CAUTION!

Some functions may not operate properly depending on the firmware version in some iPod or iPhone devices.

i INFORMATION

In order to prevent such malfunction, check the following before connecting your iPod or iPhone device with the Hyundai iPod Cable.

- If the battery has been completely discharged, charge the device for at least 10 minutes before connecting.
- Turn on the device before connecting.
- If the device is set to lock, release the lock before connecting.
- For iPhones, audio will not play if the audio system and BT are paired. Disconnect the pairing before connecting.

When there are no songs in the iPod or iPhone or if there is no response from the device after connecting with the Hyundai Cable, a “No Media Connected” pop-up message will be displayed for 5 seconds and the previous mode will automatically be restored. In such cases, disconnect the iPod or iPhone and try connecting again.


If the message continues even after reconnecting the iPod, check to see if there are any problems with the iPod device.

⚠ CAUTION!

If a playing iPod is connected to the audio system, a high-pitched tone may occur for approximately 1-2 seconds.

Please turn the iPod device to pause/stop prior to connecting it to the vehicle.

Listening to iPod music

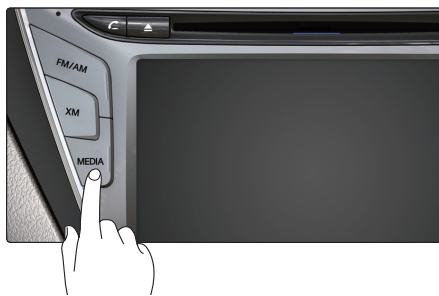

1. Connect the iPod or press the **MEDIA** key on the control panel if the iPod is already connected.


i INFORMATION

Even if the iPod is connected, message may be displayed if an error has occurred. In such a case, reconnect the iPod.

2. Select the desired song.

 [Selecting an iPod song], page 2-23.

Voice Command

1. Press the  key on the steering remote control.
2. After the beep sound, say a command.
"iPod"

iPod screen and functions



- 1 Mode display : displays that the current mode is iPod mode.
- 2 REPEAT/RANDOM indicator : if REPEAT/RANDOM is operating, the switch is displayed.
- 3 Title name : displays the title name of the playing file.
- 4 Play Time : displays the play time.
- 5 Artist name : displays the artist name of


the playing file.

- 6 Album name : displays the album name of the playing file.


a **Menu** button : converts to the search menu screen.

 [Selecting an iPod song], page 2-23.

b **Repeat** buttons : repeats the current playing song.

 [Setting repeat function for iPod song], page 2-25.

c **Random** button : plays all songs in the current playing list in random order or randomly in album unit.

 [Setting random function for iPod song], page 2-25.

d **Sound** button : adjusts the FAD/BAL, BASS/MID/TREB controls.


 [Sound setting], page 1-10.

Selecting an iPod song


There are 3 ways to select songs from the iPod device - (a) selecting song through Up/Down, (b) selecting song through sequential search, (c) selecting song through menu.

PART 2 AUDIO SYSTEM


(a) Selecting song through Up / Down

Press the  key on the for less than 0.8 second. The next or previous song will begin playing.



INFORMATION

If the  key on the control panel or steering remote control is pressed shortly while the track has played for more than 3 seconds, the start of the current song will begin playing. If the track has been playing for less than 2 seconds, the start of the previous song will begin playing.

Voice Command


1. Press the  key on the steering remote control.
2. After the beep sound, say a command.
"Next Song"
"Previous Song"

(b) Selecting song through search


1. Press the  key to search for desired to display file. Operate the  key dial to display the previous or

next channel information. After a brief moment, the selected channel will be displayed.

INFORMATION

If the operation of the  key is too rapid, there may be a delay in displaying the song information.

(c) Selecting song through Menu

1. Press the  button. The iPod menu screen will be displayed.



2. Press the button for the desired search method.



INFORMATION


If the search mode is accessed while playing a song, the most recent searched step will be displayed. The search steps upon initial connection are listed below.




3. Press the desired song button to return to the main screen and play the selected song.

	1 Step	2 Step	3 Step	4 Step
Playlist	Playlist	Song		
Genre	Genre	Artist	Album	Song
Artist	Artist	Album	Song	
Composer	composer	Album	Song	
Album	Album	Song		
Audiobooks	Song			
Songs	Song			
Podcasts	Program	Episode		

REW/FF iPod song


Press and hold the  key on the control panel or steering remote control for over 0.8 second. The song will be play faster while holding the button and return to normal play when the button is released.

Setting Repeat function for iPod song


Press the  button. Each press will change the function in the following order :
Repeat → Repeat Off → Repeat ...

- Repeat : repeats the current playing song.

Voice Command

1. Press the  key on the steering remote control.
2. After the beep sound, say a command.
"Repeat Song"
Say "Normal Play" in order to terminate the set Repeat function.

Setting Random function for iPod song

Press the  button. Each press will change the function in the following order :
Random → Album Random → Random Off → Random ...


- Album Random : plays the songs in the current play list randomly in album units. However, songs within the same album will be played sequentially.

e.g.) Album1 (Music1→Music2→Music3→...→Music10)→Album5 (Music→Music2)→Album4 (Music1→Music2→Music3) ...

- Random : plays all files in the current play list (All Songs, certain albums, or user designated iPod Playlists) randomly regardless of album.

e.g.) Music1→Music9→Music5→Music13 ...

Voice Command

1. Press the  key on the steering remote control.
2. After the beep sound, say a command.
"Random"
"Random Album"
Say "Normal Play" in order to terminate the set Random.

PART 2 AUDIO SYSTEM

USB MP3

USB MP3 related information and precaution

- Information

- The MP3 file standards supported by the device are as follows.
- Acceptable standard: MPEG1 AUDIO LAYER 3
- Acceptable sampling frequency: 32, 44.1, 48 (kHz)
- Acceptable bit rate : 32, 40, 48, 56, 64, 80, 96, 112, 128, 160, 192, 224, 256, 320 (kbps)
- Recommended bit rate & reference sampling frequency: 96,128, 192 kbps fixed bit rate /44.1kHz

- ID3 tag

This device supports ID3v1.0, ID3v1.1, ID3v2.2, ID3v2.3, and ID3v2.4 ID3 tags.

- Supported media

The MP3 media supported by the device are CD-ROM and USB.

- Supported media formats

This device supports ISO9660 LEVEL1 and LEVEL2. Detailed specification is as below.

- Maximum directory layers: 20 layers
- Maximum length of folder name/file name: 250Bytes
- Supported characters for folder name/ file name: Alphanumeric characters, Korean standard character set 2350 characters, Simplified Chinese 4888 characters
- Maximum number of folders which can be stored onto one USB: 2000 folders (including ROOT directory)
- Maximum number of files which can be stored onto one USB: 6000 files
- Precautions upon formatting USB & downloading MP3 files
- The device only supports FAT type USB file system. The device will not play USB media content if the USB is NTFS type.

- Precaution

Please use an MP3 bit rate which is less than 192Kbps and a fixed bit rate.

The sound quality cannot be guaranteed for MP3s exceeding 192Kbps and operation of specific functions (limited to FF/REW functions) may be abnormal with variable bit rates.

Precautions upon handling USB

- When using the external USB device, make sure to keep the device disconnected. Connect the device only after turning on the vehicle ignition. The USB device may be damaged if the USB device already connected when the ignition is turned on. (USB device is not an electronic automotive component)
- The external USB device may not operate if the USB device already connected when vehicle ignition is turned on or off.
- The device will not operate when playing a format which is not MP3 or WMA file formats.

1. Only MP3 files with compression rates between 8Kbps~320Kbps are supported.

2. Only WMA files with compression rates between 8Kbps~320Kbps are supported.

- Be cautious of static electricity when connecting/disconnecting the external USB device.
- Encoded MP3 Players will not be recognized when connected as the external device.
- When connecting an external USB device, the device may not be properly recognize the USB when the USB is in some states.
- When formatting the external USB device, the device may not be properly recognize a Byte/Sector selection other than 512Byte or 2048Byte.
- The device will only recognize USB devices formatted in FAT 12/16/32.
- Some USB devices may not operate properly because of compatibility issues. Verify that the external device is supported by the device before starting use.

- Avoid contact between the USB connector with bodily parts and foreign substances.

- Repeatedly connecting/disconnecting the USB in a short period of time may cause damage to the device.

- When disconnecting the USB, an abnormal sound may occur occasionally.

- Abruptly disconnecting the external USB device while the USB is operating may cause the device to be damaged or function abnormally.

Make sure to disconnect the USB device only after the audio power is turned off or when the audio is operating in a different mode.

- The amount of time required to recognize the external USB device may differ depending on the type, size, or file formats stored on the USB. Such differences in the required time are not indications of malfunction. Please wait the period of time required to recognize the device.

- The device supports only USB devices used to play music files.

- Do not use the USB I/F to charge batteries or USB accessories which generate heat. Such acts may lead to deteriorated performance or damage to the device.

- The device may not recognize the USB device if separately purchased USB hubs and extension cables are being used. Connect the USB directly to the multimedia terminal of the vehicle.

- In the case of high capacity USB devices, there are instances where the logical drives are partitioned for user convenience. In this case, only the USB music in the top-level logical drive will be possible to play.


When using partitioned drives, save the songs desired to play on the device only in the top-level logical drive.

In addition, certain USB devices are configured with a separate drive used to install application programs and songs from such drives may not be possible to play for the reasons as described above.

PART 2 AUDIO SYSTEM


- The device may not support normal operation if MP3 Players, cellular phones, digital cameras, or other electronic devices (USB devices not recognized as portable disk drives) are connected to the device.
- The device may not support normal operation when using a USB memory type besides the Metal Cover Type USB Memory.
- The device may not support normal operation when using formats such as HDD Type, CF, or SD Memory.
- The device will not support files locked by DRM (Digital Rights Management).
- The device may not support normal operation if the proper connection with the USB memory fails due to vibrations caused by the vehicle. (i-stick type, etc.)
- Please avoid using USB memory products which can be used as key chains or cellular phone accessories as they could cause damage to the USB jack.

Please make certain only to use plug type connector products as shown below.

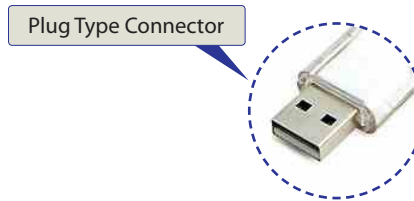



Connecting the USB

Connect the USB as shown in the picture.

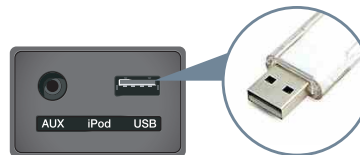


Listening to USB music

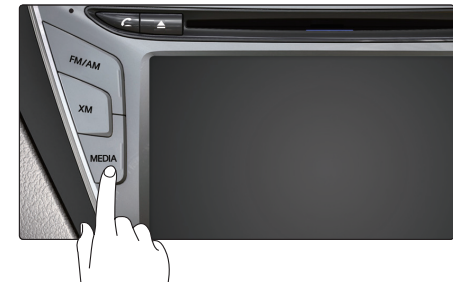

1. Connect a USB or press the **MEDIA** key on the control panel if the USB is already connected.
2. Select the desired file.
 [Selecting the MP3 file], page 2-19.

Voice Command

1. Press the  key on the steering remote control.
2. After the beep sound, say a command.
"USB"

INFORMATION

The USB screen and operation method is the same with MP3 mode. Please refer to the MP3 mode section for more information.

USB IMAGE Mode

Starting USB IMAGE Mode

1. The USB mode will automatically start when the USB is inserted. When in a different mode, repeatedly press the **MEDIA** key to convert to USB mode. (Each press will change in order of AUX→DISC→USB)



2. The image will be displayed on the screen.

i INFORMATION

Press the **Music** button on the bottom left side to enter either mode. (Supported only when compatible files exist within the USB)

USB IMAGE mode menu screen configuration





- 1 Mode display : display that the current mode is <USB Image> mode.
- 2 Folder name : displays the name of the folder where photo files are located.
- 3 File name : displays the file name of the current photo.
- 4 File index : displays the number of Image files within the USB (current file / all files)
- 5 Slide Show Interval : displays intervals of 5, 10, and 20 seconds.
- 6 ◀ button : displays the previous photo.
- 7 Slide Show View : displays photos in intervals of 5, 10, and 20 seconds.
- 8 ▶ button : displays the next photo.

- 9 USB music (MP3) Mode **Music** button : converts to <USB Music> mode.
- 10 **List** button : displays the <Image List> screen.
- 11 **Timer** button : allows changes to slide show interval.
- 12 **Save** button : upon turning off power, saves the current image as the frame screen image.
- 13 **Hide** button : hides the button display.


PART 2 AUDIO SYSTEM

Operating USB IMAGE Mode


(a) Moving to next IMAGE

1. Press the screen.
2. Within the Image screen, press the  or  button to flip through each file.

(b) Displaying USB IMAGE Slideshow Interval

1. Repeatedly press the  button at the bottom to change the slideshow interval (converts in time intervals of 5 seconds → 10 seconds → 20 seconds → 5 seconds).






(c) Registering Frame

1. Press the  button at the bottom of the <Image> screen. The currently displayed image will be registered as the frame.

INFORMATION

For details on setting up the frame, refer to the frame setup page within Screen setup.

Restrictions while driving – Image Play related buttons cannot be used while the vehicle is in motion.

There are five buttons such as  /  /  /  / .

AUX

Connecting AUX

Connect the external Audio player as shown in the picture.



i INFORMATION

Connect only by using AUX terminals.

Playing AUX



Connect an AUX or press the **MEDIA** key on the control panel if the AUX is already connected.

🗣️ Voice Command

1. Press the **🗣️** key on the steering remote control.
2. After the beep sound, say a command.
"Line In"

AUX screen



Audio AUX screen

PART 3 NAVIGATION SYSTEM

PART 3 NAVIGATION SYSTEM

Limitations of the navigation

system	3-2
GPS signal reception state	3-2
Vehicle position display	3-3
Route Guidance	3-4
Route Re-calculation	3-4
Starting navigation system	3-5

Map Functions

3-5	
Current position map screen (without route)	3-5
Switching map mode (North Up / Heading Up)	3-6
Viewing GPS signal state	3-7
Changing the map scale	3-8
Displaying / Hiding POI icons on the map	3-9
Displaying/Hiding Q.POI icons	3-9
Displaying / Hiding icons other than Q.POI icons	3-9
Making a call to POI	3-10
Scrolling map	3-11

Setting a destination

3-12	
Destination menu screen and functions	3-12
Searching a Destination	3-13
Searching an Address	3-13
Searching a Previous Destination	3-17
Searching an Intersection	3-17
Searching a POI	3-20
Searching from Address book	3-24
Searching for Emergency facilities ...	3-25
Searching your Home	3-25
Searching favorite places	3-26
Searching from MAP	3-26
Searching POI by local POI list	3-26
Operating after searching a destination	3-27
Changing destination position	3-27
Setting as Destination / waypoint	3-27
Adding to address book	3-27

Operating after setting a destination ...

3-28	
Route guidance screen	3-28
Selecting other route	3-29

Route guidance.....

3-30	
Route menu screen and functions.....	3-30
Finishing route guidance (Delete Destination)	3-30
Route overview (View Entire Route) ...	3-31
Changing Route option	3-32
Editing waypoints	3-32
Deleting waypoints	3-34
Re-ordering waypoints	3-34
Setting detour distance	3-35
Setting avoid streets on route	3-35

Setup and Information

3-36	
Setup menu screen and functions.....	3-36
Main setting	3-37
Setting keyboard for inputting letter	3-37
Setting voice command feedback ON/OFF	3-37
Setting Language	3-37
Initializing system	3-37
Navigation setting	3-38
Setting units (mile/ km)	3-38

PART 3 NAVIGATION SYSTEM

Setting arrival time and distance display.....	3-38	Traffic Setup	3-52
Registering avoid area	3-38	Traffic Information	3-52
Editing avoid area	3-40	Help.....	3-54
Deleting avoid area	3-41		
Deleting all avoid areas	3-41		
Setting Q.POI icons.....	3-42		
Setting estimate travel time	3-42		
My places setting	3-43		
Registering new address in address book	3-43		
Editing an address of address book ...	3-45		
Deleting an address of address book	3-46		
Deleting an address book	3-47		
Registering home address	3-48		
Deleting home address	3-48		
Registering favorite place	3-49		
Deleting favorite place	3-50		
System information and update	3-51		
Voice guidance volume setting	3-51		
Voice guidance volume control.....	3-51		
Adaptive volume control ON/OFF	3-52		

PART 3 NAVIGATION SYSTEM

Limitations of the navigation system

GPS signal reception state

- As the GPS satellite frequency is received / transmitted in straight lines, reception may not work if devices are placed on or near the GPS antenna or when traveling through the following locations.



- Tunnels



- Basement parking structures



- Underneath an overpass



- Roads within forested areas



- Areas near high rise buildings



- Roads within canyons

Vehicle position display

- If multipass errors occur due to reflections from buildings or related causes, the current position mark on the navigation may differ from the actual position of the vehicle.
- The position of the vehicle on the navigation may be different from the actual position if the vehicle is under the following conditions. If such differences occur, driving for a short period of time will automatically correct the position of the vehicle through map matching or GPS information (several minutes may be necessary in certain cases).
 - When driving on a Y-shaped road with a narrow angle, the current position may be displayed in the opposite direction.
 - If the vehicle is loaded onto a ferry or a car transport vehicle, the current position mark may be stalled on the last position prior to loading.
 - When driving on a spiral-shaped road.
 - When driving in mountain regions with sharp turns or sudden brakes.
 - When entering a road after having been in an underground parking structure, building parking structure, or turntable with many rotations.
 - When the tires have recently been replaced (Especially upon use of spare or studless tires)
 - If the battery terminal is removed.
 - When driving in city streets, the current position may be displayed on the opposite side or on an off-road position.
 - When changing the zoom level from the maximum zoom in level to a different zoom level, the current position mark may be displayed on a different road.
 - When driving in heavy traffic with frequent stops in traffic or intersections.
 - When driving under slippery conditions, such as heavy sand, snow, etc.
 - When driving with the tire chain in place.
 - When using a tire with an incorrect size specification.
 - When the tire pressure for the 4 tires are different.
 - When the replacement tire is a worn or used tire (Especially studless tires having passed a 2nd seasons, etc.)
 - When driving near high-rise buildings
 - If a roof carrier has been installed
 - When driving under high speeds or having calculated a long-distance route.

PART 3 NAVIGATION SYSTEM

Route Guidance

- Suitable route guidance may not occur caused by search conditions or the driving position.
- Guidance to go straight may be given while driving on a straight road.
- Guidance may not be given even when having turned at an intersection.
- There are certain intersections in which guidance may not occur.
- A route guidance signaling for a U-Turn in a No U-Turn location may occur.
- A route guidance signaling entrance into a no enter zone may occur (No enter zone, road under construction, etc.).
- Guidance may be given to a position removed from the actual destination if roads to reach the actual destination do not exist or are too narrow.
- Faulty voice guidance may be given if the vehicle breaks from the designated route (ex: if a turn is made at an intersection while the navigation provided guidance to go straight).
- Map Data may be missing or incorrect causing route guidance to not be given.

Route Re-calculation

- The following phenomena may occur after conducting route recalculation.
- Guidance may be given to a position differing from the current position when turning at an intersection.
- Route Recalculation may take a longer period of time when driving under high speeds.
- A route guidance signaling for a U-Turn in a No U-Turn location may occur.
- A route guidance signaling entrance into a no enter zone may occur (No enter zone, road under construction, etc).
- Guidance may be given to a position removed from the actual destination if roads to reach the actual destination do not exist or are too narrow.
- Faulty voice guidance may be given if the vehicle breaks from the designated route (ex: if a turn is made at an intersection while the navigation provided guidance to go straight)

Starting navigation system



Press the Navigation mode key (**MAP VOICE**, **DEST**, **ROUTE**, **SETUP**). The Caution screen will always be displayed when first entering into Navigation mode. Read the contents of the caution screen carefully and press the **Agree** button.

Map Functions

Current position map screen (without route)



Press the **MAP VOICE** key on the control panel to display the map of current position and the neighboring area.



- 1 GPS signal state indicator : displays the state of GPS signal reception.
🔗 [Viewing GPS signal state], page 3-7.
- 2 Map scale level indicator : displays the current map scale.
🔗 [Changing the map scale], page 3-8.
- 3 Landmark icons : landmark icons are displayed on the map when the map scale level is set to under 300 ft (100m depending on map data)
🔗 [Appendix : landmark icons], page 7-7.
- 4 POI icons : POI icons are displayed on the map when the map scale level is set to under 0.5 mi (800m).
🔗 [Appendix : POI icons], page 7-5.
- 5 Current vehicle position icon : displays the current position of the vehicle.

PART 3 NAVIGATION SYSTEM

- a North Up / Heading Up switch : displays the current map mode and the map mode can be switched between North Up and Heading Up.
 - 📍 [Switching map mode], page 3-6.
- b POI : displays or hides the POI icon on the map.
 - 📍 [Displaying/Hiding POI icons on the map], page 3-9.
- c Map scale : increases or decreases the map scale.
 - 📍 [Changing the map scale], page 3-8.

Switching map mode (North Up / Heading Up)

Each time the compass button is pressed, the screen will switch in the order shown below.
Heading Up → North Up → Heading Up ...

i INFORMATION

All map screens (map screen after setting destination & whole route display screen) except the current position screen will always be displayed in North Up mode.




- North Up : displays the map always facing the North direction regardless of the direction which the vehicle is traveling.

The vehicle icon is displayed in the center position of the map.






- Heading Up : displays the map always facing the direction which the vehicle is traveling. The vehicle icon is displayed in the lower center position of the map.

📞 Voice Command

1. Press the  key on the steering remote control.
2. After the beep sound, say a command.
"North Up"
"Heading Up"

Viewing GPS signal state

The state of GPS signal reception is displayed as shown below.



-  (active) :
GPS reception is satisfactory.
-  (inactive) :
GPS reception is unsatisfactory.
 [System information and update], page 3-51.

INFORMATION



- GPS (Global Position System) : GPS is a system developed and operated by the United States which determines the current location of the user (longitude, latitude, etc.) by generally using 4 or more satellites. This system is used with related GPS information, various sensors, road map data, and other navigation related information.
- GPS information may not operate under the following conditions.
 - When buildings, tunnels, or other obstructions block satellite signals.
 - When materials are placed above the GPS antenna and block satellite signals.
 - When the satellite does not transmit signals (signal transmission is controlled by the satellite control center in the United States and may not transmit when under repair, modification, etc).
 - When a digital cellular phone (1.5GHz) is placed near the GPS antenna.
- This system uses GPS information, various sensors, road map data, and other related information to display the current position. Errors may occur if the satellite is transmitting inaccurate signals or only two or less satellite signals can be received. Errors which occur in such conditions cannot be corrected.

PART 3 NAVIGATION SYSTEM

Changing the map scale





Press the  or  button. The map scale will be increased or decreased by one level.


INFORMATION

Each time the  or  button is pressed, the scale bar will be displayed.

The scale can be changed by directly pressing the scale level on the scale bar.


The green color on the scale bar indicates the current scale level while the orange color indicates the selected scale level.

- Press the  or  button for over 0.8 second. The scale will continuously change.
- If the scale range limit is reached, the  or  button will be disabled.
- The map scale range is between 1 and 14: 10,240,000 ~ 1 : 5,000.

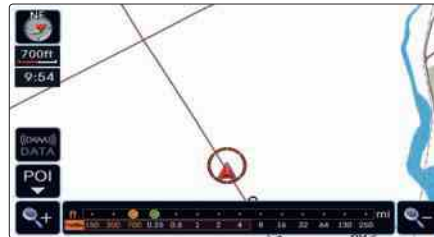

Actual distance		
Level	mi / ft	km / m
1	150 ft	50 m
2	300 ft	100 m
3	700 ft	200 m
4	0.25 mi	400 m
5	0.5 mi	800 m
6	1 mi	1.6 km
7	2 mi	3.2 km
8	4 mi	6.4 km
9	8 mi	12 km
10	16 mi	25 km
11	32 mi	50 km
12	64 mi	100 km
13	130 mi	200 km
14	250 mi	400 km

Voice Command








1. Press the  key on the steering remote control.
2. After the beep sound, say a command.
 - "Zoom In"
 - "Zoom Out"
 - "Zoom Maximum"
 - "Zoom Minimum"
 - "Zoom level <1 to 14>"
 - "Zoom <actual distance>"
 - " (ex. Zoom 700ft)"

Displaying / Hiding POI icons on the map

Displaying/Hiding Q.POI icons

1. Press the **POI ▼** button.
Related menu buttons will be displayed at the bottom of the screen.

INFORMATION

The Q.POI icons are set to  - Gas Station,  - Parking,  - Hotel,  - Golf Course,  - Bank,  - Fast Food (6 icons) by default. This setting can be changed in SETUP.  [Setting Q.POI icons], page 3-42.



2. Press the icon buttons to display or hide.
To turn off all POI icons displayed on the map, press the **ALL OFF** button.

INFORMATION

- The current displayed POI icons are highlighted while the icons not being displayed are shown as normal buttons.
- If there are no POI icons being displayed, the **ALL OFF** button will be disabled.
- POI icons are displayed when the scale is under 0.5 mi (800m).

Displaying / Hiding icons other than Q.POI icons

1. Press the **POI ▼** button.
Related menu buttons will be displayed at the bottom of the screen.
2. Press the **Others** button.

INFORMATION

Q.POI stands for Quick POI and refers to the function which turns POI icon display on or off on the map.

PART 3 NAVIGATION SYSTEM

(a) by category list



3. Press the desired main category button.




4. Select the desired sub category menu to display or hide (Multiple selections are possible).

Press the selected menu again to cancel the selection.

5. If the **Show Icon(s)** button is pressed, the selected menus will be displayed or hidden on the map screen.

Voice Command

1. Press the  key on the steering remote control.
2. After the beep sound, say a command.
"Show <POI name>" (ex. Show ATM)
"Hide <POI name>" (ex. Hide ATM)
"Hide All"

Making a call to POI

After searching a POI, the POI phone number information can be used to make a call to the POI facility.


1. Use the various search methods, such as the map scroll function, Q.POI search function, and destination search function to search for a POI.



2. Press the  button.



3. Bluetooth® is used to make a call to the POI facility.

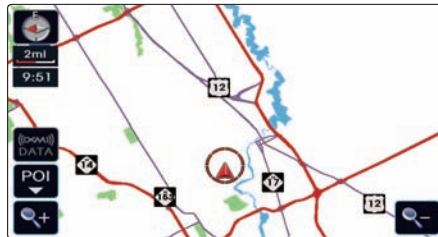

4. Once the call is ended, the map is restored to the current vehicle location.


i INFORMATION

- Making a call is not possible if there is no telephone information for a POI or if there is no mobile phone connected through Bluetooth®.
- For more information of mobile phone authentication through Bluetooth® or detailed information on conducting search, refer to [Pairing and connecting a Bluetooth® phone], page 5-4.

Scrolling map

Press the map area on the map screen.

The selected point will be centered on the screen and the scroll mark will be displayed. Information about the marked point and straight line distance from the current position will be displayed at the top of the screen.

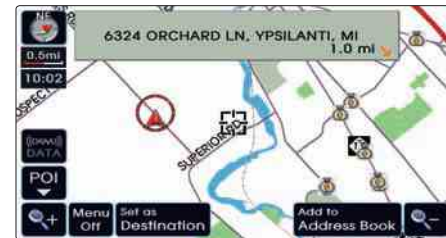

i INFORMATION

If a map area on the map screen is pressed, the map will continuously scroll in the corresponding direction until the pressing is released.


PART 3 NAVIGATION SYSTEM

Setting a destination

Destination menu screen and functions



Press the **DEST** key on the control panel to display the destination menu screen.

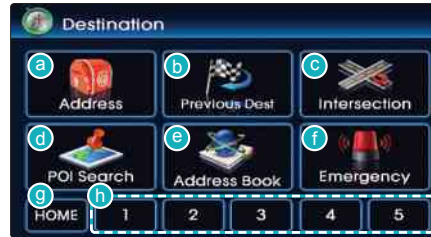

- a** Address : sets the destination through address search.
🔍 [Searching an Address], page 3-13.
- b** Previous Dest : sets the destination through the previous destination list.
🔍 [Searching a Previous Destination], page 3-17.
- c** Intersection : sets the destination through intersection search.
🔍 [Searching an Intersection], page 3-17.
- d** POI Search : sets the destination through POI Category search.
🔍 [Searching a POI], page 3-20.
- e** Address Book : sets the destination through address book search.
🔍 [Searching from Address book], page 3-24.

- f** Emergency : sets the destination through emergency facilities search.
🔍 [Searching for Emergency facilities], page 3-25 .
- g** HOME : sets the stored HOME as the destination.
🔍 [Searching your Home], page 3-25 .
- h** Favorite place **1** ~ **5** : sets the destination with one of the stored favorite places.
🔍 [Searching favorite places], page 3-26 .

Searching a Destination

Searching an Address

There are 2 ways to set the destination through address search-(a) by street, (b) by city.

1. Press the **DEST** key.
2. Press the **Address** button.



3. Press the **State** button to change the state.



4. Input the State name and press the **List** button.

If the number of matches with the input is less than 4 results, then the state list screen will be displayed automatically.

If the number of matches is only one result, then the state will automatically be changed without having to manually select the state.




5. Select the desired state from the list to change the state.

(a) by street



6. Press the **Street** button.

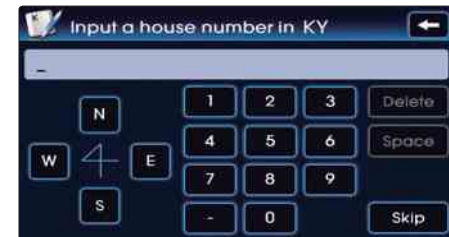

PART 3 NAVIGATION SYSTEM

7. Input the House number and Press the **Done** button to complete.


If the House number is not recognized, press the **Skip** button.

In this case, the range of house numbers will be displayed during the last step.



8. Input the Street name and press the **List** button.

If the number of matches with the input is less than 4 results, then the street list screen will be displayed automatically.

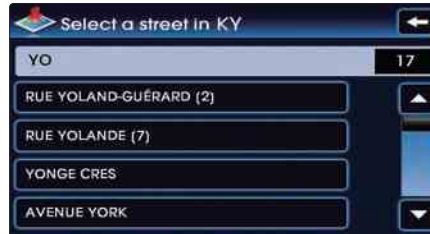


9. If the desired street from the list is selected, the corresponding position will be displayed on the map.

i INFORMATION


If more than 30 cities exist with the selected street, then the city input screen will be displayed. If less than 30 cities exist, then the city selection screen will be displayed.




10. Input the city name and press the **List** button to complete. If the number of matches with the input is less than 4 results, then the list screen will be displayed automatically.

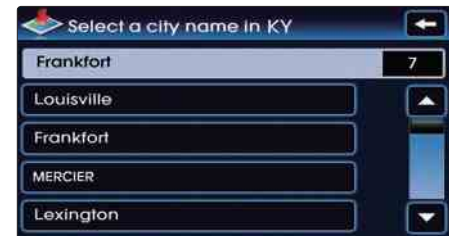

11. Select the desired city from the list.

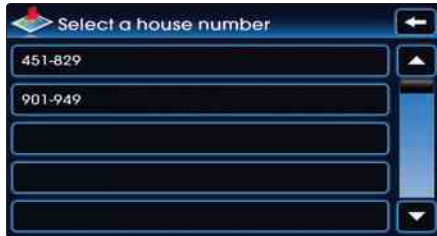

12. This screen will be displayed if the House number had not been inputted during step 6 and more than 2 house numbers ranges exist.
Select the desired House number range.

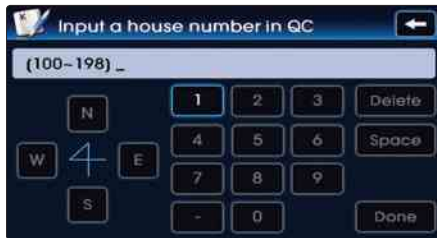

13. This screen will be displayed if the House number had not been inputted and only one house numbers range exists.

Input the House number and press the **Done** button to complete.

The corresponding position will be displayed on the map.

(b) by city




5. Press the **City** button.




6. Input the city name and press and press the **List** button.

If the number of matches with the input is less than 4 results, then the city list screen will be displayed automatically.

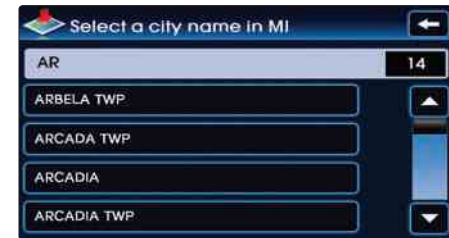

7. Select the desired city from the list.

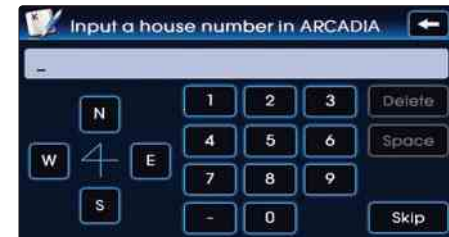

PART 3 NAVIGATION SYSTEM

8. Input the house number and press the **Done** button to complete.

If the House number is not recognized, press the **Skip** button.

In this case, the range of house numbers will be displayed during the last step.




9. Input the Street name and press the **List** button to complete.

If the number of matches with the input is less than 4 results, then the street list screen will be displayed automatically.




10. Select the desired street from the list and the corresponding position will be displayed on the map.

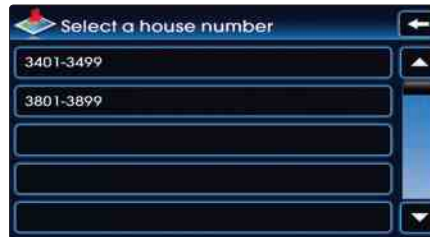

11. This screen will be displayed if the House number had not been inputted during step 8 and more than 2 House number ranges exist.

Select the desired House number range.

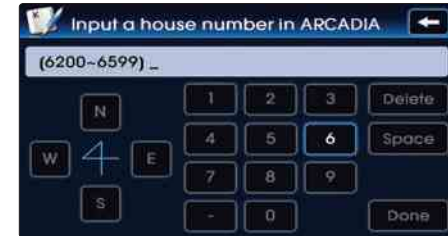



12. This screen will be displayed if the House number had not been inputted during step H and only one House number range exists.

Select the house number range and Press the **Done** button to complete.

The corresponding position will be displayed on the map.

Voice Command

1. Press the  key on the steering remote control.
2. After the beep sound, say a command.
"Find address"
 [Find address], page 5-19.




Searching a Previous Destination

1. Press the **DEST** key.
2. Press the **Previous Dest** button.



3. Select the desired previous destination. The corresponding position will be displayed on the map.

Voice Command

1. Press the  key on the steering remote control.
2. After the beep sound, say a command.
 - "Previous destination"
 -  [Previous destination], page 5-24.
 - "Previous start point"
 -  [Previous start point], page 5-25.

Searching an Intersection

There are two ways to set the destination through intersection search-(a) by street, (b) by city.

1. Press the **DEST** key.
2. Press the **Intersection** button.



3. Press the **State** button to change the state.



4. Input the state name and press the **List** button. If the number of matches with the input is less than 4 results, then the state list screen will be displayed automatically. If the number of matches is only one result, then the state will automatically be changed without having to manually select the state.



5. Select the desired state from the list to change the state.

PART 3 NAVIGATION SYSTEM

(a) by street




6. Press the **Street** button.



7. Input the name of the 1st street and press the **List** button.

If the number of matches with the input is less than 4 results, then the street list screen will be displayed automatically.

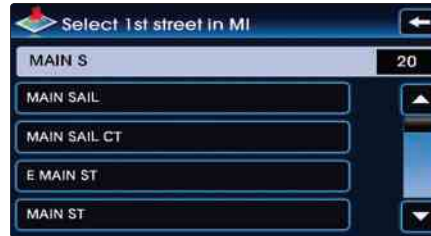


8. Select the desired 1st street from the list.




9. Input the name of the 2nd street and press the **List** button.

If the number of matches with the input is less than 4 results, then the street list screen will be displayed automatically.

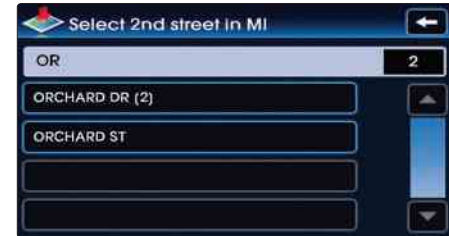

10. Select the desired 2nd street menu from the list. The corresponding position will be displayed on the map.

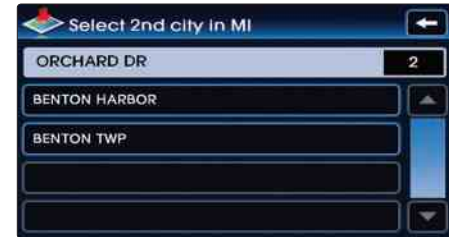

11. If the selected 2nd street is within more than 2 cities, then the city list screen will be displayed.

Select the desired city menu from the list. The corresponding position will be displayed on the map.

(b) by city




6. Press the **City** button.



7. Input the city name and press the **List** button.

If the number of matches with the input is less than 4 results, then the city list screen will be displayed automatically.

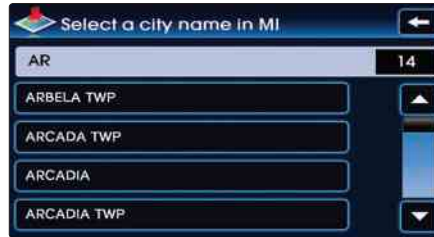


8. Select the desired city name.



9. Input the name of the 1st street and press the **List** button.

If the number of matches with the input is less than 4 results, then the street list screen will be displayed automatically.

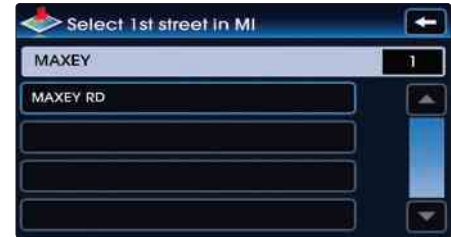


10. Select the desired 1st street menu from the list.




11. Input the name of the 2nd street and press the **List** button.

If the number of matches with the input is less than 4 results, then the street list screen will be displayed automatically.

PART 3 NAVIGATION SYSTEM

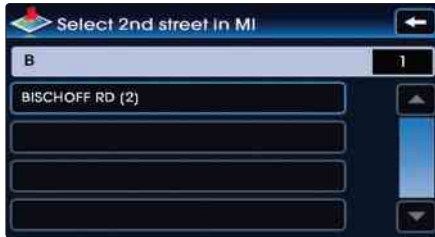

12. Select the desired 2nd street menu from the list.
The corresponding position will be displayed on the map.

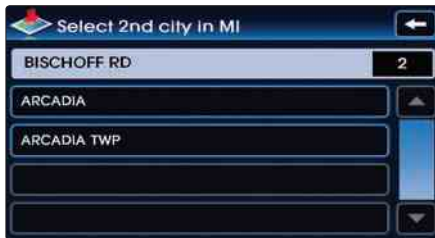

13. If the selected 2nd street is within more than 2 cities, then the city list screen will be displayed. Select the desired city menu from the list. The corresponding position will be displayed on the map.

Searching a POI

There are 3 ways to set the destination through POI search - (a) by category, (b) by name, (c) by phone number.


1. Press the **DEST** key.
2. Press the **POI Search** button.



3. Press the **State** button.



4. Input the state name and press the **List** button. If the number of matches with the input is less than 4 results, then the state list screen will be displayed automatically. If there is only one matching result, then the state will automatically be changed without having to manually select the state.

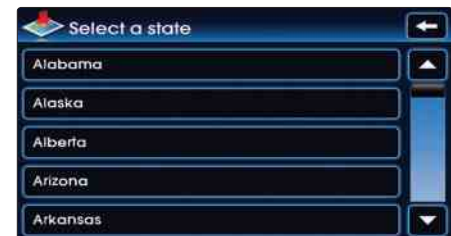


5. Select the desired state from the list to change the state.

(a) By category

Searches for facilities nearby the current position or from the city center.



6. Press the **Category** button.

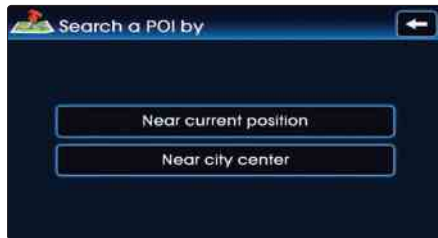

7. Press the **Near current position** button to search for facilities nearby the current position, or press the **Near city center** button to search for facilities in the near city center.



(a-1) Near current position


Searches for facilities within a 50 mi (80Km) radius of the current position.



8. Press the desired main category menu.

Voice Command

1. Press the  key on the steering remote control.
2. After the beep sound, say a command. "Find nearest POI"
 [Find nearest POI], page 5-20.

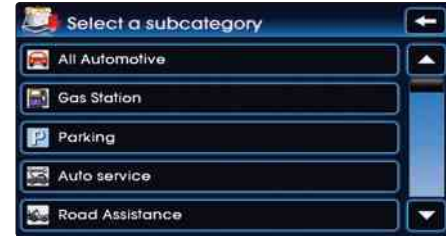

9. Press the desired sub category menu.



10. Select the desired menu button. The corresponding position will be displayed on the map.

PART 3 NAVIGATION SYSTEM


(a-2) Near city center

Searches for facilities from the city center.



8. Input the city name and press the **List** button.


If the number of matches with the input is less than 4 results, then the city list screen will be displayed automatically.

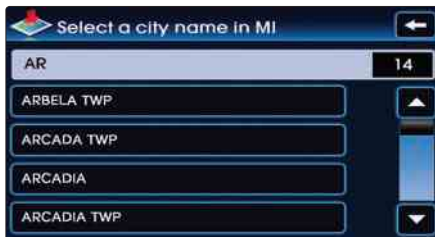


9. Press the desired city menu.



10. Press the desired main category.

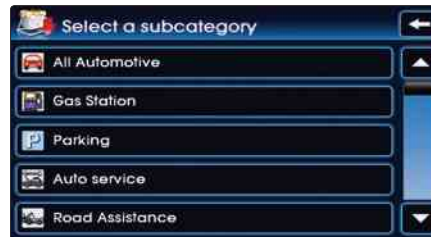

11. Press the desired sub category.

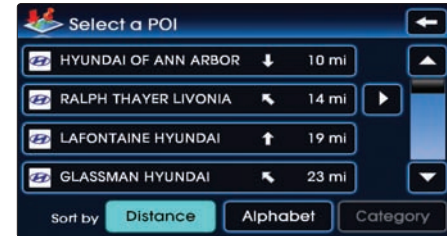

12. Select the desired menu button.

The corresponding position will be displayed on the map.

i INFORMATION

The distance on each POI item button refers to the distance from the city center.

(b) By name



6. Press the **Name** button.



7. Input the name of the POI and press the **List** button.

If the number of matches with the input is less than 4 results, then the facilities list screen will be displayed automatically.




8. Select the desired POI menu.

The corresponding position will be displayed on the map.

i INFORMATION

When necessary, the search conditions for the city and category can be changed by pressing the **Advanced** button.

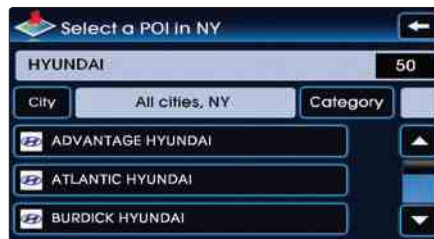

• Changing City

1. Press the **City** button.
2. Input the city name and press the **List** button.
3. Select the desired city name.

• Changing Category

1. Press the **Category** button.
2. Select the desired main category menu.
3. Select the desired sub category menu.

(c) By phone number



6. Press the **Phone #** button.



PART 3 NAVIGATION SYSTEM



7. Input the phone number and Press the **Done** button to complete.

The corresponding position will be displayed on the map.

Voice Command

1. Press the  key on the steering remote control.
2. After the beep sound, say a command.
"Destination POI by Phone Number"
 [Destination POI by phone number], page 5-22.

Searching from Address book

1. Press the **DEST** key.
2. Press the **Address book** button.



3. Select the desired address book (user) menu.


INFORMATION

This system provides 5 address books. Each addresses book can hold up to 200 entries.





4. Select the desired address name from the list.

The corresponding position will be displayed on the map.

 [Registering new address in address book], page 3-43.

Voice Command

1. Press the  key on the steering remote control.
2. After the beep sound, say a command.
"Destination by address book"
 [Destination by address book], page 5-24.

Searching for Emergency facilities

1. Press the **DEST** key.
2. Press the **Emergency** button.



3. Select the desired facility category.



4. Select the desired facility.
The corresponding position will be displayed on the map.

Voice Command

1. Press the **VOICE** key on the steering remote control.
2. After the beep sound, say a command.
"Find emergency <Category>"
[Find emergency <Category>], page 5-23.

Searching your Home

1. Press the **DEST** key.
2. Press the **HOME** button.
The Home position will be displayed on the map.

i INFORMATION

If the Home address is not registered, then the **HOME** button will not be displayed.
[Registering home address], page 3-48.

Voice Command

1. Press the **VOICE** key on the steering remote control.
2. After the beep sound, say a command.
"Go home"
[Go home], page 5-25.

PART 3 NAVIGATION SYSTEM

Searching favorite places



1. Press the **DEST** key.
2. Select the desired button from **1** ~ **5** .
The corresponding position will be displayed on the map.

i INFORMATION

If the address of the Favorite place is not registered, then the **1** ~ **5** buttons without registered addresses will be disabled.

 [Registering favorite place], page 3-49.

Voice Command

1. Press the  key on the steering remote control.
2. After the beep sound, say a command.
"Destination by memory point <1 to 5>"
 [Destination by memory point <1 to 5>], page 5-25.

Searching from MAP

Position the scroll mark at the destination by scrolling the map on the map screen.

Searching POI by local POI list

1. Press the **POI** button on the map screen.
2. Press the **Others** button.





3. Press the **Local POI lists** button.



4. Select the desired POI menu.
The corresponding position will be displayed on the map.

Voice Command

1. Press the  key on the steering remote control.
2. After the beep sound, say a command.
"Find nearest <POI name>"
 [Find nearest <POI name>], page 5-21.

Operating after searching a destination



Changing destination position :


Changes the position of the destination by scrolling the map.

 [Scrolling map], page 3-11.

Setting as Destination / waypoint :


Sets the position as the destination or waypoint.

Voice Command


1. Press the  key on the steering remote control.
2. After the beep sound, say a command.
"Start guidance"
(Sets the position of the scroll mark as the destination and begins route guidance.)

Adding to address book :

Saves the position in the address book.

 [Registering new address in address book], page 3-43.

Voice Command

1. Press the  key on the steering remote control.
2. After the beep sound, say a command.
"Store Marked Location to <text tag>"

PART 3 NAVIGATION SYSTEM

Operating after setting a destination



Starting Route Guidance

Press the **Start Guidance** button. Route Guidance will start.

- Route simulation
- If the **Start Guidance** button is pressed and held for over 0.8 second, then the route simulation will start.
- If the **MAP VOICE** key on the control panel is pressed during route simulation, then route simulation will be terminated.

Voice Command


1. Press the **MAP VOICE** key on the steering remote control.

2. After the beep sound, say a command.

"Time to destination"

"Distance to destination"

Route guidance screen

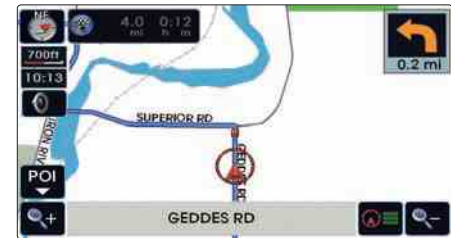


- Symbol guidance mode : if the **MAP VOICE** button is pressed, then the following route guidance screen will be displayed.




- Turn-List mode : if the **MAP VOICE** button is pressed, then the following route guidance screen will be displayed.



- Highway mode : if the  button is pressed, then the following route guidance screen will be displayed.



- Highway junction mode : this route guidance screen is automatically displayed during guidance at highway junctions. Once guidance at a highway junction is complete, this screen will automatically disappear and the previous guidance screen will be restored.

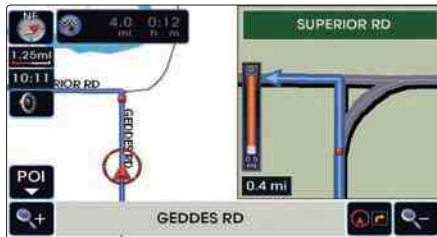



- Intersection zoom mode : this route guidance screen is automatically displayed during guidance at an intersection. Once guidance at the intersection is complete, the screen will automatically disappear and the previous guidance screen will be restored.

Selecting other route



1. Press the  button.



2. Other routes can be selected by pressing the  or  buttons.

PART 3 NAVIGATION SYSTEM

Route guidance

Route menu screen and functions



Press the **ROUTE** key on the control panel. The ROUTE menu screen will be displayed.



- a Cancel Route: deletes destination, waypoints and terminates route guidance.
☰ [Finishing route guidance], page 3-30 .
- b Route Overview: displays the entire route and route detailed.
☰ [Route overview], page 3-31 .
- c Route Option: the route option can be changed.
☰ [Changing Route option], page 3-32 .
- d Edit Waypoint: waypoints can be added/ deleted and the order can be changed.
☰ [Editing waypoints], page 3-32 .
- e Detour : searches detour routes.
☰ [Setting detour distance], page 3-35 .
- f Avoid Streets: searches routes which avoid the selected streets.
☰ [Setting avoid streets on route], page 3-35.


Finishing route guidance (Delete Destination)

1. Press the **ROUTE** key.
2. Press the **Cancel Route** button.



3. Press the **Yes** button.
The destination and waypoints are deleted and the route guidance is terminated.
☰ [Finishing route guidance], page 3-30 .

Voice Command

1. Press the  key on the steering remote control.
2. After the beep sound, say a command.
"Cancel route"
(Terminates route guidance and deletes the set destination and waypoints.)

Route overview (View Entire Route)

1. Press the **ROUTE** key.
2. Press the **Route Overview** button.



3. Press the **Turn by Turn** button.

INFORMATION

If the **Return to guidance** button is pressed, route guidance screen is displayed.



4. The detailed route information can be viewed

PART 3 NAVIGATION SYSTEM


Changing Route option

1. Press the **ROUTE** key.
2. Press the **Route Option** button.



3. Press the button for the desired route guidance method.
Guidance will be restarted after recalculating the route with the selected guidance method.

Voice Command

1. Press the  key on the steering remote control.
2. After the beep sound, say a command.
"Replan recommended route"
"Replan shortest route"

Editing waypoints

Adding waypoints

There are 2 ways to add waypoints - (a) searching for POI nearest to the route, (b) using advanced search.

1. Press the **ROUTE** key.
2. Press the **Edit Waypoint** button.



3. Press the **Press to add new waypoint** button.


(a) Searching POI lists near route




4. Press the **Near POI Lists on Route** button.



5. Select the desired category.

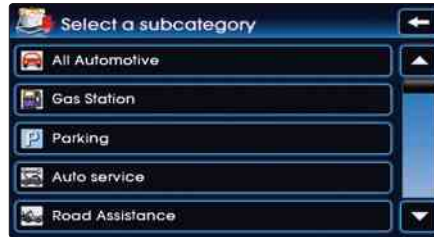


6. Select the desired sub category from list.

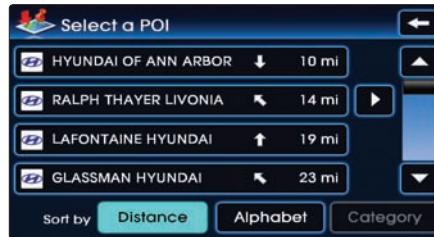

7. Select the desired POI from the list.

The corresponding position will be displayed on the map.

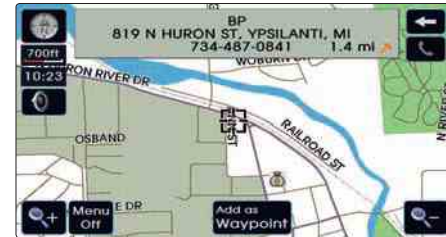

8. Press the **Add as Waypoint** button.



9. Press the **Done** button to complete. Guidance will restart after recalculating the route.

PART 3 NAVIGATION SYSTEM

(b) Using advanced Search

The method for searching waypoints through the **Advanced(more)** button is the same method as searching destination.


 [Searching a Destination], page 3-13.

Deleting waypoints

1. Press the **ROUTE** key.
2. Press the **Edit waypoint** button.



3. Select the waypoint and press the **Delete** button.

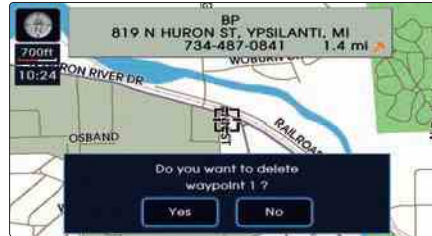


4. Press the **Yes** button.



5. After deleting, press the **Done** button to complete.
Guidance will restart after recalculating the route.

Re-ordering waypoints

1. Press the **ROUTE** key.
2. Press the **Edit waypoint** button.

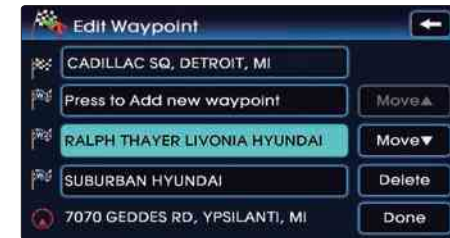

3. Select the desired waypoint and use the **Move▲**, **Move▼** buttons to change the order.
4. Once re-ordering is complete, press the **Done** button to complete.
Guidance will restart after recalculating the route.


Setting detour distance

1. Press the **ROUTE** key.
2. Press the **Detour** button.



3. Select the desired detour range.
Guidance will restart after recalculating the detour route.



Voice Command

1. Press the  key on the steering remote control.
2. After the beep sound, say a command.
"Detour <1 or 2 or 5 or 10> miles"
"Detour <1 or 2 or 5 or 10> kilometers"

Setting avoid streets on route

1. Press the **ROUTE** key.
2. Press the **Avoid streets** button.



3. Select the desired streets to avoid( avoid,  allow) and press the **Done** button to complete.
Guidance will restarted after recalculating the route to avoid the selected streets.

PART 3 NAVIGATION SYSTEM

Setup and Information

Setup menu screen and functions



Press the **SETUP** key on the control panel to display the setup menu screen.



- a** Main button : changes to the input keyboard type, voice command feedback ON/OFF settings and system initialization can be made.
🔗 [Main setting], page 3-36 .
- b** Voice Setup button : adjusts the Navigation guidance volume.
🔗 [Voice guidance volume setting], page 3-51.
- c** Navigation button : navigation related settings can be set.
🔗 [Navigation setting], page 3-38 .
- d** Clock Setup button
- e** My Places button : the Address book, Home address, Favorite places, Previous destination can be edited.
🔗 [My places setting], page 3-43 .

- f** Help button : the help contents can be viewed. 🔗 [Help], page 3-54 .
- g** Traffic Setup : sets to display traffic information on map, or to provide upcoming traffic information voice guidance, and or to display the detour route popup showing upcoming traffic information.

Main setting

1. Press the **SETUP** key.
2. Press the **Main** button.



3. Select the desired changes and press the **Done** button to complete.

Setting keyboard for inputting letter

Press the desired keyboard type button. The selection will be highlighted.

Setting voice command feedback ON/OFF

Press the desired setting button.

Setting Language

1. Press the **Change** button.




2. Press the desired language.



3. Press the **Done** button to complete.

Initializing system

1. Press the **Factory Default** button.

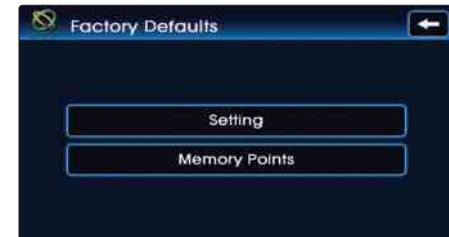

2. Press the menu desired for initialization.



3. Press the **Yes** button

PART 3 NAVIGATION SYSTEM

Navigation setting

1. Press the **SETUP** key.
2. Press the **Navigation** button.



3. Select the desired changes and press the **Done** button to complete.

Setting units (mile/ km)


Select the desired distance unit.

Setting arrival time and distance display

Select the desired setting button.

Registering avoid area

1. Press the **Avoid Area** button.

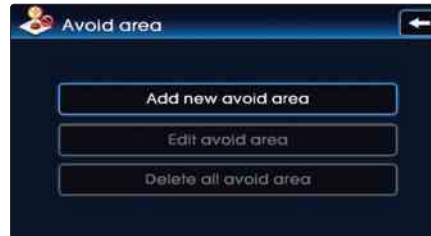

2. Press the **Add new avoid area** button.



3. Set the start position of the avoid area and press the **Next** button.



4. Set the end position of the avoid area and press the **Next** button.



5. Press the **Done** button to complete.





6. If the Avoid area needs to be renamed, press the **Rename** button.



7. Rename the Avoid area and Press the **Done** button to complete.




8. Each time the **Avoid** button is pressed, the function will switch between avoid () or allow ().

9. Press the **Done** button to complete the setting.


PART 3 NAVIGATION SYSTEM

Editing avoid area


1. Press the **Avoid area** button.

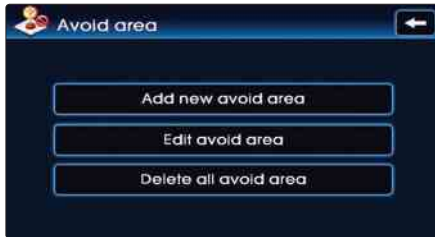

2. Press the **Edit avoid area** button.

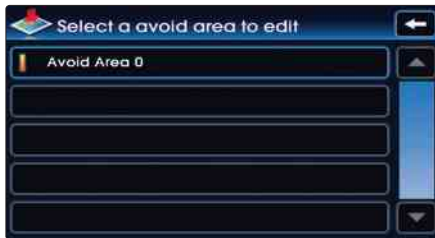

3. Select the Avoid area button to edit.

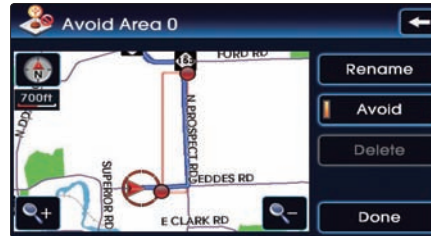

4. If the Avoid area needs to be renamed, press the **Rename** button.



5. Rename the Avoid area and press the **Done** button to complete.




6. Each time the **Avoid** button is pressed, the function will switch between avoid(🚫) or allow(📍).


7. Press the **Done** button once editing is complete.

Deleting avoid area

1. Press the **Avoid area** button.

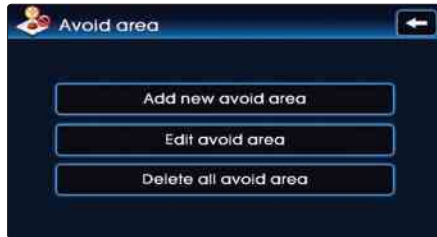

2. Press the **Edit avoid area** button.

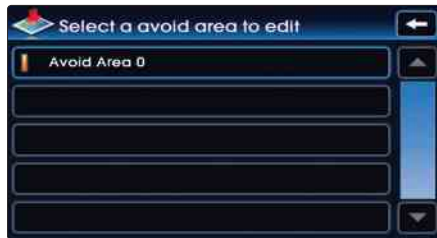

3. Select the **Avoid area** button to delete.



4. Press the **Delete** button.



5. Press the **Yes** button.

Deleting all avoid areas

1. Press the **Avoid area** button.



2. Press the **Delete all avoid area** button.



3. Press the **Yes** button.

PART 3 NAVIGATION SYSTEM

Setting Q.POI icons


1. Press the **Edit Q.POI** button.



2. Select the desired menu.



3. Select the desired category.

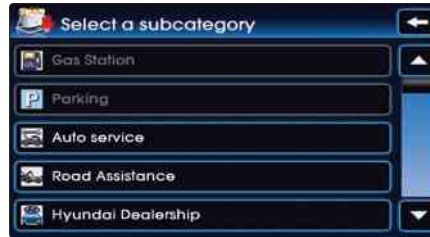

4. Select the desired sub category.



5. Press the **Done** button to complete.

i INFORMATION

Q.POI stands for Quick POI and refers to the function which turns POI icon display on or off on the map.

Setting estimate travel time

1. Press the **Travel Time** button.



2. Press the **◀** or **▶** button on the Residential, Main street, and Freeway controls to adjust the speed.

Press the **Default** button to set the speeds to the default settings.


3. Press the **Done** button to complete the setting.

My places setting

Registering new address in address book


There are 3 ways to register a new address in the address book - (a) by DEST menu, (b) by registering address in address book, (c) from map scroll.

(a) by DEST menu


1. Press the **DEST** key.
2. Search through the desired method.
The search process is the same as the method for destination search.
 [Searching a destination], page 3-13.




3. Press the **Add to Address Book** button.

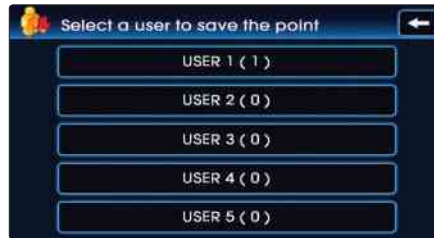

4. Press the desired address book (user) button.

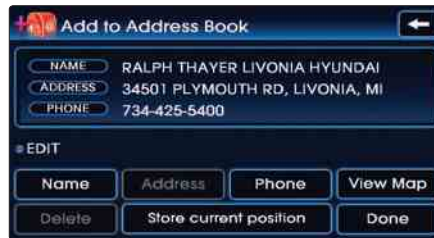

5. Input the name and telephone information and press the **Done** button to complete.
 [Editing an address of address book], page 3-45.

(b) by registering in the address book

1. Press the **SETUP** key.
2. Press the **My Places** button.




3. Press the **Address Book** button.



4. Press the desired address book (user) button.


PART 3 NAVIGATION SYSTEM

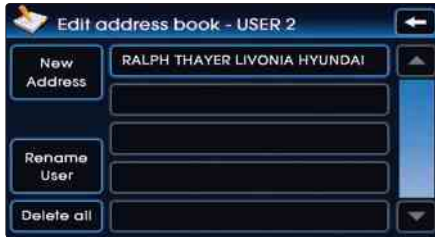

5. Press the **New Address** button.




6. Press the **Address** button to search the address.

 [Searching an address], page 3-13.

INFORMATION

Press the **Store current position** button to input the address of the current position.

7. Input the name and telephone information and press the **Done** button to complete.


 [Editing an address of address book], page 3-45.

(c) from map scroll

1. In the map screen, scroll the map to the desired position.




2. Press the **Add to Address Book** button.

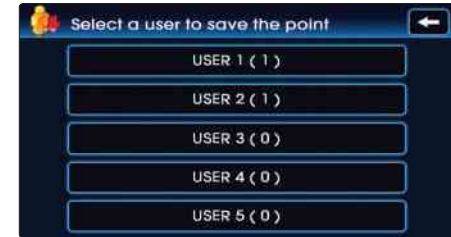

3. Press the desired address book (user) button.

4. Input the name and telephone information and press the **Done** button to complete.

 [Editing an address of address book], page 3-45.

Editing an address of address book


1. Press the **SETUP** key.
2. Press the **My Places** button.



3. Press the **Address Book** button.



4. Select the desired address book (user) button.

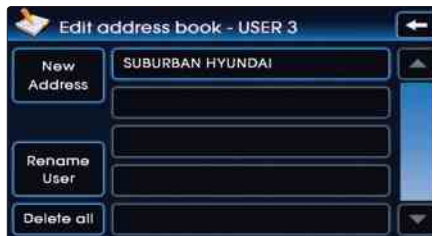

5. Select the desired address to edit.




6. Press the **Name** button to input the address name.



7. Input the address name and press the **Done** button to complete.



8. Press the **Address** button to search the address. The process is the same as the method for searching an address.
 [Searching an Address] , page 3-13.

i INFORMATION

Press the **Store current position** button to input the address of the current position.

PART 3 NAVIGATION SYSTEM

9. Press the **Phone** button to input the phone number.



10. Input the phone number and press the **Done** button to complete.



11. Press the **Done** button to complete.

Deleting an address of address book

1. Press the **SETUP** key.


2. Press the **My Places** button.




3. Press the **Address Book** button.



4. Select the desired address book (user) button.

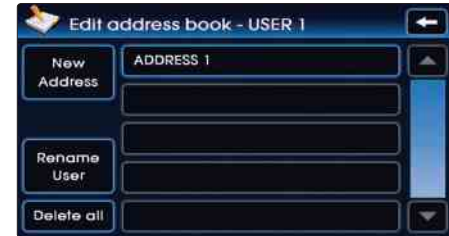

5. Select the desired address button to delete.

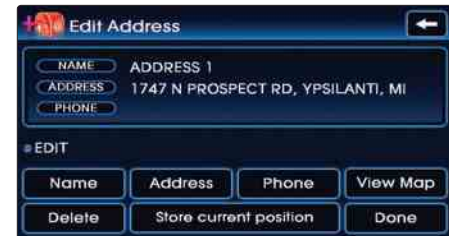

6. Press the **Delete** button.



7. Press the **Yes** button.

Deleting an address book


1. Press the **SETUP** key.
2. Press the **My Places** button.




3. Press the **Address Book** button.



4. Press the desired address book (user) button.

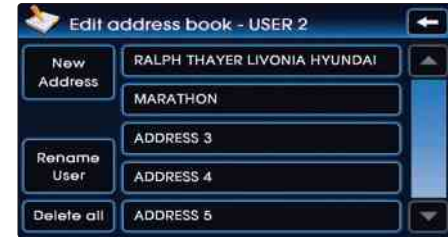

5. Press the **Delete all** button.

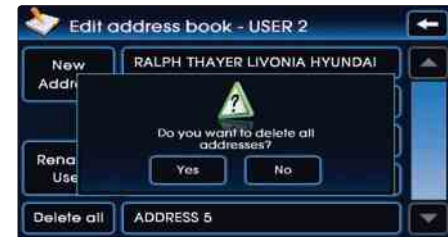

6. Press the **Yes** button.

PART 3 NAVIGATION SYSTEM

Registering home address

1. Press the **SETUP** key.
2. Press the **My Places** button.



3. Press the **Home Address** button.



4. Press the **Search** button.

i INFORMATION

Press the **Store current position** button to register the current position as Home.

5. Search the address.

The process is the same method as searching an address.

 [Searching an Address], page 3-13.



6. Press the **Done** button to complete.

Deleting home address

1. Press the **SETUP** key.
2. Press the **My Places** button.



3. Press the **Home Address** button.



4. Press the **Delete** button.




5. Press the **Yes** button.

Registering favorite place

1. Press the **SETUP** key.
2. Press the **My Places** button.



3. Press the **Favorite Places** button.

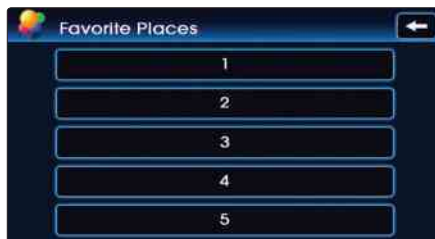

4. Press the number of the Favorite Place to register.



5. Press the **Search** button.

i INFORMATION

Press the **Store current position** button to register the current position as a Favorite place.

6. Search the address.

The process is the same as the method for searching an address.

 [Searching an Address], page 3-13.

PART 3 NAVIGATION SYSTEM




7. Press the **Done** button to complete.

Deleting favorite place

1. Press the **SETUP** key.
2. Press the **My places** button.



3. Press the **Favorite Places** button.

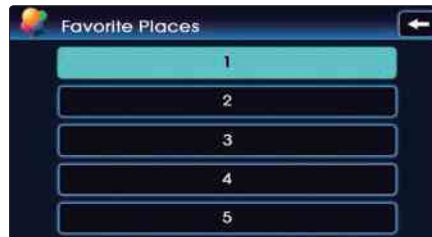

4. Select the desired favorite place button to delete.



5. Press the **Delete** button.



6. Press the **Yes** button.

System information and update

1. Press the **SETUP** key.
2. Press the main button.
3. Press the **System Info** button.



Voice guidance volume setting

1. Press the **SETUP** key.
2. Press the **Voice Setup** button.



Voice guidance volume control

- Set the desired volume level by using the **◀** or **▶** buttons and press the **Listen** button to verify the volume level.

Voice Command

1. Press the **⏪** key on the steering remote control.
2. After the beep sound, say a command.
"Voice Guidance Louder"
"Voice Guidance Softer"

- Press the **Mute** button when voice guidance is unnecessary.
Voice guidance can be turned back on by pressing the **◀** or **▶** buttons or pressing the **Mute** button.

Voice Command

1. Press the **⏪** key on the steering remote control.
2. After the beep sound, say a command.
"Voice Guidance On"
"Voice Guidance Of"

PART 3 NAVIGATION SYSTEM

Adaptive volume control ON/OFF

- Press the desired setting button.


i INFORMATION

Adaptive Volume Control

If the speed of the vehicle is over approximately 60 mi/h (100km/h), the volume level can be increased one level higher than the current level. If the speed of the vehicle falls under 60 mi/h (100km/h), the volume level will return to its original level.

Traffic Setup

1. Press the **SETUP** key.
2. Press the **Traffic Setup** button.
3. Select the desired changes and press the **Done** button.

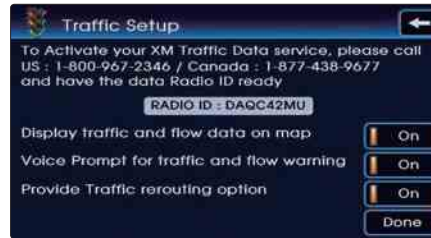


i INFORMATION

- Display Traffic and Flow data on Map : select whether to display traffic information on the map.
- Voice Prompt for traffic and flow warning : select whether to provide voice guidance in front of Traffic Information. (On route - 3mile)
- Display Detour pop-up message : select whether to display Detour pop up in front of Traffic Information. (On route - 3mile)










Traffic Information

(a) Viewing Traffic Information




1. When the Traffic option is active, press the  button on the Map screen.

i Traffic Flow INFORMATION

	Normal, Free Flowing (46 mph ~)
	Moderate Congestion (26 ~ 45 mph)
	Heavy Traffic, Stop and Go (0 ~ 25 mph)
	Road Construction
	Accident
	Congestion/Slow Traffic
	Incident
	Hazardous Road Conditions
	Travel Information

i INFORMATION

- Traffic information will be shown on the map up until the scale is ~4mile.
- Displays the traffic information around vehicle for up to a radius of 50 miles. (Information exceeding 50 miles will not be displayed)
- The above list can be sorted by either Distance (Default) or Category.

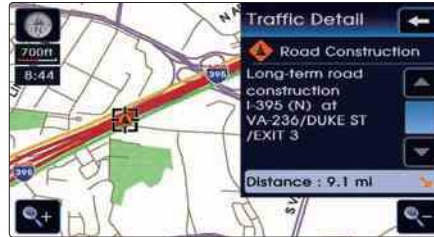

3. The user can check points of accidents and traffic details.



2. After selecting the desired menu among the six menus, press the **Done** button to save. Once returning to the previous List screen, the corresponding Category list will be shown and maintained until Category information is changed.



2. Select the desired **List** button.

(b) Changing Traffic Category



1. Press the **Advanced** button at No. 2.

PART 3 NAVIGATION SYSTEM

Help

1. Press the **SETUP** key.




2. Press the **Help** button.



3. Press the **Navigation** button.



4. Press the desired Help menu button.

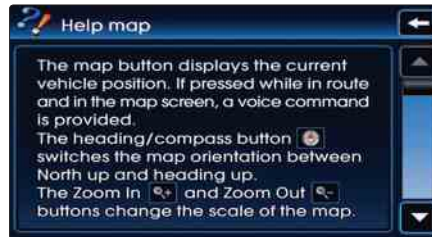

5. The full content of the help section can be viewed by using the top-down scroll buttons.

PART 4
XM DATA

XM Data mode	4-2
Entering XM Data mode.....	4-2
XM Data mode screen and functions ...	4-2
Traffic data Service Information	4-2
Stock Data Service Information	4-3
Sport Data Service Information	4-3
Weather data Service Information.....	4-4

PART 4 XM DATA

XM Data mode

The XM Data Service is a paid membership satellite radio service which provides users with traffic, stock, sports, and weather information. However, weather information is not supported for vehicles purchased in Canada. For information on registration or related content, please visit the XM radio website (www.xmradio.com).

Entering XM Data mode

1. From the current location map screen within the navigation, press the **XM DATA** button.



2. The main XM data service screen will be displayed. Within the main screen, there are four categories of Traffic, Stocks, Sports and Weather.

XM Data mode screen and functions

Traffic data Service Information

- Automatic route recalculation (guidance) according to changes in traffic conditions.
- Provides short-cuts for initially searched routes.
- Displays increased detour distance and estimated driving times.
- Displays icons by each traffic situation on the map.

1. Route calculation by incorporating actual road traffic conditions
 - Incorporation of traffic information to route calculations is a user option which can be turned on or off by the user.

2. Displays Road Traffic situations

- RTM (Road Traffic Message) is a feature which displays symbols of icons for each type of road traffic condition, such as locations under construction, accidents, basic weather, and others on map locations based on Traffic information provided by XM.

3. Avoidance of locations where traffic situations have occurred.

- If a traffic situation occurs somewhere along the route, the route is recalculated to avoid such locations and an avoidance recalculation popup will be displayed.

4. Displays Traffic Event List

- A list providing details on accidents and an icon which will display the accident location are displayed. The user can view details by pressing on the list or move the map to the accident location by pressing on the accident icons.

Stock Data Service Information

XM Stock data Service is a service which provides real-time updated information on the NYSE, NASDAQ, and AMEX (approximately 11,000 symbols).



1. Press the **Stocks** button to display the Search screen where symbols can be searched. Input the name of the symbol you wish to search and press the **List** button to show search results.
2. For symbols which you are interested in, press the <Favorites> icon to save the symbol as a part of <My Favorite>. Saved symbols can be viewed from the **My Favorites** button on the Stock Main screen.

Symbol	Value	Change
AAE	\$20.01	\$20.01
AAN	\$20.01	\$20.01
AAZT	\$20.01	\$20.01
AAZ	\$20.01	\$20.01

Sport Data Service Information

This service provides real-time updated information on scores and schedules for major sports, such as NFL, NBA, NCAA Football, NCAA Basketball, NHL, MLB, NASCAR and more.




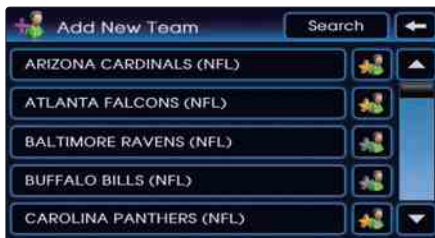
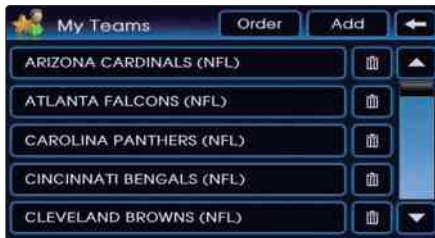
1. Press the desired **Sports** button to view related sports information.

PART 4 XM DATA

2 . My teams

You can save teams which you are interested in as part of <My teams> to easily view related scores and schedules.

Within the <My teams> screen, teams can be added by pressing the **Add** button or deleted by pressing the  button.



Weather data Service Information

The Weather Service is a service which provides weather information updated every 5 minutes for your region.

The Weather Service includes Tabular Weather, Graphical Weather, Warnings and Advisories Services.

1 . Tabular Weather Service

- Provides current weather information and weather information for the coming next three days for your region.

To change the region, press the **Other City** button and select the desired region.

2 . Graphical Weather Service (button)

- This service provides weather information, such as Cloud, Fog, Rain, Snow, and Road Conditions on the Navigation map as symbols. Details can be viewed on specific regions by using the zoom in and zoom out features.

3 . Warning and Advisories Service

- This service provides weather warnings and advisories, such as Tornado, Storm, Flood etc. as symbols on the Navigation map.

Details can be viewed on specific regions by using the zoom in and zoom out features.

PART 5 VOICE COMMAND SYSTEM

Operating voice command	5-2	Command list of Phone	5-13
Condition for voice command system	5-2	Command list of Navigation system	5-14
Basic operation for voice		Map	5-14
command control	5-2	Destination	5-15
Voice command Help	5-3	Route	5-16
		Others	5-17
		POI Category list	5-18
Setting up the voice command system	5-4	Searching destination by	
Setting voice Prompt ON/OFF	5-4	voice command	5-19
Speaker adaptation	5-4	Find address	5-19
		Find nearest POI	5-20
		Find nearest <POI name>	5-21
		Destination POI by phone number ...	5-22
		Find emergency <Category>	5-23
		Destination by address book	5-24
		Previous destination	5-24
		Previous start point	5-25
		Go home	5-25
		Destination by memory	
		point <1 to 5>	5-25
Voice command list	5-6		
Command list of Help	5-6		
Command list of Audio system	5-6		
FM/AM Radio	5-7		
XM Radio	5-8		
CD	5-9		
MP3	5-10		
USB MP3	5-11		
USB IMAGE	5-12		
iPod	5-12		
Others	5-13		

PART 5 VOICE COMMAND SYSTEM

Operating voice command


Condition for voice command system

Most of the functions within the Audio and Navigation system can be operated by voice. Please follow the following instructions for optimal voice recognition performance.

- Close all windows and the sunroof. The performance of the voice recognition can be improved if the environment of the car interior is quiet.
- Press the voice recognition button and say the desired voice command after the sound of the beep.
- The microphone is positioned above the driver so that voice commands can be spoken while maintaining a proper posture.
- Pronounce the voice commands naturally and clearly as if in a normal conversation.


Basic operation for voice command control







1. Press the  key on the steering remote control. A voice command window will be displayed on the lower side of the screen followed by a "Command please" system voice comment.

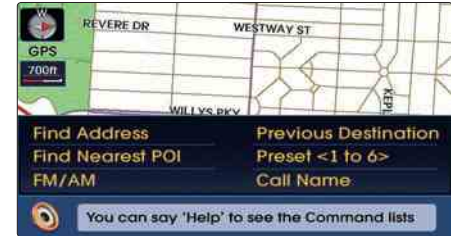INFORMATION




The System voice comment "Command Please" will not be provided when the Voice prompt is turned OFF.



2. Once the  icon changes into the  icon on the pop-up screen with a beep sound, say the desired voice command (ex : previous destination)
 -  [Voice command list], page 5-6.
 -  [Searching destination by voice command], page 5-19.

If the exact command is not known, use the "Help" command to view the commands list in detail.


INFORMATION

Press the  key shortly to input a voice command from among the system voice comments. The system voice instruction comment will immediately terminate. When the  icon changes into the  icon with a beep sound, input the desired voice command.




3. The inputted command is fed back to the screen and voice system. If the command was not recognized properly, say "Back".

i INFORMATION



- The commands which can currently be inputted are displayed on the screen in yellow.
- To terminate the voice recognition system, either say "cancel" or press the  for over 0.8 second.
- Be aware that during the operation of the voice recognition system, pressing the hard keys or the screen will terminate the voice recognition system.

Voice command Help

1. Press the  key on the steering remote control. A voice command window will be displayed on the lower side of the screen followed by a "Command please" system voice comment.

i INFORMATION

The System voice comment "Command Please" will not be provided when the Voice prompt is turned OFF.


2. Once the  icon changes into the  icon on the pop-up screen with a beep sound, say "Help". If the proper Help menu is already known, voice commands, such as "destination help" can be inputted directly.

i INFORMATION

The "help" command can be used even while voice recognition dialogue is operating. At such time, help instructions appropriate to the state of the dialogue will be provided.



3. Say the name of the desired menu. (ex: "Destination help")

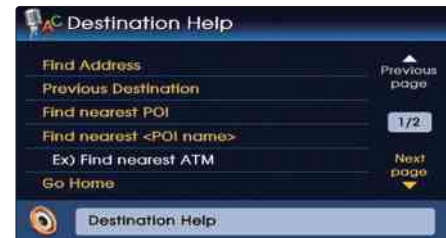




4. Say the desired voice command.

PART 5 VOICE COMMAND SYSTEM

 
 
Setting up the voice command system

Setting voice Prompt ON/OFF

- Voice prompt ON : all system prompts are provided.
- Voice prompt OFF : most of the system prompts are not provided.

1. Press the  key on the steering remote control.
2. Once the  icon changes into the  icon on the pop-up screen with a beep sound, say "Voice setup." The "voice prompt on" or "voice prompt off" can be directly inputted if the current state is already known.






3. Once the  icon changes into the  icon on the pop-up screen with a beep sound, say "Voice Prompt on".



INFORMATION

In the Voice Setup Help screen, the commands possible for input within the current mode are displayed. For example, if the Voice prompt is currently in Off state, then the command Voice prompt ON will be displayed on the screen.



Speaker adaptation


1. Press the  key on the steering remote control.
2. Once the  icon changes into the  icon on the pop-up screen with a beep sound, say "Voice setup." Or the "Speaker adaptation" command can be directly inputted.



3. Once the  icon changes into the  icon on the pop-up screen with a beep sound, say "Speaker adaptation".



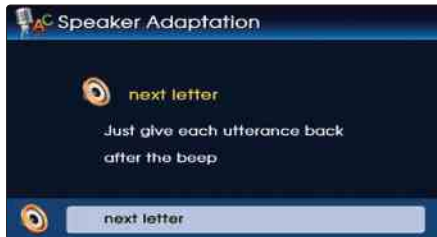


4. Once the  icon changes into the  icon on the pop-up screen with a beep sound, say "Yes".



5. Listen and repeat the 20 commands (approximate) as instructed by the device.

- Reset Speaker adaptation: Returns to previous state prior to applying Speaker adaptation.

1. Press the  key on the steering remote control.

2. Once the  icon changes into the  icon on the pop-up screen with a beep sound, say "Reset Speaker adaptation".

PART 5 VOICE COMMAND SYSTEM

Voice command list

The voice commands for this system are divided into Global commands and Local commands.

- Global command (●) : Commands which operate in all operating modes.
- Local command (○) : Commands which operate only when the corresponding mode is operating or when the mode screen to the corresponding mode is displayed.

Command list of Help

Command		Operation
●	Help	Displays the main Help screen.
●	Destination Help	Displays the Destination related command list.
●	Map Help	Displays the Map related command list.
●	Radio Help	Displays the FM/AM radio related command list.
●	XM Help	Displays the XM radio related command list.
●	Disc Help	Displays the DISC mode related command list for the disc inserted in the CD Player.
●	iPod Help	Displays the iPod related Command list.
●	USB Help	Displays the USB related command list.
●	Phone Help	Displays the Phone help screen.
●	Voice setup Help	Displays the Voice prompt settings and speaker-adaptive commands on the screen.

Command list of Audio system

FM/AM Radio

Command	Operation
● Radio	Plays the most recent frequency for the most recently operated band.
● (Radio) AM	Plays the most recent frequency for the corresponding band.
● (Radio) FM	Plays the most recent frequency for the corresponding band. In the case of FM, the most recent frequency within the most recently played FM1 or FM2 band is played.
● FM <1 or 2>	Plays the most recent frequency for the corresponding band.
● AM frequency <530 to 1710> (ex. AM frequency 1310)	Plays the desired AM band frequency.
● FM frequency <87.5 to 107.9> (ex. FM frequency 99.1)	Plays the desired FM band frequency.
● AM Preset <1 to 6>	Plays the desired AM band preset frequency.
● FM <1 or 2> Preset <1 to 6>	Plays the desired preset frequency of FM1 or FM2 band.
○ Preset <1 to 6>	Plays the desired preset frequency for the current band.
○ Seek Up	Searches and plays the next frequency of the current band.
○ Seek Down	Searches and plays the previous frequency of the current band.
○ Preset Up	Plays the next preset frequency of the current band.
○ Preset Down	Plays the previous preset frequency of the current.
○ Scan	Scans all frequencies within the current band.
○ Preset Scan	Scans the 6 preset frequencies of the current band.
○ Auto Store/Auto Preset	Searches all frequencies within the current band and stores the 6 frequencies with the most superior reception as preset buttons.

PART 5 VOICE COMMAND SYSTEM

XM Radio

Command		Operation
<input checked="" type="radio"/>	XM	Plays the last channel within the last band from XM1, XM2, and XM3.
<input checked="" type="radio"/>	XM <1 or 2 or 3>	Plays the most recent channel for the corresponding Band.
<input checked="" type="radio"/>	XM Channel <0 to 255>	Plays the desired XM band channel.
<input checked="" type="radio"/>	XM <1 or 2 or 3> Preset <1 to 6>	Plays the desired preset channel for XM1 or XM2 or XM3 band.
<input type="radio"/>	Channel < 0 to 255 >	Plays the desired channel of the current band.
<input type="radio"/>	Preset <1 to 6>	Plays the desired preset channel of the current band.
<input type="radio"/>	Channel Up	Plays the next channel of the current band.
<input type="radio"/>	Channel Down	Plays the previous channel of the current band.
<input type="radio"/>	Preset Up	Plays the next preset channel of the current band.
<input type="radio"/>	Preset Down	Plays the previous preset channel of the current band.
<input type="radio"/>	Scan	Scans all channels within the current band.
<input type="radio"/>	Preset Scan	Scans all preset channels within the current band.

CD

Command		Operation
<input checked="" type="radio"/>	DISC	Plays the DISC already inserted in the CD Player.
<input checked="" type="radio"/>	CD	If the DISC inserted in the CD Player is either a CD or MP3 DISC, then the CD or MP3 will be played.
<input checked="" type="radio"/>	CD track <1 to 665>	If the DISC inserted in the CD Player is a CD, then CD Mode will start and plays the desired track.
<input type="radio"/>	Track <1 to 665>	Plays the desired track.
<input type="radio"/>	Next track	Plays the next track.
<input type="radio"/>	Previous track	Plays the previous track.
<input type="radio"/>	Scan	Scans all tracks on the CD DISC.
<input type="radio"/>	Repeat track	Repeats the current playing track.
<input type="radio"/>	Random	Plays the tracks of the CD DISC in random order.
<input type="radio"/>	Normal play	Turns off the Scan, Repeat, and Random functions.

PART 5 VOICE COMMAND SYSTEM

MP3

	Command	Operation
<input checked="" type="radio"/>	DISC	Plays the DISC already inserted into the CD Player.
<input checked="" type="radio"/>	CD	If the DISC inserted in the CD Player is either a CD or MP3 DISC, then the CD or MP3 will be played.
<input checked="" type="radio"/>	MP3	If the DISC inserted in the CD Player is an MP3 DISC, then the MP3 will be played.
<input type="radio"/>	Next file	Plays the next file.
<input type="radio"/>	Previous file	Plays the previous file.
<input type="radio"/>	Next folder	Plays the first file in the next folder.
<input type="radio"/>	Previous folder	Plays the first file in the previous folder.
<input type="radio"/>	Scan	Scans all files within the MP3 DISC.
<input type="radio"/>	Folder Scan	Plays all songs in the folder in which the current playing file is located for 10 seconds each.
<input type="radio"/>	Repeat File	Repeats the current playing file.
<input type="radio"/>	Repeat Folder	Repeats all tracks within the current playing folder.
<input type="radio"/>	Random	Plays all files within the MP3 DISC in random order.
<input type="radio"/>	Random Folder	Plays all files within the current playing folder in random order.
<input type="radio"/>	Normal play	Turns off the Scan, Repeat, and Random functions.

USB MP3

Command		Operation
<input checked="" type="radio"/>	USB	If the USB has been connected to the device, plays the MP3 files within the USB.
<input type="radio"/>	Next file	Plays the next file.
<input type="radio"/>	Previous file	Plays the previous file.
<input type="radio"/>	Next folder	Plays the first chapter of the next folder.
<input type="radio"/>	Previous folder	Plays the first chapter of the previous folder.
<input type="radio"/>	Scan	Scans all files within the USB.
<input type="radio"/>	Folder Scan	Plays all songs in the folder in which the current playing file is located for 10 seconds each.
<input type="radio"/>	Repeat File	Repeats the current playing file.
<input type="radio"/>	Repeat Folder	Repeats all songs within the current playing folder.
<input type="radio"/>	Random	Plays all files within the USB in random order.
<input type="radio"/>	Random Folder	Plays all files within the current playing folder in random order.
<input type="radio"/>	Normal play	Turns off the Scan, Repeat, and Random functions.

PART 5 VOICE COMMAND SYSTEM

USB IMAGE

Command		Operation
<input checked="" type="radio"/>	USB	If the USB IMAGE has been connected to the device, plays the image files within the USB.
<input type="radio"/>	Next Image	Moves to the next Image.
<input type="radio"/>	Previous Image	Moves to the previous Image.
<input type="radio"/>	Next folder	Moves to the next folder.
<input type="radio"/>	Previous folder	Moves to the previous folder.

iPod

Command		Operation
<input checked="" type="radio"/>	iPod	Plays the songs within the iPod if the iPod has been connected to the device.
<input type="radio"/>	Next song	Plays the next song.
<input type="radio"/>	Previous song	Plays the previous song.
<input type="radio"/>	Repeat song	Repeats the current playing song.
<input type="radio"/>	Random	Plays all songs within the iPod in random order.
<input type="radio"/>	Random Album	Plays all songs within the current playing album in random order.
<input type="radio"/>	Normal play	Turns off the Repeat and Random functions.

Others

Command		Operation
●	Line in	Plays the unit connected with the AUX terminal.
●	Audio on	Turns on the Audio/Video.
●	Audio off	Turns off the Audio/Video.

Command list of Phone

Command		Operation
●	Call Name	Makes the call to the name.
●	Dial Number	makes the call to the number.
●	Redial	The recently called number is redialed.
●	Recent Calls	The user can select a number from the outgoing, incoming, and missed calls.

PART 5 VOICE COMMAND SYSTEM

Command list of Navigation system

Navigation commands will operate only agreeing to the terms and conditions for the Navigation system.

Map

Command		Operation
●	Map Current location	Displays the current position of the vehicle.
●	Zoom In	Decreases the map zoom by one level.
●	Zoom Out	Increases the map zoom by one level.
●	Zoom minimum	Displays the map screen in the maximum zoom level.
●	Zoom maximum	Displays the map screen in the minimum zoom level.
●	Zoom level <1 to 14>	Displays the map in the zoom level selected from the 14 levels.
●	Zoom <scale factor>	Displays the map in the corresponding zoom.
	150 feet / 50 meters 300 feet / 100 meters 700 feet / 200 meters 0.25 miles / 400 meters 0.5 miles / 800 meters 1 mile / 1.6 kilometers 2 miles / 3.2 kilometers 4 miles / 6.4 kilometers 8 miles / 12 kilometers 16 miles / 25 kilometers 32 miles / 50 kilometers 64 miles / 100 kilometers 130 miles / 200 kilometers 250 miles / 400 kilometers (ex.Zoom 0.25 miles, zoom 400 meters)	

Command		Operation
<input type="radio"/>	North up	Displays the map in North Up mode.
<input type="radio"/>	Heading up	Displays the map in Heading Up mode.
<input type="radio"/>	Show <POI name> (ex. Show ATM)	Displays the selected POI categories. 🔗 [POI Category list], page 5-17.
<input type="radio"/>	Hide <POI name> (ex. Hide ATM)	Hides the selected POI categories. 🔗 [POI Category list], page 5-17.
<input type="radio"/>	Hide all	Hides all POI categories.
<input type="radio"/>	Daylight mode	Converts the map display into daylight mode.
<input type="radio"/>	Night mode	Converts the map display into night mode.
<input type="radio"/>	Auto mode	Converts the map display is between daylight/night modes automatically.

Destination

Command		Operation
<input checked="" type="radio"/>	Find address	Sets the destination through address search for route guidance.
<input checked="" type="radio"/>	Find nearest POI	Sets a POI near the current position as the destination for route guidance through POI category search.
<input checked="" type="radio"/>	Find nearest <POI name>	Sets a POI near the current position as the destination by directly inputting the POI name for route guidance. 🔗 [POI Category list], page 5-17.
<input checked="" type="radio"/>	Destination POI by phone number	Sets the destination by searching the phone number of the facility.
<input checked="" type="radio"/>	Find Emergency <Category> (ex. Find Emergency Hospital)	Searches for an emergency facility which is nearby the current position and sets it as the destination for route guidance. Emergency facilities are police stations, hospitals, and dealerships.
<input checked="" type="radio"/>	Destination by address book	Sets one of the list of previously registered addresses in the address book for the user as the destination.

PART 5 VOICE COMMAND SYSTEM

Destination

Command		Operation
<input checked="" type="radio"/>	Previous destination	Sets one of the previous destination as the current destination.
<input checked="" type="radio"/>	Previous start point	Sets the previous start point as the current destination.
<input checked="" type="radio"/>	Go home	Sets the previously registered home address as the destination for route guidance.
<input checked="" type="radio"/>	Destination by memory point <1 to 5>	Sets a previously registered memory point as the destination for route guidance

Route

Command		Operation
<input checked="" type="radio"/>	Cancel route	Deletes the designated destination and terminates the route guidance.
<input checked="" type="radio"/>	Repeat voice guidance	Repeats the route guidance.
<input checked="" type="radio"/>	Detour <1 or 2 or 5 or 10> miles	Searches detour routes within a <1 2 5 10> mile radius.
<input checked="" type="radio"/>	Detour <1 or 2 or 5 or 10> kilometers	Searches detour routes within a <1 2 5 10> kilometer radius.
<input checked="" type="radio"/>	Replan recommended route	Recalculates the route with the recommended route.
<input checked="" type="radio"/>	Replan shortest route	Recalculates the route with the shortest route.
<input checked="" type="radio"/>	Distance to destination	Reports the remaining distance until destination by voice.
<input checked="" type="radio"/>	Time to destination	Reports the remaining time until destination by voice.
<input type="radio"/>	View route	If the destination has been set, displays the whole route screen until the destination.
<input type="radio"/>	Start guidance	Sets the scroll mark displayed on the map as the destination and starts route guidance.

Others

Command		Operation
●	Voice guidance on	Turns the Voice Guidance On.
●	Voice guidance off	Turns the Voice Guidance Off.
●	Voice guidance louder	Increases the Voice Guidance volume by 1 level.
●	Voice guidance softer	Decrease the Voice Guidance volume by 1 level.
●	Store marked location to <text tag> (ex. Store marked location to user 1)	Registers the selected location into the selected Address book.

PART 5 VOICE COMMAND SYSTEM




POI Category list


All restaurants	Car Wash	Home Specialty Store	Court House
Fast Food restaurant	Motorcycle Dealership	Clothing shop	Fire Department
American restaurant	All Travel	Shoe Store	Convention Center
French restaurant	Airport	Pharmacy	City Hall
Italian restaurant	Hotel	All Recreation	Civic Center
Continental restaurant	Tourist Information	Amusement Park	School
Mexican restaurant	Travel Agent	Museum	Government Offices
Japanese restaurant	Tourist Attraction	Cinema	Waste & Sanitary
Chinese restaurant	City Cnter	Sports Activities	Utilities
Korean restaurant	Rental Car Agency	Sports Complex	All Services
Vegetarian Food restaurant	Campground	Golf Course	Hospital
Seafood restaurant	Ferry Terminal	Winery	Dentist
Latin American restaurant	Bus Station	Video & Game Rental	Photography
Asian restaurant	Local Transit	Ski Resort	Tax Service
African restaurant	Train Station	Recreation Area	Medical Service
Coffee Shop	All Shopping	Other Recreation	Attorney
Other restaurants	Department Store	All Financial Service	Funeral Director
All automotive	Convenience Store	Bank	Hair & Beauty
Hyundai Dealership	Shopping Center	ATM	Cleaning & Laundry
Gas Station	Music Store	Check Cashing Service	Social Service
Parking	Grocery Store	Money Transfer	Physician
Auto service	Bookstore	Business Facility	Communication services
Road Assistance	Electronics Store	All Community	Tailor & Alteration
Automobile Dealership	Hardware Store	Police Station	Mover services
Auto Parts	Gifts shop	Post Office	
Rest Area	Sporting Goods store	Library	

Searching destination by voice command


Find address

Sets the destination through address search for route guidance.


1. Press the  key on the steering remote control.
2. Once the  icon changes into the  icon on the pop-up screen with a beep sound, say "Find address".

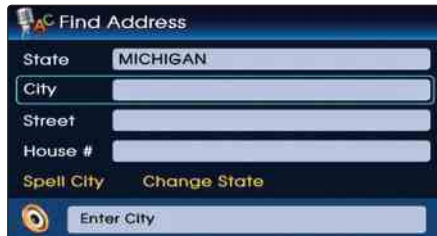

3. Say "Change state" to change the state.

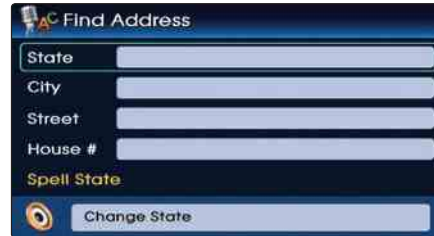


4. Say the state name.

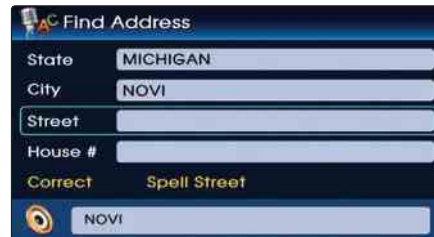

5. Say the city name.



6. Say the street name.

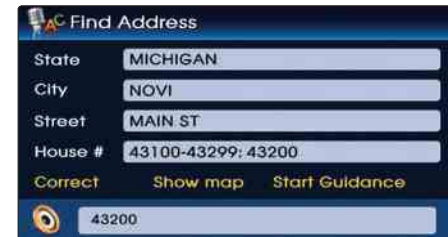

7. Say the House number. Here, the range which can be inputted will be displayed.

8. Say "Start guidance" if guidance to the selected position is desired, or say "Show map" to verify the location of the selected position on the map.

PART 5 VOICE COMMAND SYSTEM


i INFORMATION

Spell recognition



- It is possible to search the state, city, street names through the text line inputted by the user.
- To enter spell search mode, say the "Spell state, city, street names" command as displayed on the screen.
- Text lines can be inputted continuously.

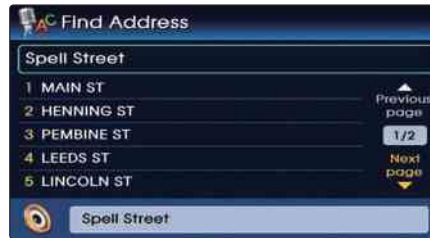


Pick-List(n-best list)




- If there are more than one voice result, then a pick-list which can be selected by the user will be displayed.
- There may be more than one list page. The desired page can be viewed by using commands such as "next page" or "previous page".
- Here, the "Line + number" voice command can be used to select the desired result, such as "Line one". Pressing the desired result is not supported.
- Also, selectable areas will be highlighted in yellow, allowing the user to easily see which results can be selected.


Find nearest POI

Sets a POI near the current position as the destination for route guidance through POI category search.

1. Press the  key on the steering remote control.
2. Once the  icon changes into the  icon on the pop-up screen with a beep sound, say "find nearest POI".

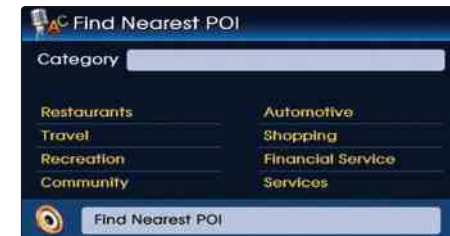


3. Select the desired main category.

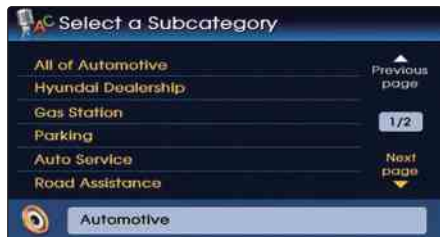

4. Select the desired sub category.



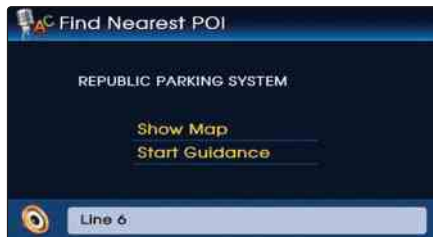


5. Select the desired POI from the list and say the line number for the corresponding menu. Ex) "Line 1".



6. Say "Start guidance" if guidance to the selected position is desired, or say "Show map" to verify the location of the selected position on the map.

Find nearest <POI name>


Sets a POI near the current position as the destination by directly inputting the POI name for route guidance.

1. Press the  key on the steering remote control.
2. Once the  icon changes into the  icon on the pop-up screen with a beep sound, say "Find nearest Parking".



3. Select the desired POI from the list and say the line number for the corresponding menu. Ex) "Line 1".

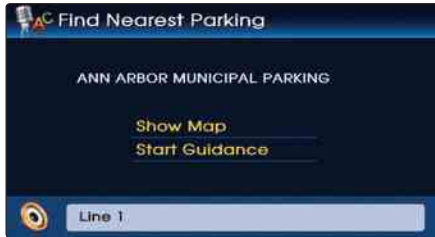


PART 5 VOICE COMMAND SYSTEM




4. Say "Start guidance" if guidance to the selected position is desired, or say "Show map" to verify the location of the selected position on the map.

Destination POI by phone number

Sets the destination by searching the phone number of the facility.


1. Press the  key on the steering remote control.
2. Once the  icon changes into the  icon on the pop-up screen with a beep sound, say "Destination POI by Phone number".

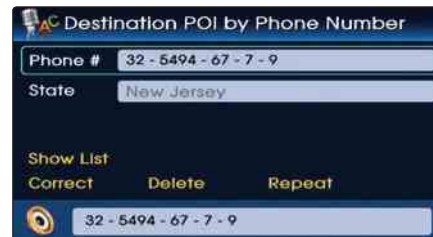

3. Input the 10 numbers for the phone number.

INFORMATION

Continuous recognition of phone numbers is possible, and the recognized result will be displayed in block units. To correct a block unit, say "correct". To delete the entire result, say "delete". To have the input read back, say "repeat".

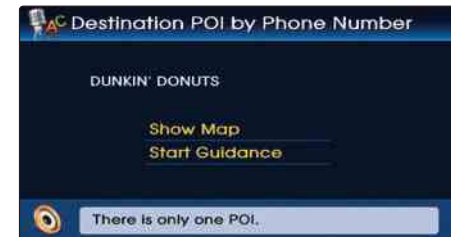

4. Say "Show list" to view the resulting search list.



5. Select the desired location from the list and say the line command.



6. Say "Start guidance" if guidance to the selected position is desired, or say "Show map" to verify the location of the selected position on the map.


Find emergency <Category> :

Searches for an emergency facility which is nearby the current position and sets it as the destination for route guidance. Emergency facilities are police stations, hospitals, and dealerships.

1. Press the key on the steering remote control.
2. Once the icon changes into the icon on the pop-up screen with a beep sound, say the voice command.
ex)"Find emergency hospital"



3. Select the desired location from the list and say the line command.

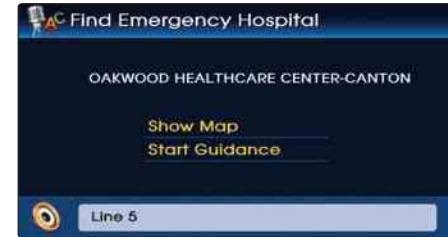




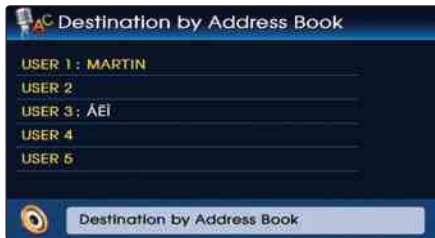
4. Say "Start guidance" if guidance to the selected position is desired, or say "Show map" to verify the location of the selected position on the map.

PART 5 VOICE COMMAND SYSTEM


Destination by address book

Sets one of the list of previously registered addresses in the address book for the user as the destination.


1. Press the  key on the steering remote control.
2. Once the  icon changes into the  icon on the pop-up screen with a beep sound, say "Destination by address book".



3. Select the desired user name (Address book name).

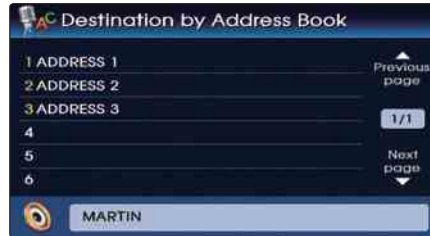

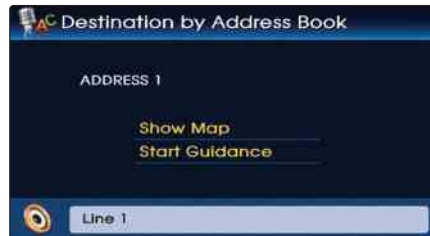


4. Select the desired location from the list and say the line command.



5. Say "Start guidance" if guidance to the selected position is desired, or say "Show map" to verify the location of the selected position on the map.


Previous destination

Sets one of the previous destination as the current destination.

1. Press the  key on the steering remote control.
2. Once the  icon changes into the  icon on the pop-up screen with a beep sound, say "Previous destination".



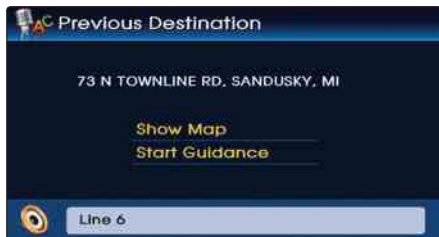


3. Select the desired location from the list and say the line command.




4. Say "Start guidance" if guidance to the selected position is desired, or say "Show map" to verify the location of the selected position on the map.

Previous start point

Sets the previous start point as the current destination.

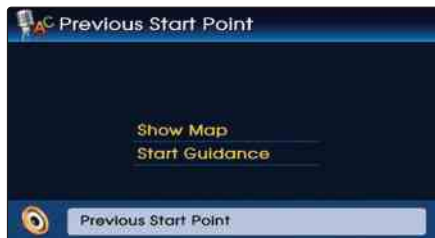


1. Press the  key on the steering remote control.
2. Once the  icon changes into the  icon on the pop-up screen with a beep sound, say "Previous start point".



3. Say "Start guidance" if guidance to the selected position is desired, or say "Show map" to verify the location of the selected position on the map.




Go home

Sets the previously registered home address as the destination for route guidance.

1. Press the  key on the steering remote control.
2. Once the  icon changes into the  icon on the pop-up screen with a beep sound, say "Go home".

Destination by memory point <1 to 5>

Sets a previously registered memory point as the destination for route guidance.

1. Press the  key on the steering remote control.
2. Once the  icon changes into the  icon on the pop-up screen with a beep sound, say "Destination by memory point 1".

PART 6 Bluetooth® HANDSFREE

PART 6 Bluetooth® HANDSFREE

Before using the Bluetooth®

Handsfree	6-2
What is Bluetooth®?	6-2
Functions supported by Bluetooth® Handsfree	6-2

Converting Bluetooth® Handsfree

mode	6-2
Converting from Audio/Navigation mode to Bluetooth® Handsfree mode	6-2
Converting from Bluetooth® Handsfree mode to Audio/Navigation mode	6-3

Pairing and connecting a Bluetooth®

phone	6-4
Pairing a mobile phone	6-4
Deleting a paired phone	6-6
Connecting a mobile phone	6-7
Disconnecting a mobile phone	6-8

Bluetooth® Handsfree screen layout 6-9

Bluetooth® Handsfree screen and functions	6-9
When there is no mobile phone connected	6-9
When a mobile phone is connected ...	6-9
When receiving an incoming call	6-10
When already on a call	6-10
When there is a call waiting	6-10

Making a call 6-11

Making a call by dialing a phone number	6-11
Making a call from Speed Dial	6-11
Making a call by redialing	6-12

Answering a call 6-13

Answering an incoming call	6-13
Rejecting an incoming	6-13

Operating menus during a call 6-14

Switching call to the mobile phone	6-14
Activating Call waiting	6-14
Ending a call	6-15

Phone Book 6-16

Making a call from the Phone book	6-16
Searching the Phone Book.....	6-17
Searching by name	6-17
Searching by number	6-18

Call History List..... 6-19

Making a call from Call history	6-19
Sorting call history	6-19
Dialed number	6-20
Received number	6-20
Missed number	6-20

PART 6

Bluetooth® HANDSFREE

Phone Music 6-21

- Before playing Phone music 6-21
- Starting Phone Music 6-21
- Phone music screen layout 6-22
- Selecting Phone music files 6-23

Bluetooth® settings 6-24

- Pairing and connecting a mobile phone ... 6-24
- Setting mobile phone auto connect
priority 6-24
- Setting Handsfree volume 6-25
- Setting Audio streaming 6-25
- Advanced settings 6-26
 - Setting Contacts Auto Download (Sync) ...6-27
 - Searching and modifying my device
properties 6-27
 - Changing passkey 6-28
 - Deleting all paired phones 6-28
 - Initializing Bluetooth® handsfree 6-29

Important information 6-30

- About pairing mobile phones 6-30
- About making/answering phone calls ... 6-31
- About Bluetooth® device environment... 6-31
- Mobile Phone Compatibility 6-32



PART 6 Bluetooth® HANDSFREE

Before using the Bluetooth® Handsfree

What is Bluetooth®?

- Bluetooth® allows wireless transmission of information between PC, mobile phones, headsets, PDAs, printers and other devices within close ranges by using 2.45Ghz frequency short-distance wireless telecommunication technologies.
- Within this vehicle, users can make hands-free calls, transmit mobile phone data, and play audio streaming files by connecting a mobile phone with the system.



Bluetooth® is a trademark owned by Bluetooth® SIG, Inc.

Functions supported by Bluetooth Handsfree



- Pairing mobile phones (Up to 5 phones)
- Connecting/disconnecting mobile phones
- Making/Answering phone calls
- Downloading a Phone Book
- Downloading a Call history list
- Playing music saved in a Bluetooth® phone in the vehicle

Some functions may not be supported in some mobile phone.

Converting Bluetooth® Handsfree mode

Converting from Audio/Navigation mode to Bluetooth® Handsfree mode



1. While in Audio mode or Navigation mode, press the  key or the  key on the steering remote control remot.





2. The system will change to Bluetooth® Handsfree mode and display the PHONE screen.




3. The following screen will become displayed if no mobile phone has been connected.

Converting from Bluetooth® Handsfree mode to Audio/Navigation mode



1. While in Bluetooth® Handsfree mode, press an Audio/Navigation mode key, such as **FM/AM** or **MAP VOICE**.

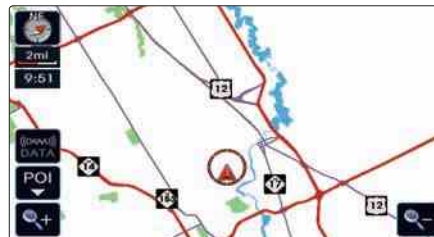

2. The corresponding mode will be displayed.


i INFORMATION

Most of the functions of the Audio or SETUP modes are not supported while on a Bluetooth® Handsfree call. The call volume and Navigation (MAPVOICE, DEST, ROUTE) screens can be operated.


PART 6 Bluetooth® HANDSFREE

Pairing and connecting a Bluetooth® phone

Pairing a mobile phone

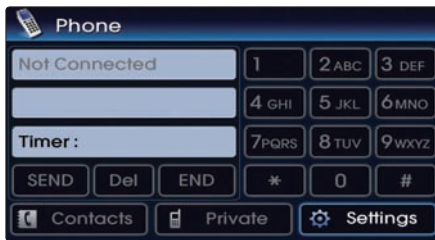

1. Press the **Settings** button on the PHONE screen.

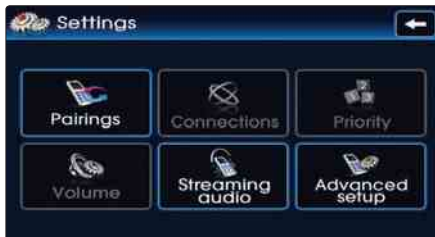

2. Press the **Pairings** button on the Settings screen.



3. The list of currently paired phones will be displayed. Press the **Add to** button to pair a new mobile phone.

i INFORMATION

For safety reasons, pairing a Bluetooth® phone is not possible when the vehicle is in motion. Park the vehicle in a safe location to pair a new phone. It is possible to pair up to five mobile phones. In order to pair a new phone when there are already five mobile phones paired, you must first delete one of the previously paired phones.



4. From the Bluetooth® device list within the mobile phone, add the car handsfree. The default name of the car system is ELANTRA.

For more information on registering Bluetooth® devices from the mobile phone, please refer to the mobile phone user's manual.

i INFORMATION

While conducting a Bluetooth® device search from the mobile phone, operating to another screen will prevent the car handsfree from being found in the mobile phone. Always conduct searches for Bluetooth® devices with the Search Bluetooth® device screen displayed.



5. When pairing the car handsfree from the mobile phone, a passkey input window will become displayed on the mobile phone screen. Input the passkey set within the car system into the mobile phone input window. (The factory state passkey is 0000.) As shown in the figure, once the passkey becomes successfully inputted, the Bluetooth® connection between the car system and mobile phone will start.



6. Once Bluetooth® connection is successful, the name of the connected mobile phone will become displayed on the PHONE screen and Bluetooth® handsfree functions will operate.

i INFORMATION

Some functions may not be supported due to limited Bluetooth® compatibility between the car system and mobile phone.

PART 6 Bluetooth® HANDSFREE

Deleting a paired phone



1. Press the **Settings** button on the PHONE screen.



2. Press the **Pairings** button on the Settings screen.



3. The list of currently paired phones will be displayed. Select the phone you wish to delete from the list and press the **Delete** button.




4. A pop-up asking whether you wish to delete the paired phone will be displayed. Press the **Yes** button to delete the paired phone and the **No** button to cancel.

⚠ CAUTION!


A mobile phone cannot be deleted if it is currently connected to the car system.

To delete the phone, first disconnect the mobile phone and try again.

Connecting a mobile phone

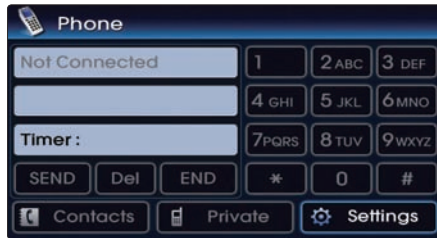

1. Press the **Settings** button on the PHONE screen.

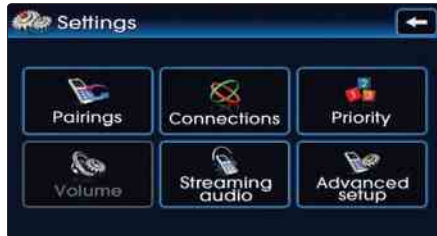

2. Press the **Connections** button on the Settings screen.



3. The list of currently paired phones will be displayed. Select the phone you wish to connect from the list and press the **Connect** button.

i INFORMATION

When there are no paired phones, pair the mobile phone through [Settings>Pairings>Add to]. For more information on pairing mobile phones, refer to the user's manual [Pairing and Connecting a Bluetooth® phone > Pairing a mobile phone].



4. The Bluetooth® connection between the car system and mobile phone will start.



5. Once Bluetooth® connection is successful, the name of the connected mobile phone will become displayed on the PHONE screen and Bluetooth® handsfree functions will operate.

PART 6 Bluetooth® HANDSFREE



4. If the connection between the mobile phone and Bluetooth® fails, the following pop-up will be displayed. If problems occur while connecting Bluetooth®, check for the following conditions.

- Whether the mobile phone you wish to connect is in the vicinity of the car system
- Whether the power of the mobile phone Bluetooth® has been turned off
- Whether the mobile phone Bluetooth® has been set to hidden state
- Whether there are Bluetooth® compatibility issues between the car system and another mobile phone

Disconnecting a mobile phone



1. Press the **Settings** button on the PHONE screen.



2. Press the **Connections** button on the Settings screen.



3. The list of currently paired phones will be displayed. Select the phone you wish to disconnect from the list and press the **Disconnect** button.




4. pop-up asking whether you wish to disconnect the mobile phone will be displayed. Press the **Yes** button to disconnect the mobile phone and the **No** button to cancel.

Bluetooth® Handsfree screen layout


Bluetooth® Handsfree screen and functions

When there is no mobile phone connected

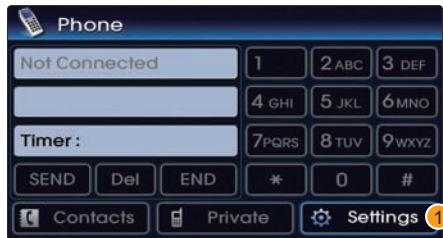

- 1 Settings : the user can set desired settings for the Bluetooth® handsfree, such as pair/delete mobile phone, connect/ disconnect mobile phone, set call volume, change device name and change passkey.

When a mobile phone is connected

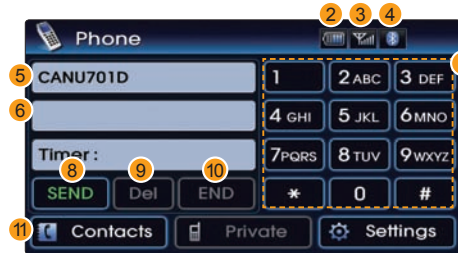

- 2 Phone battery charge status : displays the battery charge status of the connected mobile phone. The battery charge status may not be displayed in some mobile phones.
- 3 Signal strength : displays the mobile phone signal strength. The signal strength may not be displayed in some mobile phones.
- 4 Bluetooth® connection state : becomes displayed when a Bluetooth® phone has been connected with the car system.
- 5 Name of connected mobile phone : displays the name of the connected mobile phone.

- 6 Phone number input window : displays the inputted phone number.
- 7 Dial : input the phone number through the dial pad.
- 8 SEND : if a number has not been entered into the phone number input window, Pressing the send button displays the call history list screen.
- 9 Del : deletes the inputted number one digit at a time.
- 10 END : if a number has been inputted, then erases the entire number.
- 11 Contacts : displays the phone book screen. The user can search previously saved phone numbers. The phone contact list may not be displayed in some mobile phones.

PART 6 Bluetooth® HANDSFREE

When receiving an incoming call



- 12 Accept : accepts the incoming call.
- 13 Reject : rejects the incoming call.


When already on a call



- 14 Busy icon : when already on a call, displays an icon shaped like a receiver.

- 15 Name of incoming caller : displays the name of incoming caller. The name of the incoming caller will not be displayed if the caller's phone number has not been previously registered in the phone book.
- 16 Number of incoming caller : displays the number of the incoming caller.
- 17 Call state : displays the call state, such as talk time, phone connection, and end time.
- 18 END : ends the call.
- 19 Private : when talking on the car hands-free, use this function to switch the call to the mobile phone.



- 20 Mute : use this function to mute the outgoing volume. Pressing the **Mute** button will display the  at the top right side of the screen and the caller will not be able to hear the conversation taking place in the car. Press the **Mute** button again to release the Mute function.

When there is a call waiting



- 21 Switch : use this button to switch between callers when there are calls on call waiting.
- 22 END : use this button to end the calls with all callers.


Making a call

Making a call by dialing a phone number




1. Use the number pad on the right side of the PHONE screen to input the number you wish to call.



2. Press the **SEND** button or the  key on the steering remote control to make the call.

i INFORMATION

To modify, press the **Del** button to delete the inputted number one digit at a time.

Press the **END** button or the  key on the steering remote control to cancel the call.

Making a call from Speed Dial



1. Use the number pad on the right side of the PHONE screen to input a speed dial number.


i INFORMATION

Only speed dial numbers already stored on the mobile phone can be used for speed dial calls.

Up to 2-digit speed dial numbers are supported.

PART 6 Bluetooth® HANDSFREE




2. Press the **SEND** button or the  key on the steering remote control to make the call.

INFORMATION

For 2-digit speed dial numbers, press and hold the 2nd digit to make a call to the speed dial number.

Making a call by redialing



1. Press and hold (over 0.8 second) the **SEND** button on the PHONE screen or the  key on the steering remote control.

INFORMATION

Redialing is not possible when there is no call history or the call history list is being downloaded from the mobile phone. When there is no call history list, the **SEND** button will be inactive.




2. The recently called number is redialed.

INFORMATION

It is not possible to display the Audio mode and Settings screen when on a phone call. Only the call volume and Navigation (MAPVOICE, DEST, ROUTE) screens can be operated.


Answering a call

Answering an incoming call

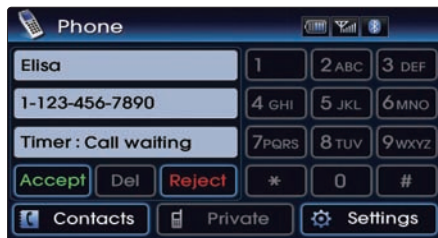


1. The following screen will be displayed when you receive an incoming call.





2. To answer the incoming call, press the **Accept** button or the  key on the steering remote control.

Rejecting an incoming

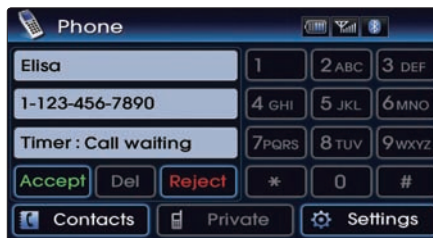

1. The following screen will be displayed when you receive an incoming call.

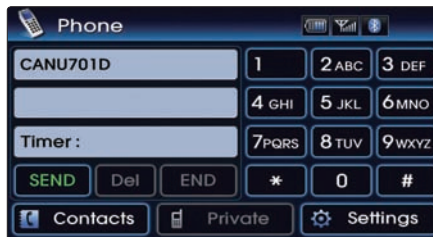

2. To reject the incoming call, press the **Reject** button or the  key on the steering remote control. The incoming call will be rejected.

i INFORMATION


Upon receiving a call, the [Reject] function may not be supported in some mobile phones.

PART 6 Bluetooth® HANDSFREE

Operating menus during a call

Switching call to the mobile phone




1. If you wish to switch the call to the mobile phone while talking on the car handsfree, press the **Private** button or press and hold (over 0.8 second) the  key on the steering remote control.




2. As shown, the call will be switched to the mobile phone.


INFORMATION


If you wish to switch the call to the car handsfree while talking on the mobile phone, press the **Use handsfree** button or press and hold (over 0.8 second) the  key on the steering remote control. The call will be switched to the car handsfree.

Activating Call waiting




1. If another person calls while already on a call, the following screen will be displayed.
2. Press the **Accept** button or the  key on the steering remote control to receive the incoming call by switching to the new caller.

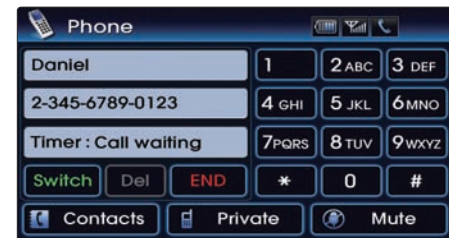


3. To switch again to the other caller, press the **Switch** button or the  key on the steering remote control. The other call will be received and the previous call will switch back to call waiting.


i INFORMATION

Press the **End** button or the  key on the steering remote control to end the current call and call waiting.

Ending a call



1. To end a call, press the **End** button or the  key on the steering remote control.

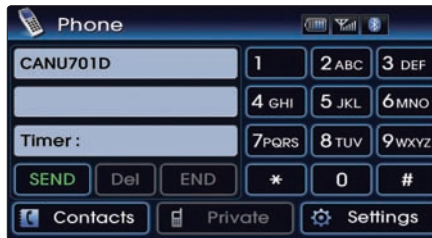

2. The call will be ended.

PART 6 Bluetooth® HANDSFREE

Phone Book

Making a call from the Phone book



1. Press the **Contacts** button on the PHONE screen.



2. The phone book list will be displayed.

i INFORMATION

- The system may begin to slow down when downloading the phone book in some mobile phones.



- Upon connecting a mobile phone, the phone book lists saved in the mobile phone will automatically be downloaded (Maximum 1000 entries). The phone book download function may not be supported in some mobile phones.
- If you do not wish to automatically download the mobile phone contacts to the vehicle, turn the Contacts Sync setting OFF. (Phone>Settings>Advanced setup>Contacts Sync)



3. Select the number you wish to call from the phone book list and press the **SEND** button.



4. The call will be made to the selected number.

i INFORMATION

- When there are more than 2 numbers saved in one phone number list, if the list is repeatedly selected, the registered phone numbers will be displayed sequentially on the list.
- The Mobile Phone/Office/Home categories received via the mobile phone may differ from the information actually stored in the mobile phone.
- Select the phone number you wish to connect by repeatedly selecting the phone number list and press the **SEND** button to make the call to the selected number.

Searching the Phone Book



1. Press the **Contacts** button on the PHONE screen.



2. Press the **Search** button on the Contacts screen.



3. Phone numbers can be searched by either **Search by name** or **Search by number**. From the two methods, select the search method you wish to use.

Searching by name



1. Press the **Search by name** button on the Phonebook search screen.

PART 6 Bluetooth® HANDSFREE




2. Input the name you wish to search and press the **Done** button.



3. The search results will be displayed on the screen.

Searching by number

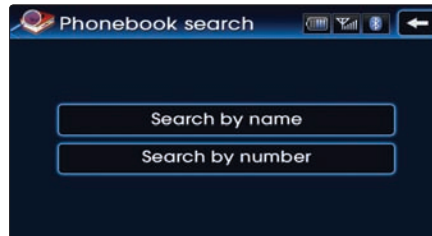

1. Press the **Search by number** button on the Phonebook search screen.



2. Input the phone number you wish to search and press the **Done** button.




3. The search results will be displayed on the screen.

Call History List

Making a call from Call history



1. Press the **SEND** button on the PHONE screen or press the  key on the steering remote control.



2. The call history list will be displayed. Select the number you wish to call from the call history list and press the **SEND** button.



3. The call will be made to the selected number.

Sorting call history



1. The call history can be displayed by sorting the incoming calls, outgoing calls and missed calls.
2. When pressing the **Diald**, **Received**, or **Missed** button, the corresponding call history list will be displayed.

PART 6 Bluetooth® HANDSFREE

Dialed number



Missed number



Received number



i INFORMATION

If there are no entries saved in the **Dialed**, **Received**, or **Missed** lists, the corresponding button will be inactive. Up to 20 entries can be saved in each list.

Phone Music

Before playing Phone music

Music saved in the mobile phone can be played in the car through Bluetooth® audio streaming.

Phone music can be played only when a Bluetooth® phone has been connected. To play phone music, connect the Bluetooth® phone to the car system. For more information on connecting Bluetooth®, please refer to the user's manual [Pairing and Connecting a Bluetooth® phone].

If the Bluetooth® is disconnected while playing phone music, the music will be discontinued.


The audio streaming function may not be supported in some mobile phones.

Only one function can be used at a time between the Bluetooth® handsfree or Phone music function.

For example, if you convert to the Bluetooth® handsfree while playing Phone music, the music will be discontinued.

Playing music from the car is not possible when there are no music files stored in the mobile phone.

Starting Phone Music

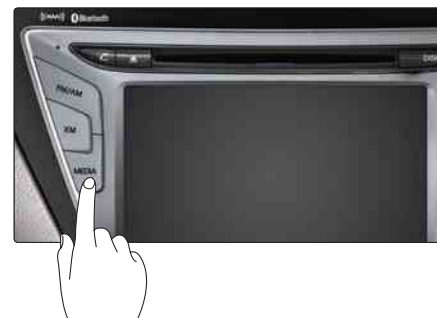

1. Repeatedly press the **MEDIA** key on the front panel or the **MODE** key on the steering remote control to enter Phone music mode.

PART 6 Bluetooth® HANDSFREE

i INFORMATION

Each press of the **MEDIA** key on the front panel will change the function in the order of DISC → USB or iPod → AUX → Phone Music → DISC ...

Each press of the **MODE** key on the steering remote control will change the audio mode in the order of FM1 → FM2 → AM → XM1 → XM2 → XM3 → DISC → USB or iPod → AUX → Phone Music → FM1...

It is not possible to enter Phone music mode if the mobile phone is not connected or if the audio streaming setting within Bluetooth® handsfree settings has been set to [Disable streaming audio].

For more information on audio streaming setting, please refer to the user's manual [Bluetooth® settings > Setting Audio streaming].



2. The Phone music screen is displayed.

i INFORMATION

While music saved in the mobile phone will automatically begin playing after converting to the Phone music screen, this music player function may not be supported in some mobile phones.

If music does not begin playing even after converting to the Phone music screen, try starting the music directly from the mobile phone.




Phone music screen layout



- 1 Information Bar : displays information for the currently playing song.
- 2 File Down button : plays the previous song.
- 3 Play/Pause button : plays/pauses the song.
- 4 File Up button : plays the next song.
- 5 Sound button : sets the FAD/BAL and BAS/MID/TRE.

Selecting Phone music files



1. Press the ,  buttons on the Phone music screen or the  keys on the system.

The previous or next song will be played each time the button or key is pressed.

INFORMATION

The file selection function may not be supported in some mobile phones.

PART 6 Bluetooth® HANDSFREE

Bluetooth® settings

Pairing and connecting a mobile phone

For more information on pairing and connecting a mobile phone, please refer to [Pairing and Connecting a Bluetooth® phone].

Setting mobile phone auto connect priority

i INFORMATION


After turning on the car ignition and the system is booted up, the Bluetooth® connection between the car system and mobile phone is automatically made.

The Bluetooth® connection will be conducted in the order of mobile phone priority.

The auto connect priority will be supported only for previously paired mobile phones.



1. Press the **Settings** button on the PHONE screen.

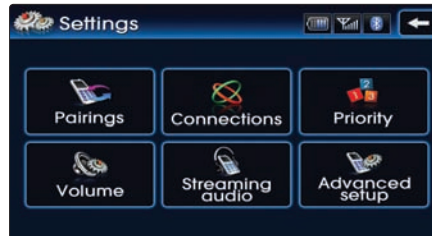

2. Press the **Priority** button on the Settings screen.



3. The paired mobile phone list and the mobile phone connection priority will be displayed.


When wishing to change the priority order, select the mobile phone from the list and use the **↑**, **↓** buttons to change its priority.

Press the **Done** button to save the changed mobile phone priority.

Setting Handsfree volume



1. Press the **Settings** button on the PHONE screen.

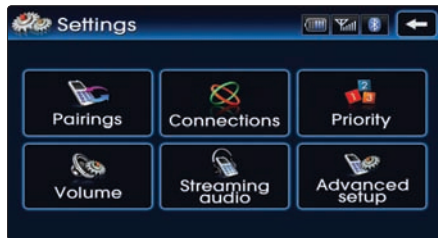

2. Press the **Volume** button on the Settings screen.

i INFORMATION

The Bluetooth® handsfree volume can be adjusted only when a mobile phone has been connected.

The **Volume** cannot be set if no mobile phone has been connected.



Use the **◀**, **▶** buttons to set the desired volume on the Phone volume screen. Press the **Done** button to save.

i INFORMATION


While on a call, turning the **VOL** knob to the left/right or pressing the **▲**, **▼** key on the steering remote control will also adjust the call volume.

Set the incoming call volume accordingly.

Setting Audio streaming



1. Press the **Settings** button on the PHONE screen.

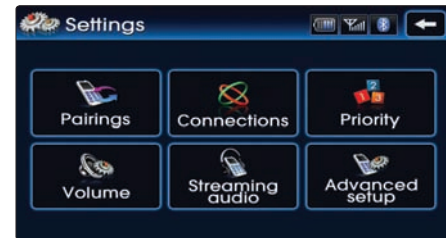

2. Press the **Streaming audio** button on the Settings screen.

PART 6 Bluetooth® HANDSFREE



3. Streaming audio setting is selected.

i INFORMATION

Enable streaming audio: repeatedly press the **MEDIA** key or the **MODE** key to enter Phone music mode. Phone music can be played through Bluetooth® audio streaming.

Disable streaming audio: even if the **MEDIA** key or the **MODE** key is repeatedly pressed, will not be available.

Phone music through Bluetooth® audio streaming is not supported.

Advanced settings

Bluetooth® advanced settings can be changed. Enter advanced settings through the following way.



1. Press the **Settings** button on the PHONE screen.



2. Press the **Advanced setup** button on the Settings screen.


i INFORMATION

For safety reasons, operation of Advance setup is not possible when the vehicle is in motion. Please park in a safe place to make changes to Advanced setup.




3. The Advanced setup screen will be displayed. In Advance setup, the following four settings can be made.

Setting Contacts Auto Download (Sync)

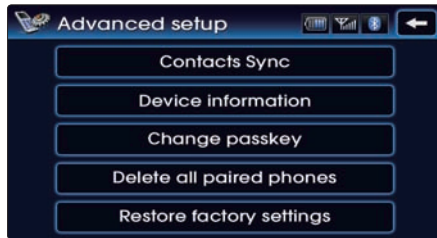

1. While in Advanced setup press the **Contacts Sync** button.

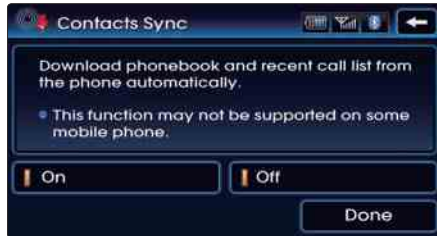


2. After turning Contacts Sync ON/OFF, press the **Done** button.

i INFORMATION

- If Contacts Sync is turned ON, the contacts and call history in your mobile phone will automatically be downloaded to the vehicle each time you connect a Bluetooth® device.

Searching and modifying my device properties

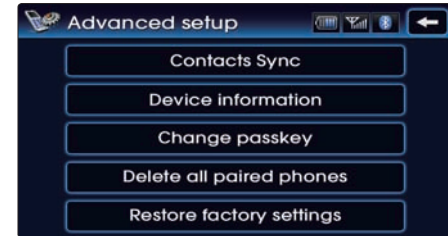

1. Press the **Device information** button on the Advanced setup screen.



2. Displays the Device information such as the name and address of the car system. To modify the device name, press the **Change name** button.

PART 6 Bluetooth® HANDSFREE




3. Use the key pad to input the Device name you wish to modify.



4. After inputting is complete, press the **Done** button to save.

Changing passkey

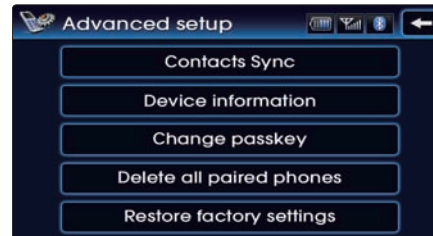

1. Press the **Change passkey** button on the Advanced setup screen.




2. Once the Change passkey screen is displayed, input the desired passkey and press the **Done** button.

i INFORMATION

The passkey is a 4-digit authentication code used for the Bluetooth® connection between the mobile phone and car system. The default passkey is set to 0000.

Deleting all paired phones

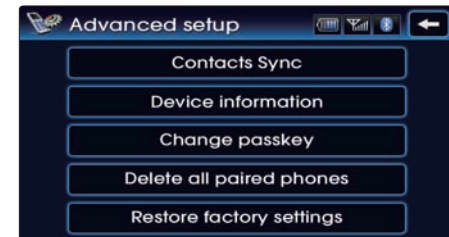

1. Press the **Delete all paired phones** button on the Advanced setup screen.




2. A pop-up asking whether you wish to delete all paired phone will be displayed. Press the **Yes** button to delete all paired phones or the **No** button to cancel.



3. If **Yes** button is pressed, all currently paired phones will be deleted.

Initializing Bluetooth® handsfree

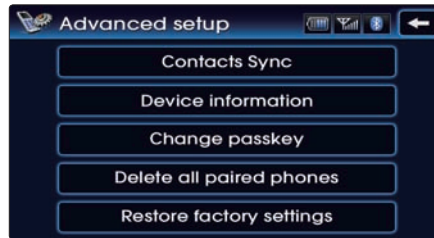

1. Press the **Restore factory settings** button on the Advanced setup screen.



2. A pop-up asking whether you wish to initialize the Bluetooth® handsfree will be displayed. Press the **Yes** button to initialize the Bluetooth® handsfree system and the **No** button to cancel.

i INFORMATION

Upon initializing the Bluetooth® handsfree, the entire paired phone list will be deleted and all Bluetooth® related settings will be restored to factory state.



3. If **Yes** is pressed, the Bluetooth® hands-free settings will be initialized.

Important information

About pairing mobile phones

Q. I cannot search for mobile phones through the car system. What is the cause?

A. Check to see whether the mobile phone you wish to connect supports Bluetooth® function. If your mobile phone supports Bluetooth®, check to see that whether the Bluetooth® settings in the mobile phone have been set to hidden state or if the Bluetooth® power has been turned off. If the device has been set to hidden, release the hidden state and if the Bluetooth® power has been turned off, turn the power ON and try searching again.

Q. What is the difference between pairing a mobile phone and connecting a mobile phone?

A. Pairing is the process of creating a secure communication connection between the mobile phone and the car Bluetooth® system.

Through a two-way passkey between the car system and mobile phones, up to 5 mobile phones can be paired with the car system. The paired mobile phone will remain paired with the car system until the user deletes it manually.

In addition, the call history lists and phone number books saved in each mobile phone will also be maintained until the paired phone is deleted. For more information on pairing mobile phones, please refer to the manual [Pairing and Connecting a Bluetooth® phone > Pairing a mobile phone].

Connecting a mobile phone to Bluetooth® by selecting the desired mobile phone from the paired phones.

Within the car system, only one Bluetooth® phone can be connected at one time.

For more information, please refer to the manual [Pairing and Connecting a Bluetooth® phone > Pairing a mobile phone].

Q.



A. What is a Passkey?

A passkey is an authentication code used for two-way communication of the car system and the mobile phone.



Only 4-digit numbers can be used as passkeys. Passkeys are registered only once when pairing the phone number for the first time. The factory-set passkey is 0000.

About making/answering phone calls

Q. How can I answer a call?

A. When you receive an incoming call, press the  key on the steering remote control or the **Accept** button on the PHONE screen to answer. To reject the incoming call, press the  key on the steering remote control or the **Reject** button on the PHONE screen.

Q. What should I do if I am talking on the Handsfree but wish to switch the call to the mobile phone?

A. To switch the call to the mobile phone, press the **Private** button on the PHONE screen or press and hold (over 0.8 second) the  key on the steering remote control. If you wish to switch the call back to the car handsfree, press the **Use handsfree** button on the PHONE screen or press and hold (over 0.8 second) the  key on the steering remote control.

About Bluetooth® device environment

Q. What is the range for Bluetooth® wireless connection?

A. The wireless connection range is within Approximately 30 feet.

Q. How many mobile phones can be paired?

A. It is possible to pair up to five phones with the car system.

Q. What is the reason why the call quality deteriorates?

A. First, check to see the signal strength of the mobile phone. The call quality may deteriorate when the signal strength is low. Call quality may also deteriorate if metal objects, such as drink cans, are placed near the mobile phone.

PART 6 Bluetooth® HANDSFREE

CAUTION!

Mobile Phone Compatibility

Depending on the manufacturer, product and product specification, some mobile phones functions may not be supported or may not operate to specification. Carefully read the cautions listed below.

- The occurrence of problems upon using mobile phones may be caused by the mobile phone and not by the Audio/Navigation Unit.
- Even mobile phones which support Bluetooth® function may not operate properly if the mobile phone connection has been locked. Release the connection lock and try connecting the mobile phone with the system again.
- The Mobile phone battery icon and signal strength icon may not be properly displayed depending on the type of mobile phone.
- Call waiting is supported only when the connected mobile phones support this feature. The call waiting pop-up may not be displayed in some mobile phones.
- Audio streaming mode will operate only when a Bluetooth® phone has been connected. Connecting or disconnecting a Bluetooth® phone while audio streaming is operating will stop music play.
- The audio streaming function may not be supported in some mobile phones.
- The phonebook may take a prolonged period of time to download or may not operate in some mobile phones.
- The quality of Bluetooth® handsfree calls may differ depending on the mobile phone.

PART 7
REAR CAMERA

About Rear Detection Camera 7-2

Operating sequence of the Rear Camera ... 7-2



PART 7 REAR CAMERA

About Rear Detection Camera

- This system has been equipped with a rear camera for user safety by allowing a wider rear range of vision.
- The rear camera will operate automatically when the ignition KEY is turned ON and the transmission lever is set to R. The rear camera will automatically stop operating when set to a different lever.

Operating sequence of the Rear Camera

1. Position the ignition key onto ACC or ON.
2. Position the transmission lever to R.



3. The rear camera mode will be displayed on the screen.

i INFORMATION

- The front/rear camera has been equipped with an optical lens to provide a wider range of vision and may appear different from the actual distance. Check the rear and left/right firsthand for user safety.
- The front/rear camera section pertains only to customers who have purchased this optional installation.

PART 8
APPENDIX

Troubleshooting guide	8-2
Before thinking the product has malfunctioned	8-2
Troubleshooting	8-3
Map legend	8-5
Road color	8-5
POI icons	8-5
Landmark icons	8-7
INDEX	8-8



PART 8 APPENDIX

Troubleshooting guide

Before thinking the product has malfunctioned

1. Errors which occur during the operation or installation of the device may be mistaken as a malfunction of the actual device.
2. If you are having problems with the device, try the suggestions listed below.
3. If the problems persist, contact your HYUNDAI dealer.

Problem	Function
There are small red, blue, or green dots on the screen	Because the LCD is manufactured with technology requiring high point density, a pixel deficiency or lighting may occur within 0.01% of total pixels.
The sound or image is not working	<ul style="list-style-type: none">• Has the Switch for the vehicle been turned to [ACC] or [ON]?• Has the SYSTEM been turned OFF?
The video is being displayed but sound is not working	<ul style="list-style-type: none">• Has the volume been set to a low level?• Has the volume been set on mute?
When the power is turned on, the corners of the screen are dark	<ul style="list-style-type: none">• The display looking somewhat darker after prolonged periods of use is a normal phenomenon with LCD panels. It is not a malfunction.• If the screen is very dark, contact your nearest HYUNDAI dealer for assistance.
Sound is working from only one speaker	Is the position of FAL/BAL sound controls or volume adjusted to only one side?
Sound and video does not work in AUX mode	Are the audio and video connector jacks fully inserted into the AUX terminal?
The external device is not working	Is the external device connected with a standard connector cable?
The road is missing	Some map data may be missing or incorrect.
The road name is spoken incorrectly	The TTS(Text To Speech) engine speaks the street name based on the phonetic spelling. This will continuously be update with the map database.















Troubleshooting

Problem	Possible Cause	Solution
The power does not turn on.	The fuse is blown.	Replace with a suitable fuse. If the fuse is blown again, please contact your nearest HYUNDAI dealer for assistance.
	Device is not properly connected.	Check to see that the device has been properly connected.
XM only goes through one category	The XM mode is in category.	Press the mode button to change to channel mode.
The CD does not play.	The DISC has not been inserted or has been inserted upside down.	Insert the disc properly so that the sides are facing the correct direction.
	The DISC has been contaminated.	Wipe dirt and other foreign substances from the DISC.
	The vehicle battery is low.	Charge the battery. If the problem persists, please contact your nearest HYUNDAI dealer for assistance.
	A disc which is not supported by the device has been inserted.	Insert a disc which is supported for play by the device.
The video does not work.	The brightness level has been set to the lowest level.	Adjust the brightness to a higher level.
The sound does not work.	The volume level is set the lowest level.	Adjust the volume level.
	The connector is not properly connected.	Check the connection.
	The device is currently fast-forwarding, rewinding, scanning, or playing in slow mode.	The sound will not work when the device is fast-forwarding, rewinding, scanning, or playing in slow mode.

PART 8 APPENDIX
















Problem	Possible Cause	Solution
The sound or video quality is low.	The DISC is dirty or scratched.	Wipe off water or dirt from the DISC. Do not use a disc which has been scratched.
	Vibration is occurring from the position in which the conversion switch has been installed.	The sound may be short-circuited and the image distorted if the device begins to vibrate. The device will return to normal operation once the vibration has stopped.
	The color and tone quality of the image is low.	Aging of the video display and deterioration in performance may cause certain quality degradations.
The USB does not work.	USB memory is damaged.	Please use after formatting the USB into FAT 12/16/32 format.
	USB memory has been contaminated.	Remove any foreign substances on the contact surface of the USB memory and multimedia terminal.
	A separately purchased USB HUB is being used.	Directly connect the USB memory with the multimedia terminal on the vehicle.
	A USB extension cable is being used.	Use standard USB Memory.
	A HDD type, CF, SD Memory is being used..	Use standard USB Memory.
	There are no music files which can be played.	Only MP3,WMA file formats are supported. Please use only the supported music file formats.
The iPod is not recognized even though it has been connected.	There are no titles which can be played.	Use iTunes to download and save MP3 files into the iPod.
	The iPod firmware version has not been properly updated.	Use iTunes to update the firmware version and reconnect the iPod with the device.
	The iPod device does not recognize downloads.	Reset the iPod and reconnect with the device.

Map legend

Road color	
Day Road Type	Color
Freeway	
Arterial	
County	
Collector	
Local	
Unpaved local	
Ferry	
Night Road Type	Color
Freeway	
Arterial	
County	
Collector	
Local	
Unpaved local	
Ferry	
















POI icons
















No	Category	Sub Category	Icon
1	Restaurants	Representation	
2		Fast Food	
3		American	
4		French	
5		Italian	
6		Continental	
7		Mexican	
8		Japanese	
9		Chinese	
10		Korean	
11		Vegetarian Food	
12		Seafood	
13		Latin American	
14		Asian	
15		African	
















No	Category	Sub Category	Icon	
16	Restaurants	Coffee Shop		
17		Others		
18	Automotive	Representation		
19		Gas Station		
20		Parking		
21		Auto service		
22		Road Assistance		
23		Hyundai Dealership		
24		Automobile Dealership		
25		Auto Parts		
26		Rest Area		
27		Car Wash		
28		Motorcycle Dealership		
29		Travel	Representation	
30			Airport	

PART 8 APPENDIX
















POI icons

No	Category	Sub Category	Icon	
31	Travel	Hotel		
32		Tourist Information		
33		Travel Agent		
34		Tourist Attraction		
35		Popular Spot		
36		Rental Car Agency		
37		Campground		
38		Ferry Terminal		
39		Bus Station		
40		Local Transit		
41		Train Station		
42		Shopping		
43		Shopping	Department Store	
44			Convenience Store	
45	Shopping Center			

No	Category	Sub Category	Icon	
46	Shopping	Music Store		
47		Grocery Store		
48		Bookstore		
49		Electronics		
50		Hardware Store		
51		Gifts		
52		Sporting Goods		
53		Home Specialty Store		
54		Clothing		
55		Shoe Store		
56		Recreation	Representation	
57			Amusement Park	
58			Museum	
59			Cinema	
60	Sports Activities			





No	Category	Sub Category	Icon
61	Recreation	Sports Complex	
62		Golf Course	
63		Winery	
64		Video & Game Rental	
65		Ski Resort	
66		Recreation Area	
67		Other Recreation	
68	Financial Service	Representation	
69		Bank	
70		ATM	
71		Check Cashing Service	
72		Money Transfer	
73	Community	Business Facility	
74		Representation	
75		Police Station	

POI icons

No	Category	Sub Category	Icon
76	Community	Post Office	
77		Library	
78		Court House	
79		Fire Department	
80		Convention Center	
81		City Hall	
82		Civic Center	
83		School	
84		Government Offices	
85		Waste & Sanitary	
86	Utilities		
87	Service	Representation	
88		Hospital	
89		Dentist	
90		Photography	

No	Category	Sub Category	Icon
91	Service	Tax Service	
92		Medical Service	
93		Attorney	
94		Funeral Director	
95		Hair & Beauty	
96		Cleaning & Laundry	
97		Social Service	
98		Physician	
99		Communication	
100		Tailor & Alteration	
101		Mudanzas	

Landmark icons

No	Category	Sub Category	Icon
1	Service	Airport	
2		Park	
3		Golf	
4		University	

INDEX

A

About Bluetooth® device environment ...	6-31
About making/answering phone calls	6-31
About pairing mobile phones	6-30
About Rear Detection Camera	7-2
Activating Call waiting	6-14
Adaptive volume control ON/OFF	3-52
Adding to address book.....	3-27
Adding waypoints	3-32
Adjusting audio volume.....	1-7
Advanced settings	6-26
Answering a call	6-13
Answering an incoming call	6-13
Auto volume control ON/OFF	1-10
AUX	2-29
AUX screen	2-29

B

Basic operation and setting	1-6
Basic operation for voice command control.....	5-2
BASS/MID/TREB	1-10
Before playing Phone music	6-21

Before thinking the product has malfunctioned	8-2
Before using the Bluetooth® Handsfree ...	6-2
Bluetooth® Handsfree screen and functions	6-9
Bluetooth® Handsfree screen layout	6-9
Bluetooth® settings	6-24

C

Call History List	6-19
CD	2-14
CD	5-8
CD screen and functions	2-14
Changing destination position	3-27
Changing passkey	6-28
Changing Route option	3-32
Changing the map scale	3-8
Command list of Audio system	5-6
Command list of Help	5-18
Command list of Navigation system	5-12
Command list of Phone	5-18
Condition for voice command system	5-2
Conditions for voice recognition system ...	1-8
Connecting a mobile phone	6-7
Connecting AUX.....	2-31

Connecting iPod device	2-22
Connecting the USB	2-28
Control panel	1-3
Controller and functions	1-3
Converting Bluetooth® Handsfree mode ...	6-2
Converting from Audio/Navigation mode to Bluetooth® Handsfree	6-2
Converting from Bluetooth® Handsfree mode to Audio/ Navigation mode	6-3
Current position map screen (without route)	3-5

D

Deleting a paired phone	6-6
Deleting all avoid areas	3-41
Deleting all paired phones.....	6-28
Deleting an address book	3-47
Deleting an address of address book ...	3-46
Deleting avoid area	3-41
Deleting favorite place	3-50
Deleting home address	3-48
Deleting waypoints	3-34
Destination	5-14
Destination by address book.....	5-24

Destination by memory point <1 to 5> ...	5-25
Destination menu screen and functions...	3-12
Destination POI by phone number	5-22
Dialed number	6-20
Disc/Content format compatibility	2-12
Disconnecting a mobile phone	6-8
Display mode	1-10
Display ON	1-10
Display Photo Frame	1-11
Display setting	1-10
Displaying / Hiding POI icons on the map ...	3-9
Displaying the list	1-7
Displaying/Hiding Q.POI icons	3-9

E

Editing an address of address book	3-45
Editing avoid area	3-40
Editing waypoints	3-32
Ejecting a Disc	2-13
Ending a call	6-15
Entering XM Data mode.....	4-2

F

FAD/BAL	1-9
Find address	5-19
Find emergency <Category>	5-23
Find nearest <POI name>	5-21
Find nearest POI	5-20
Finishing route guidance (Delete Destination)	3-30
FM/AM Radio	2-2
FM/AM Radio	5-6
FM/AM screen and functions.....	2-2
For safe and efficient operation.....	2-10
Functions supported by Bluetooth®	
Handsfree	6-2

G

Giving voice command	1-9
Go home	5-25
GPS signal reception state	3-2
GPS Time.....	1-12

H

Help.....	3-54
How to operate menu by voice command ...	1-8

How to operate the screen menu	1-7
--------------------------------------	-----

I

Important information	6-30
Important information about this manual...	1-2
Initializing Bluetooth® handsfree	6-29
Initializing system	3-37
Inputting letter by using screen keyboard...	1-7
Inserting a Disc	2-13
Inserting/Ejecting Disc	2-13
Introduction	1-2
iPod.....	5-11
iPod screen and functions	2-23
iPod®	2-22

L

Landmark icons	8-7
Limitations of the navigation system	3-2
Listening to CD music	2-14
Listening to iPod music	2-22
Listening to MP3 music	2-18
Listening to the FM/AM radio	2-2
Listening to the XM radio	2-6
Listening to USB music	2-28

INDEX

M

Main setting	3-37
Making a call	6-11
Making a call by dialing a phone number	6-11
Making a call by redialing	6-12
Making a call from Call history	6-19
Making a call from Speed Dial	6-11
Making a call from the Phone book	6-16
Making a call to POI	3-10
Map	5-12
Map Functions	3-5
Map legend.....	8-5
Missed number	6-20
MP3	2-17
MP3	5-9
MP3 disc related information and precaution	2-17
MP3 screen and functions	2-18
My places setting	3-43

N

Navigation setting	3-38
--------------------------	------

O

Operating after setting a destination ...	3-28
Operating external devices	2-22
Operating menus during a call	6-14
Operating sequence of the Rear Camera ...	7-2
Operating the CD Player	2-10
Operating the radio	2-2
Operating typical screen menu	1-7
Operating USB IMAGE Mode	2-31
Operating voice command	5-2
Others	5-11
Others	5-16

P

Pairing a mobile phone	6-4
Pairing and connecting a mobile phone	6-24
Pairing and connecting a Bluetooth® phone	6-4
Phone Book.....	6-16
Phone Music	6-21
Phone music screen layout	6-22
Playing AUX	2-29
POI Category list.....	5-17

POI icons	8-5
Precaution for safe usage	1-2
Precautions upon handling discs	2-10
Precautions upon handling USB	2-26
Previous destination	5-24
Previous start point	5-25

R

Received number	6-20
Registering avoid area	3-38
Registering favorite place	3-49
Registering home address	3-48
Registering new address in address book	3-43
Rejecting an incoming	6-13
Re-ordering waypoints	3-34
REW/FF CD track.....	2-15
REW/FF iPod song	2-24
REW/FF MP3 file	2-20
Road color	8-5
Route	5-15
Route Guidance	3-4
Route guidance	3-30
Route guidance screen	3-28

Route menu screen and functions.....	3-30
Route overview (View Entire Route)	3-31
Route Re-calculation	3-4

S

Scanning CD track	2-16
Scanning FM/AM broadcast frequency	2-5
Scanning MP3 file	2-21
Scanning XM broadcast channel	2-9
Scrolling map	3-11
Searching a Destination	3-13
Searching a POI	3-20
Searching a Previous Destination	3-17
Searching an Address.....	3-13
Searching an Intersection	3-17
Searching and modifying my device properties	6-27
Searching by number.....	6-18
Searching destination by voice command	5-19
Searching favorite places	3-26
Searching for Emergency facilities	3-25
Searching from Address book	3-24
Searching from MAP	3-26
Searching POI by local POI list	3-26
Searching the Phone Book.....	6-17
Searching your Home.....	3-25
Selecting an iPod song	2-23
Selecting an item in a list	1-8
Selecting FM/AM broadcast frequency	2-3
Selecting other route	3-29
Selecting Phone music files	6-23
Selecting the CD track	2-14
Selecting to MP3 music	2-19
Selecting XM broadcast channel	2-7
Setting a destination	3-12
Setting arrival time and distance display.....	3-38
Setting as Destination / waypoint	3-27
Setting Audio streaming	6-26
Setting avoid streets on route	3-35
Setting detour distance	3-35
Setting Display OFF	1-13
Setting estimate travel time	3-42
Setting Handsfree volume	6-25
Setting keyboard for inputting letter ...	3-37
Setting Language	3-37
Setting mobile phone auto connect priority	6-24
Setting Q.POI icons.....	3-42
Setting Random function for CD music... ..	2-15
Setting Random function for iPod song ...	2-25
Setting Random function for MP3 file ...	2-20
Setting Repeat function for CD music ...	2-15
Setting Repeat function for iPod song ...	2-25
Setting Repeat function for MP3 file	2-20
Setting units (mile/ km)	3-38
Setting up the voice command system.....	5-4
Setting voice command feedback ON/OFF	3-37
Setting voice Prompt ON/OFF	5-4
Setup and Information	3-36
Setup menu screen and functions.....	3-36
Sorting call history	6-19
Sorting items from list	1-8
Sound setting	1-9
Speaker adaptation	5-4
Sport Data Service Information	4-3
Starting navigation system	3-5
Starting Phone Music.....	6-21
Starting Route Guidance	3-28
Starting USB IMAGE Mode	2-30

INDEX

Steering remote control 1-5
Stock Data Service Information 4-3
Storing XM preset 2-9
Supported disc formats 2-11
Switching call to the mobile phone 6-14
Switching map mode
(North Up / Heading Up) 3-6
Switching the XM mode
(Channel / Category) 2-7
System information and update 3-51
System Power ON 1-6

T

Time Format 1-12
Touch screen beep ON/OFF 1-10
Traffic data Service Information..... 4-2
Traffic Information 3-52
Traffic Setup 3-52
Troubleshooting 8-3
Troubleshooting guide 8-2
Turning the Audio ON/OFF 1-6
Turning the Power OFF 1-6
Turning the Power ON 1-6

U

USB 5-10
USB IMAGE Mode 2-30
USB IMAGE mode menu screen
configuration 2-30
USB MP3 2-26
USB MP3 related information and
precaution 2-26

V

Vehicle position display 3-3
Viewing Current Time..... 1-12
Viewing detail information for MP3 file... 2-20
Viewing GPS signal state 3-7
Voice command Help 5-3
Voice command list 5-6
Voice guidance volume control 3-51
Voice guidance volume setting 3-51

W

Weather data Service Information..... 4-4
What is Bluetooth®? 6-2
When a mobile phone is connected 6-9
When already on a call 6-10
When receiving an incoming call 6-10

When there is a call waiting 6-10
When there is no mobile phone
connected 6-9

X

XM Data mode 4-2
XM Data mode screen and functions 4-2
XM radio 2-6
XM Radio..... 5-8
XM screen and functions 2-6

Microsoft® Windows® Automotive Operating System

Important Safety Information

Read and Follow Instructions

Before using your Windows Automotive-based system, read and follow all instructions and safety information provided in this end user manual ("User's Guide"). Not following precautions found in this User's Guide can lead to an accident or other serious consequences.

Keep User's Guide in Vehicle

When kept in the vehicle, the User's Guide will be a ready reference for you and other users unfamiliar with the Windows Automotive-based system. Please make certain that before using the system for the first time, all persons have access to the User's Guide and read its instructions and safety information carefully.

Warning:

Operating certain parts of this system while driving can distract your attention away from the road, and possibly cause an accident or other serious consequences. Do not change system settings or enter data non-verbally (using your hands) while driving. Stop the vehicle in a safe and legal manner before attempting these operations. This is important since while setting up or changing some functions you might be required to distract your attention away from the road and remove your hands from the wheel.

General Operation

Voice Command Control

Functions within the Windows Automotive-based system may be accomplished using only voice commands. Using voice commands while driving allows you to operate the system without removing your hands from the wheel.

MS

Prolonged Views of Screen

Do not access any function requiring a prolonged view of the screen while you are driving. Pull over in a safe and legal manner before attempting to access a function of the system requiring prolonged attention. Even occasional short scans to the screen may be hazardous if your attention has been diverted away from your driving task at a critical time.

Volume Setting

Do not raise the volume excessively. Keep the volume at a level where you can still hear outside traffic and emergency signals while driving. Driving while unable to hear these sounds could cause an accident.

Navigation Features

Any navigation features included in the system are intended to provide turn by turn instructions to get you to a desired destination. Please make certain all persons using this system carefully read and follow instructions and safety information fully.

Distraction Hazard

Some navigation features may require manual (non-verbal) setup. Attempting to perform such set-up or insert data while driving can seriously distract your attention and could cause an accident or other serious consequences. Stop the vehicle in a safe and legal manner before attempting these operations.

Let Your Judgment Prevail

Any navigation features are provided only as an aid. Make your driving decisions based on your observations of local conditions and existing traffic regulations. Any such feature is not a substitute for your personal judgment. Any route suggestions made by this system should never replace any local traffic regulations or your personal judgment or knowledge of safe driving practices.

Route Safety

Do not follow the route suggestions if doing so would result in an unsafe or illegal maneuver, if you would be placed in an unsafe situation, or if you would be directed into an area that you consider unsafe. The driver is ultimately responsible for the safe operation of the vehicle and therefore, must evaluate whether it is safe to follow the suggested directions.

Potential Map Inaccuracy

Maps used by this system may be inaccurate because of changes in roads, traffic controls or driving conditions. Always use good judgment and common sense when following the suggested routes.

Emergency Services

Do not rely on any navigation features included in the system to route you to emergency services. Ask local authorities or an emergency services operator for these locations. Not all emergency services such as police, fire stations, hospitals and clinics are contained in the map database for navigation features.

Use of Speech Recognition Functions

Speech recognition software is inherently a statistical process which is subject to errors. It is your responsibility to monitor any speech recognition functions included in the system and address any errors.

MAP DATABASE HOTLINE

M & SOFT AMERICA MAP CENTER

TEL : 888-757-0010

WEBSITE : www.mapnsoft.com

MEMO

MEMO

MEMO



HYUNDAI Navigation System QUICK REFERENCE GUIDE

ELANTRA



LOOKING FOR MORE INFORMATION?

This Quick Reference Guide does not replace your System Owner's Manual.

If you require additional information or are unsure of a specific issue, refer to the System Owner's Manual for additional information.

iPod® is a registered trademark of Apple Inc.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc. and any use of such marks by Hyundai is under license. A Bluetooth® enabled cell phone is required to use Bluetooth® wireless technology.



All Map Database cannot be copied without permission. This is protected by U.S. copyright laws. All rights not expressly granted are reserved. You may not otherwise reproduce, modify, and distribute the content without M&Soft, Inc's prior written consent.

TABLE OF CONTENTS

Controls and functions	2
Sound setting	5
Display setting.....	6
Operating the FM/AM radio	7
Operating the XM radio	9
Operating the CD	12
Operating the MP3, USB MP3	14
USB IMAGE Mode	17
Operating the iPod	19
Map functions.....	21
Setting a destination	23
Operating after setting a destination	29
Editing route	30
Setup and Information	31
XM Data mode	32
Operating voice command.....	34
Converting Bluetooth® Handsfree mode	45
Pairing and connecting a Bluetooth® phone	46
Making a call	49
Operating menus during a call	51
Phone Music	53

Controls and functions

Control panel

1 Power / Volume control Knob

- Press knob (over 0.8 second) : turns the power off.
- Press knob (under 0.8 second) : each time the knob is pressed, the Audio is turned on and off.
- Turn knob : the range of volume adjustment is between 0 ~ 35.

2 FM/AM

Each press will change the bands in the following order: FM1 → FM2 → AM → FM1 ...

3 XM

Each press will change the bands in the following order: XM1 → XM2 → XM3 → XM1 ...

4 MEDIA

Each press will change the bands in the following order: DISC(CD, MP3) → (USB or iPod) → (AUX) → (Phone music) → DISC(CD, MP3) ...

5 SEEK/TRACK Up/Down

- SHORT KEY(less than 0.8 second)
 - FM/AM Mode : automatically searches for the previous or next broadcast frequency and starts playing.
 - XM Mode : receives the previous or next channel.
 - CD Mode : plays the previous or next track.
 - MP3, USB Mode : plays the previous or next file.
 - iPod Mode : plays the previous or next song.
- LONG KEY(over 0.8 second)
 - FM/AM Mode : quickly moves through the frequencies while the key is pressed. Once released, automatically searches for broadcasts which can be received.
 - XM Mode : quickly moves to the previous or next channel.
 - CD Mode : REW/FF the current playing track.
 - MP3, USB Mode : REW/FF the current playing file.
 - iPod Mode : REW/FF the current playing song.

6 SET UP

Displays the Setup menu screen.



7 MAPVOICE

Displays the MAP screen for the current position.

8 DEST

Displays the Destination menu screen.

9 ROUTE

Displays the Route menu screen.

10 TUNE

- FM/AM Mode : press the key to search for the desired frequency. Press the key to receive the selected frequency.
- XM Mode : press the key to search for the desired channel. After a brief moment, the selected channel will be displayed.
- CD Mode : press the key to search for the desired track. Press the key to play the selected track.
- MP3, USB Mode : press the key to search for the desired file. Press the key to play the selected file.
- iPod Mode : press the key to search for the desired song. Press the key to play the selected song.

11 ENTER

Completes the command.

12 PHONE

Displays the Bluetooth® handsfree screen.

13 DISC eject

Ejects the inserted disc.

14 DISP

Displays the displays setting screen.

15 DISC insert indicator LED

Displays when a DISC has been inserted.

16 RESET

Resets the system - if software locks-up.




! WARNING !

Always give your full attention to driving. Avoid operating your system in such a way that you may be distracted from driving your vehicle.

Controls and functions

Steering wheel remote controller

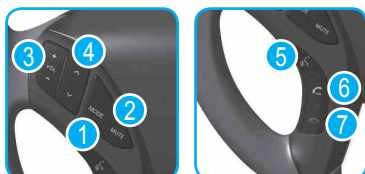

1 MODE

Each time the Mode key is pressed, the mode is changed in the following order: FM1 → FM2 → AM → XM1 → XM2 → XM3 → (DISC) → (USB or iPod) → (AUX) → (Phone music) → FM1...

If an unsupported DISC has been inserted, if there is no disc, or if an external device (e.g. iPod, USB memory stick, etc.) has not been connected, the mode will not be recognized and automatically switch to the next mode.

- Press this key for over 0.8 second to turn the Audio on and off.
- Press this key to turn the power on when the Power is turned off.

2 MUTE

Turns the sound on and off. When the MUTE is turned on, the MUTE icon will become displayed. When in the Navigation screen, the MUTE icon at the top of the screen will disappear after 3seconds.

3 Volume Up/Down

Increases or decreases the volume within a range between 0 ~ 35.

4 Seek Up/Down

- SHORT KEY(less than 0.8 second)

- FM/AM : receives the previous or next preset frequency.

- XM Mode : receives the previous or next preset channel.

- CD Mode : plays the previous or next track.

- MP3, USB Mode : plays the previous or next file.

- iPod Mode : plays the previous or next song.

- LONG KEY(Over 0.8 second)

- FM/AM Mode : quickly moves through the frequencies while the key is pressed. Once released, automatically searches for broadcasts which can be received.

- XM Mode : quickly moves to the previous or next channel.

- CD Mode : REW/FF the current playing track.

- MP3, USB Mode : REW/FF the current playing file.

- iPod Mode : REW/FF the current playing song.

5 Voice Recognition

Starts Voice Recognition.


6 CALL

Press this key to receive an incoming call. If pressed while in Audio/Navigation mode, the Bluetooth® handsfree screen will be displayed.

7 END


Press this key to reject an incoming call. If pressed while on a call, then the call will be ended.

Sound setting

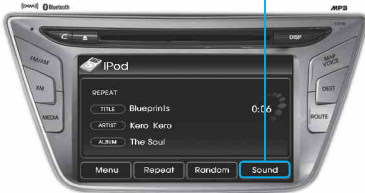

Displays the Sound setup screen

Press the **Sound** button on the main screen of each Audio mode (FM/AM, XM, CD, MP3, USB, iPod) to display the sound setting screen.

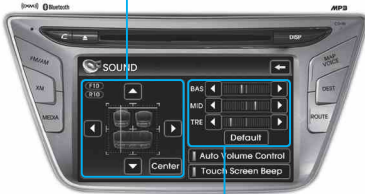

FAD/BAL

The position of the sound can be adjusted by using the up-down and left-right (▲, ▼, ◀, ▶) buttons on the left side of the screen.

Press the **Center** button to position the sound in the center of the vehicle.



BASS/MID/TREB

The BASS/MID/TREB can be adjusted by using the left/right buttons (◀, ▶) of each control.

Auto volume control ON/OFF

Each time the **Auto volume control** button is pressed, the Auto Volume control function is turned on or off.

Touch screen beep ON/OFF

Each time the **Touch screen beep** button is pressed, the beeping sound that follows each press on the screen will turn on or off.

Display setting

Display mode

Press the button for the desired display mode from **Automatic**, **Day**, and **Night** modes. The current selected mode is highlighted.



Displays the Display setup screen

Brightness

Use the left/right buttons (◀, ▶) for control to make adjustments.



Display OFF

Press the **Display off** button.

Display ON

Press anywhere on the black screen. The screen prior to display setting will be displayed.

Operating the FM/AM radio



Listening to the FM/AM radio

1. Press the **FM/AM** key on the control panel. The FM/AM radio band of the most recent station selected will be displayed.
2. Press the **FM/AM** key to change the desired radio band. Each press will change the bands in the following order: FM1 → FM2 → AM → FM1...
3. Select the desired broadcast frequency.

Selecting FM/AM broadcast frequency

Selecting a frequency through preset

Press the preset button of the desired broadcast frequency.



Selecting a Broadcast frequency through SEEK

Press the **SEEK TRACK** key on the control panel for less than 0.8 second.

Once the SEEK function is operating (SEEK indicator blinking), the next or previous broadcast frequency with superior reception will be searched automatically.

Operating the FM/AM radio

Selecting a broadcast frequency through manual search

Press the **▼TUNE▲** key to search for desired frequency.

Press the **▼TUNE▲** key will increase or decrease the frequency by 1 step(FM:0.1 MHz, AM: 10kHz)



Storing FM/AM preset

Storing manually

1. Select the desired frequency.
2. Press the preset button for over 0.8 second. The frequency will become stored along with a beep sound.



Auto store

After selecting the desired band, press the **Auto store** button.

The 6 frequencies with the most superior reception will be stored as preset buttons in corresponding order.

Scanning FM/AM broadcast frequency

1. Press the **Scan** button.

- Scan (less than 0.8 second) : Scans all frequencies and plays only frequencies with superior reception for 5 seconds each.
- Preset Scan (over 0.8 second): Scans the 6 frequencies stored in the current band for 5 seconds each.

2. Press the **Scan** button again to continue listening to a frequency. The scan will be terminated and the current frequency will continue to be played.

Operating the XM radio



Listening to the XM radio

1. Press the **XM** key on the control panel. The XM radio band screen of the most recent station selected will be displayed.
2. Press the **XM** key to change the desired radio band. Each press will change the bands in the following order: XM1 → XM2 → XM3 → XM1...
3. Select the desired broadcast channel.



Selecting XM broadcast channel

Selecting a channel through preset

Press the preset button of the desired channel.

Selecting with Channel Up/Down

Press the **SEEK TRACK** key on the control panel for less than 0.8 second.

The previous or next channel will be selected.

Operating the XM radio

Selecting a channel through manual search

Press the **VTUNE** key to search for desired to display the previous or next channel information. After a brief moment, the selected channel will be displayed.



Selecting channel through channel/category list

1. Press the **List** button.
2. Select the desired channel button. The previous screen will become restored and the selected channel will begin playing.



Selecting channel by directly inputting the channel number

1. Press the **Search** button.
The channel input screen will be displayed.



2. Input desired channel number, and press the **OK** button.
The previous screen will become restored and the selected channel will begin playing.



Storing XM preset

1. Select the desired channel.
2. Press the preset button for over 0.8 second. The frequency will be saved along with a beep sound.

Scanning XM broadcast channel

1. Press the **Scan** button.
 - Scan (under 0.8 second): Scans all channels for 5 seconds each if in channel mode. If in category mode, scans all channels within the current category for 5 seconds each.
 - Preset Scan (over 0.8 second): Scans the 6 preset channels within the current band for 5 seconds each.
2. Press the **Scan** button again to continue playing the channel. The scan will be terminated and the current channel will continue to play.

Operating the CD

Listening to CD music

1. Insert the CD or press the **MEDIA** key on the control panel if the CD is already inserted.
2. Select the desired track.



Selecting the CD track

Selecting track through search

1. Press the **▽TUNE△** key to search for desired to display track. Each press the **▽TUNE△** key will display the information of the next or previous track. The current playing track will continue to play.
2. Press the **▽TUNE△** key to the desired track. The searched track will begin playing.



Selecting through Track Up / Down

Press the **▽SEEK TRACK△** key on the control panel for less than 0.8 second. The next or previous track will begin playing.



REW/FF CD track

Press and hold the **SEEK TRACK** key on the control panel or steering wheel remote controller for over 0.8 second.



Setting Repeat function for CD music

Press the **Repeat** button.

Each press will change the function in the following order: Repeat → Repeat Off → Repeat ...

- Repeat : repeats the current playing track.

Scanning CD track

1. Press the **Scan** button.

Each press will change the function in the following order: Scan → Scan Off → Scan ...

2. Press the **Scan** button again to continue listening to the track. The scan will be terminated and the current track will continue to be played.
- Scan : Scans all tracks in the disc for 10 seconds each.

Setting Random function for CD music

Press the **Random** button.

Each press will change the function in the following order: Random → Random Off → Random...

- Random : plays all tracks in the disc in random order.

Operating the MP3, USB MP3

Listening to MP3 music

1. Insert the MP3 disc/USB or press the **MEDIA** key on the control panel if the MP3 disc/USB is already inserted.
2. Select the desired file.



Selecting the MP3 file

Selecting through File Up / Down

Press the **SEEK TRACK** key on the control panel for less than 0.8 second. The next or previous file will begin playing.

Selecting through searching files

1. Press the **TUNE** key to search for desired to display file. Each click on the **TUNE** key will display the information of the next or previous file. The current playing file will continue to be played.
2. Press the **ENTER** key at the desired file. The searched file will begin playing.



Selecting through MP3 List

1. Press the **List** button.
The file list of the folder for the current playing file will be displayed.



2. Press the desired menu to return to the main screen and play the selected file.

REW/FF MP3 file

Press and hold the **SEEK TRACK** key on the control panel or steering wheel remote controller for over 0.8 second.



Setting Repeat function for MP3 file

Press the **Repeat** button. Each press will change the function in the following order : Repeat → Folder Repeat → Repeat Off → Repeat ...

- Repeat : repeats the current playing file.
- Folder Repeat : repeats the files in the current folder.

Operating the MP3, USB MP3

Setting Random function for MP3 file

Press the **Random** button.

Each press will change the setting as follows : Folder Random → Random → Random Off → Folder Random ...

- Folder Random : plays the files in the current folder in random order.
- Random : plays all files in the disc in random order.



Scanning MP3 file

1. Press the **Scan** button.

Each press will change the function in the following order: Scan → Folder Scan → Scan Off → Scan ...

- Folder Scan : plays all files in the current folder for 10 seconds each.
- Scan: scans all files in the disc for 10 seconds each.

2. Press the **Scan** button again to continue listening to the file. The scan will be terminated and the current file will continue to play.

USB IMAGE Mode



Starting USB IMAGE Mode

1. The USB mode will automatically start when the USB is inserted. When in a different mode, repeatedly press the **MEDIA** key to convert to USB mode. (Each press will change in order of AUX→DISC→USB)
2. The image will be displayed on the screen.

i INFORMATION

Press the **Music** button on the bottom left side to enter either mode. (Supported only when compatible files exist within the USB)



Mode display

Display that the current mode is <USB Image> mode.

Folder name

Displays the name of the folder where photo files are located.

File name

Displays the file name of the current photo.

▶ button

Displays the next photo.

Slide Show View

Displays photos in intervals of 5, 10, and 20 seconds.

◀ button

Displays the previous photo.

USB IMAGE Mode

File index

displays the number of Image files within the USB (current file / all files)

Slide Show Interval

displays intervals of 5, 10, and 20 seconds.

Music button

converts to <USB Music> mode.

List button

displays the <Image List> screen.

Hide button

hides the button display image.

Save button


upon turning off power, saves the current image as the frame screen image.

Timer button

allows changes to slide show interval.



Operating the iPod

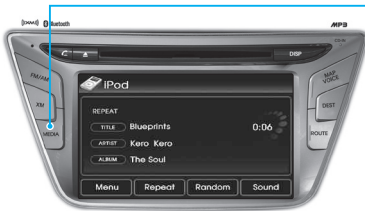

Listening to iPod music

1. Connect the iPod or press the **MEDIA** key on the control panel if the iPod is already connected.
2. Select the desired song.



Selecting an iPod song

Press the **SEEK TRACK** key on the control panel or steering wheel remote for less than 0.8 second. The next or previous song will begin playing.



Selecting song through search

1. Press the **TUNE** key to search for desired to display song.
Each press the **TUNE** key will display the information of the next or previous song. The current playing song will continue to play.
2. Press the **ENTER** key to the desired song. The searched song will begin playing.

Selecting song through Menu

1. Press the **Menu** button.
The iPod menu screen will be displayed.
2. Press the button for the desired search method.

iPod® is registered trademark of Apple Inc.

Operating the iPod

REW/FF iPod song

Press and hold the **SEEK TRACK** key on the control panel or steering wheel remote controller for over 0.8 second.

Setting random function for iPod song

Press the **Random** button.

Each press will change the function in the following order:
Album Random → Random → Random Off → Album Random ...

- Plays the songs in the current play list randomly in album units.
- Plays all files in the current play list (All Songs, certain albums, or user designated iPod Playlists) randomly regardless of album.

Setting repeat function for iPod song

Press the **Repeat** button.

Each press will change the function in the following order:
Repeat → Repeat Off → Repeat ...

- Repeat : repeats the current playing song.




i INFORMATION

An iPod cable assembly can be purchased at your local Hyundai dealer.



Map functions

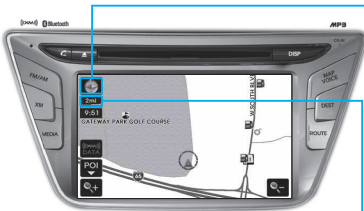


North Up / Heading Up switch

Displays the current map mode. The map mode can be switched between North Up and Heading Up.



GPS signal state indicator

Displays the state of GPS signal reception.

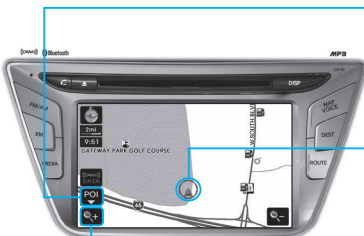

POI (Point of Interest)

Displays or hides the POI icon on the map.

Current vehicle position icon

Displays the current position of the vehicle.



Map scale

Increases or decreases the map scale.

Map functions


Landmark Icons

Landmark icons are displayed on the map when the map scale level is set to under 300 ft(100m-dependent on map data).

XM DATA

POI icons

POI icons are displayed on the map when the map scale level is set to under 0.5 mi (800m).

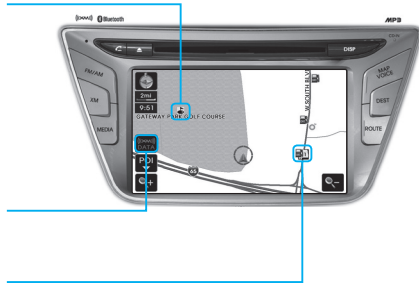

Setting a destination



Address

Sets the destination through address search.

Previous Dest

Sets the destination through the previous destination list.

Press the **DEST** key on the control panel to display the destination menu screen.



Intersection

Sets the destination through intersection search.

Emergency

Sets the destination through emergency facilities search.



POI Search

Sets the destination through POI Category search.

Address Book

Sets the destination through address book search.

Favorite place 1 ~ 5

Sets the destination with one of the stored favorite places.

HOME

Sets the stored HOME as the destination.

Setting a destination

Searching an address

1. Press the **DEST** key on the control panel.
2. Press the **Address** button.



3. Press the **State** button to change the state.




4. Input the State name and press the **List** button.



5. Select the desired state from the list to change the state.




6. Press the **Street** button.

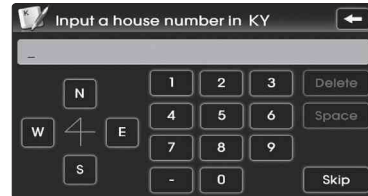

7. Input the House number and Press the **Done** button to complete. If the House number is not known, press the **Skip** button. In this case, the range of house numbers will be displayed during the last step.



8. Input the Street name and press the **List** button.

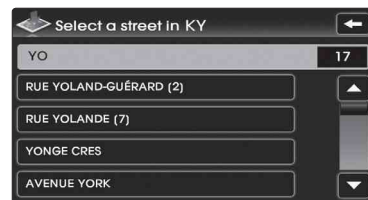


9. If the desired street from the list is selected, the corresponding position will be displayed on the map.

i INFORMATION


If more than 30 cities exist with the selected street, then the city input screen will be displayed. If less than 30 cities exist, then the city selection screen will be displayed.



10. Input the city name and Press the **List** button to complete. If the number of matches with the input is less than 4 results, then the list screen will be displayed automatically.

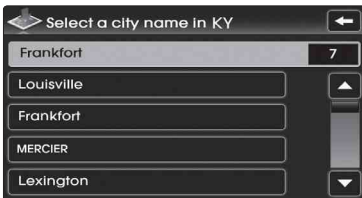


11. Select the desired city from the list.

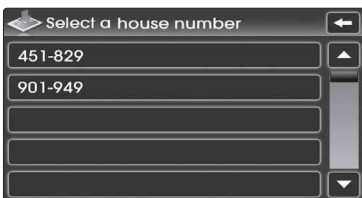

12. This screen will be displayed if the House number had not been inputted and more than 2 house numbers ranges exist.

Select the desired House number range.

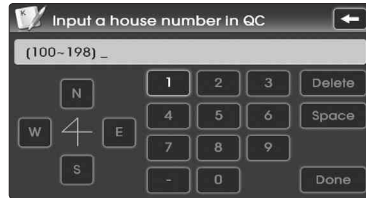

13. This screen will be displayed if the House number had not been inputted during step and only one house numbers range exists. Input the House number and Press the **Done** button to complete. The corresponding position will be displayed on the map.

Searching an intersection

1. Press the **DEST** key on the control panel.
2. Press the **Intersection** button.



3. Press the **State** button to change the state.

Setting a destination



4. Input the state name and press the **List** button.



5. Select the desired state from the list to change the state.



6. Press the **Street** button.



7. Input the name of the 1st street and press the **List** button.



8. Select the desired 1st street from the list.



9. Input the name of the 2nd street and press the **List** button.



10. Select the desired 2nd street menu from the list. The corresponding position will be displayed on the map.




11. If the selected 2nd street is within more than 2 cities, then the city list screen will be displayed.

Select the desired city menu from the list. The corresponding position will be displayed on the map.

Searching from address book

1. Press the **DEST** key on the control panel.
2. Press the **Address book** button.

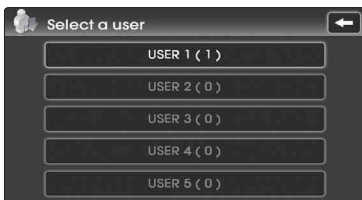


3. Select the desired address book (user) menu.



4. Select the desired address name from the list. The corresponding position will be displayed on the map.

Searching a previous destination

1. Press the **DEST** key on the control panel.
2. Press the **Previous Dest** button.
3. Select the desired previous destination. The corresponding position will be displayed on the map.

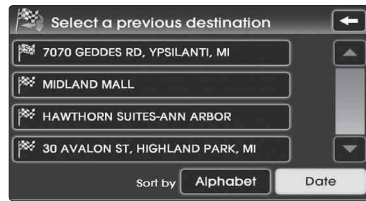

Searching a POI

1. Press the **DEST** key on the control panel.
2. Press the **POI Search** button.



3. Press the **State** button.




4. Input the state name and press the **List** button.



5. Select the desired state from the list to change the state.


Setting a destination

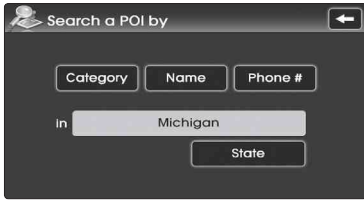


6. Press the **Category** button.




7. Press the **Near current position** button to search for facilities nearby the current position.

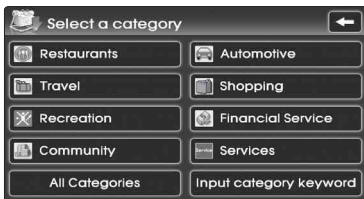

8. Press the desired main category menu.

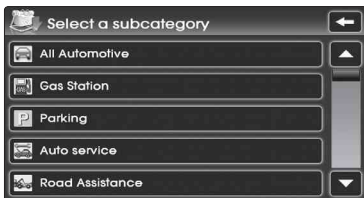

9. Press the desired sub category menu.

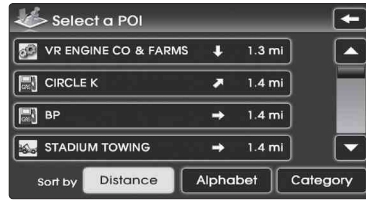

10. Select the desired menu button. The corresponding position will be displayed on the map.

Searching for emergency facilities

1. Press the **DEST** key on the control panel.
2. Press the **Emergency** button.




3. Select the desired facility category.



4. Select the desired facility menu. The corresponding position will be displayed on the map.

Operating after setting a destination

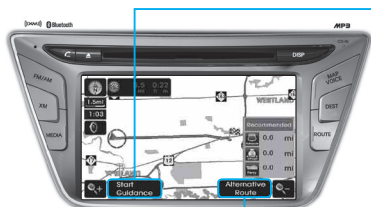

Starting Route Guidance

Press the **Start Guidance** button. Route Guidance will start.

Route simulation

- If the **Start Guidance** button is pressed and held for over 0.8 second, then route simulation will start.
- If the **MAP VOICE** key on the control panel is pressed during route simulation, then the route simulation will be terminated.

Selecting other route

1. Press the **Alternative Route** button.



2. Other routes can be selected by pressing the **◀** or **▶** buttons.

Editing route

Cancel Route

Deletes the destination, waypoints and terminates the current route guidance.

Route Overview

Displays the whole route and detailed route information.

Route Option

The route calculation method can be changed.

Avoid Streets

Searches routes which avoids the selected streets.

Edit Waypoint

Waypoints can be added/deleted and the order can be changed.


Detour

Searches detour routes.

Displays the Route menu screen



Setup and Information

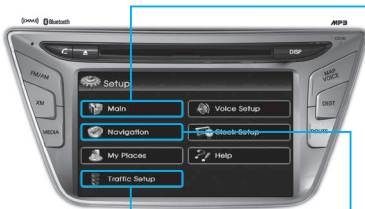

Main

Changes to the input keyboard type, voice command feedback ON/OFF settings and system initialization can be made.

Navigation

Navigation related settings can be set.

Traffic Setup

Sets whether to display traffic information on map, or to provide upcoming traffic information voice guidance, or to display the detour route popup showing upcoming traffic information.



My Places

The Address book, Home address, Favorite places, Previous destination can be edited.

Voice Setup

Adjusts the Navigation guidance volume.

Clock Setup

Help

The help contents can be viewed.

XM Data mode

Entering XM Data mode XM Data mode screen and functions

1. The XM Data Service is a paid membership satellite radio service which provides users with traffic, stock, sports, and weather information. However, weather information is not supported for vehicles purchased in Canada. For information on registration or related content, please visit the XM radio website (www.xmradio.com).

Entering XM Data mode

1. From the current location map screen within the navigation, press the **XM DATA** button.
2. The main XM data service screen will be displayed. Within the main screen, there are four categories of Traffic, Stocks, Sports and Weather.



XM Data mode screen and functions

Traffic data Service Information

- Automatic route recalculation (guidance) according to changes in traffic conditions.
- Provides short-cuts for initially searched routes.

- Displays increased detour distance and estimated driving times.
- Displays icons by each traffic situation on the map.

1. Route calculation by incorporating actual road traffic conditions. Incorporation of traffic information to route calculations is a user option which can be turned on or off by the user.

2. Displays Road Traffic situations. RTM (Road Traffic Message) is a feature which displays symbols of icons for each type of road traffic condition, such as locations under construction, accidents, basic weather, and others on map locations based on Traffic information provided by XM.

3. Avoidance of locations where traffic situations have occurred. If a traffic situation occurs somewhere along the route, the route is recalculated to avoid such locations and an avoidance recalculation popup will be displayed.

4. Displays Traffic Event List. A list providing details on accidents and an icon which will display the accident location are displayed. The user can view details by pressing on the list or move the map to the accident location by pressing on the accident icons.

Stock data Service Information

XM Stock data Service is a service which provides real-time updated information on the NYSE, NASDAQ, and AMEX (approximately 11,000 symbols).



1. Press the **Stocks** button to display the Search screen where symbols can be searched. Input the name of the symbol you wish to search and press the **List** button to show search results.
2. For symbols which you are interested in, press the <Favorites> icon to save the symbol as a part of <My Favorite>. Saved symbols can be viewed from the **My Favorites** button on the Stock Main screen.

Sport Data Service Information

This service provides real-time updated information on scores and schedules for major sports, such as NFL, NBA, NCAA Football, NCAA Basketball, NHL, MLB, NASCAR and more.



1. Press the desired **Sports** button to view related sports information.

2. My teams

You can save teams which you are interested in as part of <My teams> to easily view related scores and schedules. Within the <My teams> screen, teams can be added by pressing the **Add** button or deleted by pressing the **Remove** button.

Weather data Service Information

1. Tabular Weather Service

Provides current weather information and weather information for the coming next three days for your region. To change the region, press the **Other City** button and select the desired region.


2. Graphical Weather Service (Map button)

This service provides weather information, such as Cloud, Fog, Rain, Snow, and Road Conditions on the Navigation map as symbols. Details can be viewed on specific regions by using the zoom in and zoom out features.



3. Warning and Advisories Service


This service provides weather warnings and advisories, such as Severe, Wind, Flood, etc. as symbols on the Navigation map. Details can be viewed on specific regions by using the zoom in and zoom out features.

Operating voice command

1. Press the  key on the steering wheel remote controller. A voice command window will be displayed on the bottom side of the screen followed by a "Command please" system voice comment.



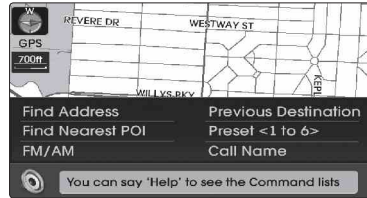


2. Once the  icon changes into the  icon on the pop-up screen with a beep sound, say the desired voice command.



If the exact command is not known, use the "Help" command to view the commands list in detail.




EXAMPLE 1 :


Listening to the FM2 PRESET 1

1. Press the  key on the steering wheel remote controller.
2. Once the  icon changes into the  icon on the pop-up screen with a beep sound, say "FM2 preset 1".

EXAMPLE 2 :

Searching a destination by address

1. Press the  key on the steering wheel remote controller.
2. Once the  icon changes into the  icon on the pop-up screen with a beep sound, say "Find address".

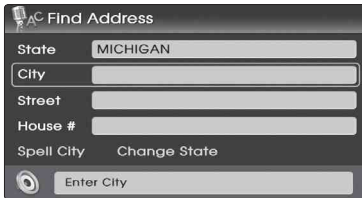

AC Find Address

State MICHIGAN

City


Street

House #

Spell City Change State

Enter City

3. Say "Change state" to change the state.

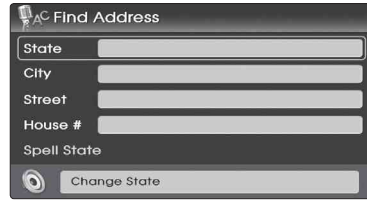

AC Find Address

State

City

Street

House #

Spell State

Change State

4. Say the state name.



AC Find Address

State MICHIGAN

City NOVI


Street

House #

Correct Spell Street

NOVI

5. Say the city name.



AC Find Address

State MICHIGAN

City NOVI

Street MAIN ST

House # 43100-43299

Correct Show map Start Guidance

MAIN ST

6. Say the street name.

7. Say the House number. The range which can be inputted will be displayed.

8. Say "Start guidance" if guidance to the selected position is desired, or say "Show map" to verify the location of the selected position on the map.

Operating voice command

Command list of audio system

Commands with ○ will be accessed in the selecting mode.

FM/AM Radio

Command		Operation
●	Radio	Plays the most recent frequency for the most recently operated Band.
●	(Radio) AM	Plays the most recent frequency for the corresponding Band.
●	(Radio) FM	Plays the most recent frequency for the corresponding Band. In the case of FM, the most recent frequency within the most recently played FM1 or FM2 band is played.
●	FM <1 or 2>	Plays the most recent frequency for the corresponding Band.
●	AM frequency <530 to 1710> (ex. AM frequency 1310)	Plays the desired AM band frequency.
●	FM frequency <87.5 to 107.9> (ex. FM frequency 99.1)	Plays the desired FM band frequency.
●	AM Preset <1 to 6>	Plays the desired AM band preset frequency.
●	FM <1 or 2> Preset <1 to 6>	Plays the desired preset frequency of FM1 or FM2 band.
○	Preset <1 to 6>	Plays the desired preset frequency for the current Band.
○	Seek Up	Searches and plays the next frequency of the current band.
○	Seek Down	Searches and plays the previous frequency of the current band.
○	Preset Up	Plays the next preset frequency of the current band.
○	Preset Down	Plays the previous preset frequency of the current.
○	Scan	Scans all frequencies within the current band.
○	Preset Scan	Scans the 6 preset frequencies of the current band.
○	Auto Store	Searches all frequencies within the current band and stores the 6 frequencies with the most superior reception as preset buttons.

XM Radio

Command		Operation
●	XM	Plays the last channel within the last band from XM1, XM2, and XM3.
●	XM <1 or 2 or 3>	Plays the most recent channel for the corresponding Band.
●	XM Channel <0 to 255>	Plays the desired XM band channel.
●	XM <1 or 2 or 3> Preset <1 to 6>	Plays the desired preset channel for XM1 or XM2 or XM3 band.
○	Channel <0 to 255 >	Plays the desired channel of the current band.
○	Preset <1 to 6>	Plays the desired preset channel of the current band.
○	Channel Up	Plays the next channel of the current band.
○	Channel Down	Plays the previous channel of the current band.
○	Preset Up	Plays the next preset channel of the current band.
○	Preset Down	Plays the previous preset channel of the current band.
○	Scan	Scans all channels within the current band.
○	Preset Scan	Scans all preset channels within the current band.

CD

Command		Operation
●	DISC	Plays the DISC already inserted in the CD Player.
●	CD	If the DISC inserted in the CD Player is either a CD or MP3 DISC, then the CD or MP3 will be played.
●	CD track <1 to 665>	If the DISC inserted in the CD Player is a CD, then CD Mode will start and plays the desired track.
○	Track <1 to 665>	Plays the desired track.
○	Next track	Plays the next track.
○	Previous track	Plays the previous track.
○	Scan	Scans all tracks on the CD DISC.
○	Repeat track	Repeats the current playing track.
○	Random	Plays the tracks of the CD DISC in random order.
○	Normal play	Turns off the Scan, Repeat, and Random functions.

Operating voice command

MP3

Command		Operation
●	DISC	Plays the DISC already inserted into the CD Player.
●	CD	If the DISC inserted in the CD Player is either a CD or MP3 DISC, then the CD or MP3 will be played.
●	MP3	If the DISC inserted in the CD Player is an MP3 DISC, then the MP3 will be played.
○	Next file	Plays the next file.
○	Previous file	Plays the previous file.
○	Next folder	Plays the first file in the next folder.
○	Previous folder	Plays the first file in the previous folder.
○	Scan	Scans all files within the MP3 DISC.
○	Folder Scan	Plays all songs in the folder in which the current playing file is located for 10 seconds each.
○	Repeat File	Repeats the current playing file.
○	Repeat Folder	Repeats all tracks within the current playing folder.
○	Random	Plays all files within the MP3 DISC in random order.
○	Random Folder	Plays all files within the current playing folder in random order.
○	Normal play	Turns off the Scan, Repeat, and Random functions.

USB MP3

Command		Operation
●	USB	If the USB has been connected to the device, plays the MP3 files within the USB.
○	Next file	Plays the next file.
○	Previous file	Plays the previous file.
○	Next folder	Plays the first chapter of the next folder.
○	Previous folder	Plays the first chapter of the previous folder.
○	Scan	Scans all files within the USB.
○	Folder Scan	Plays all songs in the folder in which the current playing file is located for 10 seconds each.
○	Repeat File	Repeats the current playing file.
○	Repeat Folder	Repeats all songs within the current playing folder.
○	Random	Plays all files within the USB in random order.
○	Random Folder	Plays all files within the current playing folder in random order.
○	Normal play	Turns off the Scan, Repeat, and Random functions.

USB IMAGE

Command		Operation
<input checked="" type="radio"/>	USB	If the USB IMAGE has been connected to the device, plays the image files within the USB.
<input type="radio"/>	Next file	Moves to the next file.
<input type="radio"/>	Previous File	Moves to the previous file.
<input type="radio"/>	Next folder	Moves to the next folder.
<input type="radio"/>	Previous folder	Moves to the previous folder.

iPod

Command		Operation
<input checked="" type="radio"/>	iPod	Plays the songs within the iPod if the iPod has been connected to the device.
<input type="radio"/>	Next song	Plays the next song.
<input type="radio"/>	Previous song	Plays the previous song.
<input type="radio"/>	Repeat song	Repeats the current playing song.
<input type="radio"/>	Random	Plays all songs within the iPod in random order.
<input type="radio"/>	Random Album	Plays all songs within the current playing album in random order.
<input type="radio"/>	Normal play	Turns off the Repeat and Random functions.

Other

Command		Operation
<input checked="" type="radio"/>	Line in	Plays the unit connected with the AUX terminal.
<input checked="" type="radio"/>	Audio on	Turns on the Audio.
<input checked="" type="radio"/>	Audio off	Turns off the Audio.

Operating voice command

Command list of navigation system

Map

Command		Operation
●	Map Current location	Displays the current position of the vehicle.
●	Zoom In	Decreases the map zoom by one level.
●	Zoom Out	Increases the map zoom by one level.
●	Zoom minimum	Displays the map screen in the maximum zoom level.
●	Zoom maximum	Displays the map screen in the minimum zoom level.
●	Zoom level <1 to 14>	Displays the map in the zoom level selected from the 14 levels.
●	Zoom <scale factor>	Displays the map in the corresponding zoom.
	150 feet / 50 meters	
	300 feet / 100 meters	
	700 feet / 200 meters	
	0.25 miles / 400 meters	
	0.5 miles / 800 meters	
	1 mile / 1.6 kilometers	
	2 miles / 3.2 kilometers	
	4 miles / 6.4 kilometers	
	8 miles / 12 kilometers	
	16 miles / 25 kilometers	
	32 miles / 50 kilometers	
	64 miles / 100 kilometers	
	130 miles / 200 kilometers	
	250 miles / 400 kilometers(ex. Zoom 0.25 miles, zoom 400 meters)	
○	North up	Displays the map in North Up mode.
○	Heading up	Displays the map in Heading Up mode.
○	Show <POI name> (ex. Show ATM)	Displays the selected POI categories.
○	Hide <POI name> (ex. Hide ATM)	Hides the selected POI categories.
○	Hide all	Hides all POI categories.
○	Daylight mode	Converts the map display into daylight mode.

Command		Operation
<input type="radio"/>	Night mode	Converts the map display into night mode.
<input type="radio"/>	Auto mode	Converts the map display is between daylight/ night modes automatically.

Destination

Command		Operation
<input checked="" type="radio"/>	Find address	Sets the destination through address search for route guidance.
<input checked="" type="radio"/>	Find nearest POI	Sets a POI near the current position as the destination for route guidance through POI category search.
<input checked="" type="radio"/>	Find nearest <POI name>	Sets a POI near the current position as the destination by directly inputting the POI name for route guidance.
<input checked="" type="radio"/>	Destination POI by phone number	Sets the destination by searching the phone number of the facility.
<input checked="" type="radio"/>	Find Emergency <Category>	Searches for an emergency facility which is nearby the current position and sets it as the destination for route guidance. Emergency facilities are police stations, hospitals, and dealerships.
<input checked="" type="radio"/>	Destination by address book	Sets one of the list of previously registered addresses in the address book for the user as the destination.
<input checked="" type="radio"/>	Previous destination	Sets one of the previous destination as the current destination.
<input checked="" type="radio"/>	Previous start point	Sets the previous start point as the current destination.
<input checked="" type="radio"/>	Go home	Sets the previous registered home address as the destination for route guidance.
<input checked="" type="radio"/>	Destination by memory point <1 to 5>	Sets a previous registered memory point as the destination for route guidance.

Operating voice command

Route

Command		Operation
●	Cancel route	Deletes the designated destination and terminates the route guidance.
●	Repeat voice guidance	Repeats the route guidance.
●	Detour <1 or 2 or 5 or 10> miles	Searches detour routes within a <1 2 5 10> mile radius.
●	Detour <1 or 2 or 5 or 10> kilometers	Searches detour routes within a <1 2 5 10> kilometer radius.
●	Replan recommended route	Recalculates the route with the recommended route.
●	Replan shortest route	Recalculates the route with the shortest route.
●	Distance to destination	Reports the remaining distance until destination by voice.
●	Time to destination	Reports the remaining time until destination by voice.
○	View route	If the destination has been set, displays the whole route screen until the destination.
○	Start guidance	Sets the scroll mark displayed on the map as the destination and starts route guidance.

Other

Command		Operation
●	Voice guidance on	Turns the Voice Guidance On.
●	Voice guidance off	Turns the Voice Guidance Off.
●	Voice guidance louder	Increases the Voice Guidance volume by 1 level.
●	Voice guidance softer	Decrease the Voice Guidance volume by 1 level.
●	Store marked location to <text tag> (ex. Store marked location to user 1)	Registers the selected location into the selected Address book.

POI Category list

All restaurants
Fast Food restaurant
American restaurant
French restaurant
Italian restaurant
Continental restaurant
Mexican restaurant
Japanese restaurant
Chinese restaurant
Korean restaurant
Vegetarian Food restaurant
Seafood restaurant
Latin American restaurant
Asian restaurant
African restaurant
Coffee Shop
Other restaurants
All automotive
Hyundai Dealership
Gas Station
Parking
Auto service
Road Assistance
Automobile Dealership
Auto Parts
Rest Area
Car Wash
Motorcycle Dealership
All Travel
Airport
Hotel
Tourist Information
Travel Agent
Tourist Attraction
City Cnter
Rental Car Agency
Campground
Ferry Terminal
Bus Station
Local Transit
Train Station
All Shopping
Department Store
Convenience Store
Shopping Center
Music Store
Grocery Store
Bookstore
Electronics Store
Hardware Store
Gifts shop
Sporting Goods store

Home Specialty Store
Clothing shop
Shoe Store
Pharmacy
All Recreation
Amusement Park
Museum
Cinema
Sports Activities
Sports Complex
Golf Course
Winery
Video & Game Rental
Ski Resort
Recreation Area
Other Recreation
All Financial Service
Bank
ATM
Check Cashing Service
Money Transfer
Business Facility
All Community
Police Station
Post Office
Library
Court House
Fire Department
Convention Center
City Hall
Civic Center
School
Government Offices
Waste & Sanitary
Utilities
All Services
Hospital
Dentist
Photography
Tax Service
Medical Service
Attorney
Funeral Director
Hair & Beauty
Cleaning & Laundry
Social Service
Physician
Communication services
Tailor & Alteration
Mover services

Operating voice command

Command list of Phone



Command		Operation
●	Call Name	Makes the call to the name.
●	Dial Number	Makes the call to the number.
●	Redial	The recently called number is redialed.
●	Recent Calls	The user can select a number from the outgoing, incoming, and missed calls.


Command list of Help

Command		Operation
●	Help	Displays the main Help screen.
●	Destination Help	Displays the Destination related command list.
●	Map Help	Displays the Map related command list.
●	Radio Help	Displays the FM/AM radio related command list.
●	XM Help	Displays the XM radio related command list.
●	Disc Help	Displays the DISC mode related command list for the disc inserted in the CD Player.
●	iPod Help	Displays the iPod related command list.
●	USB Help	Displays the USB related command list.
●	Phone help	Display the phone help screen.
●	Voice setup Help	Displays the Voice prompt settings and speaker-adaptive commands on the screen.

Converting Bluetooth® Handsfree mode

Converting from Audio/Navigation mode to Bluetooth® Handsfree mode

1. While in Audio mode or Navigation mode, press the  key or the  key on the steering wheel.

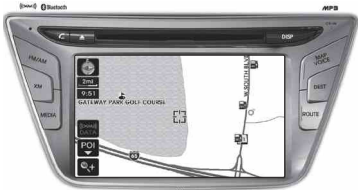

2. The system will change to Bluetooth® Handsfree mode and display the PHONE screen.




3. The following screen will become displayed if no mobile phone has been connected.



Converting from Bluetooth® Handsfree mode to Audio/Navigation mode



1. While in Bluetooth® Handsfree mode, press an Audio/Navigation mode key, such as **FM/AM** key or **MAP VOICE** key.

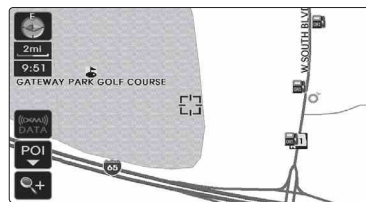

2. The corresponding mode will be displayed.


INFORMATION

Most of the functions of the Audio or SETUP modes are not supported while on a Bluetooth® Handsfree call. The call volume and Navigation (MAPVOICE, DEST, ROUTE) screens can be operated.


Pairing and connecting a Bluetooth® phone

Pairing a mobile phone

1. Press the **Settings** button on the PHONE screen.

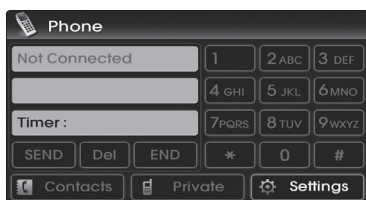

2. Press the **Pairings** button on the Settings screen.

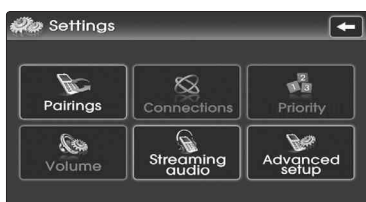

3. The list of currently paired phones will be displayed. Press the **Add to** button to pair a new mobile phone.



i INFORMATION

For safety reasons, pairing a Bluetooth® phone is not possible when the vehicle is in motion. Park the vehicle in a safe location to pair a new phone. It is possible to pair up to five mobile phones. In order to pair a new phone when there are already five mobile phones

paired, you must first delete one of the previously paired phones.

4. From the Bluetooth® device list within the mobile phone, add the car handsfree. The default name of the car system is ELANTRA.

For more information on registering Bluetooth® devices from the mobile phone, please refer to the mobile phone user's manual.



i INFORMATION

While conducting a Bluetooth® device search from the mobile phone, operating to another screen will prevent the car handsfree from being found in the mobile phone. Always conduct searches for Bluetooth® devices with the Search Bluetooth® device screen displayed.

5. When pairing the car handsfree from the mobile phone, a passkey input window will become displayed on the mobile phone screen. Input the passkey set within the car system into the mobile phone input window.

(The factory state passkey is 0000.)
As shown in the figure, once the passkey becomes successfully inputted, the Bluetooth® connection between the car system and mobile phone will start.



6. Once Bluetooth® connection is successful, the name of the connected mobile phone will become displayed on the PHONE screen and Bluetooth® handsfree functions will operate.



i INFORMATION


Some functions may not be supported due to limited Bluetooth® compatibility between the car system and mobile phone.

Connecting a mobile phone

1. Press the **Settings** button on the PHONE screen.



2. Press the **Connections** button on the Settings screen.

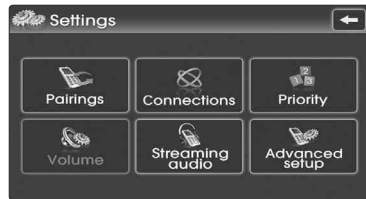

3. The list of currently paired phones will be displayed. Select the phone you wish to connect from the list and press the **Connect** button.



i INFORMATION

When there are no paired phones, pair the mobile phone through [Settings > Pairings > Add to].

Pairing and connecting a Bluetooth® phone

- The Bluetooth® connection between the car system and mobile phone will start.
- Is the power of the mobile phone Bluetooth® has been turned on.



- Once Bluetooth® connection is successful, the name of the connected mobile phone will become displayed on the PHONE screen and Bluetooth® handsfree functions will operate.



- If the connection between the mobile phone and Bluetooth® fails, the following pop-up will be displayed.



If problems occur while connecting Bluetooth® check the following condition.


- Is the mobile phone you wish to connect is in the vicinity of the car system.

Making a call

Making a call by dialing a phone number

1. Use the number pad on the right side of the PHONE screen to input the number you wish to call.




2. Press the **SEND** button or the  key on the steering wheel to make the call.



INFORMATION

To modify, press the **Del** button to delete the inputted number one digit at a time.

Press the **END** button or the  key on the steering wheel to cancel the call.

Making a call from the Phone book

1. Press the **Contacts** button on the PHONE screen.



2. The phone book list will be displayed.



INFORMATION


Upon connecting a mobile phone, the phone book lists saved in the mobile phone will automatically be downloaded. The phone book download function may not be supported in some mobile phones.

3. Select the number you wish to call from the phone book list and press the **SEND** button.



Making a call


4. The call will be made to the selected number.

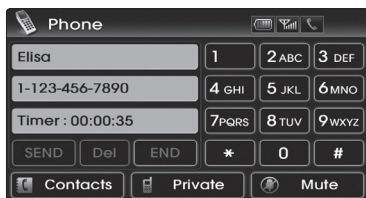

i INFORMATION

When there are more than 2 numbers saved in one phone number list, if the list is repeatedly selected, the registered phone numbers will be displayed sequentially on the list. Select the phone number you wish to connect by repeatedly selecting the phone number list and press the **SEND** button to make the call to the selected number.

Making a call from Call history


1. Press the **SEND** button on the PHONE screen or press the  key on the steering wheel.



2. The call history list will be displayed. Select the number you wish to call from the call history list and press the **SEND** button.




3. The call will be made to the selected number.

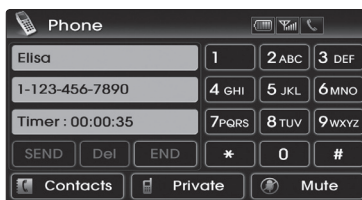

Operating menus during a call

Switching call to the mobile phone


1. If you wish to switch the call to the mobile phone while talking on the car handsfree, press the **Private** button or press and hold (over 0.8 second) the  key on the steering wheel.



2. As shown, the call will be switched to the mobile phone.




INFORMATION

If you wish to switch the call to the car handsfree while talking on the mobile phone, press the **Use handsfree** button or press and hold (over 0.8 second) the  key on the steering wheel. The call will be switched to the car handsfree.


Activating Call waiting

1. If another person calls while already on a call, the following screen will be displayed.



2. Press the **Accept** button or the  key on the steering wheel to receive the incoming call by switching to the new caller.




3. To switch again to the other caller, press the **Switch** button or the  key on the steering wheel. The other call will be received and the previous call will switch back to call waiting.



Operating menus during a call

Ending a call

1. To end a call, press the **END** button or the  key on the steering wheel.



2. The call will be ended.



CAUTION!

Mobile Phone Compatibility

Depending on the manufacturer, product and product specification, some mobile phones functions may not be supported. Carefully read the cautions listed below.

- The occurrence of problems upon using mobile phones may be caused by the mobile phone and not by the Audio/NAVI.
 - Even mobile phones which support Bluetooth® function may not operate properly if the mobile phone connection has been locked.
- Release the connection lock and try connecting the mobile phone with the system again.
 - The Mobile phone battery icon and signal strength icon may not be properly displayed depending on the type of mobile phone.
 - Call waiting is supported only when connected to mobile phones which support this feature. The call waiting pop-up may not be displayed in some mobile phones.
 - Audio streaming mode will operate only when a Bluetooth® phone has been connected. Connecting or disconnecting a Bluetooth® phone while audio streaming is operating will stop music play.
 - The audio streaming function may not be supported in some mobile phones.
 - The phonebook may take a prolonged period of time to download or may not operate in some mobile phones. The quality of Bluetooth® handsfree calls may differ depending on the mobile phone.

Starting Phone music

1. Repeatedly press the **MEDIA** key on the front panel or the **MODE** key on the steering wheel to enter Phone music mode.



i INFORMATION

Each press of the **MEDIA** key on the front panel will change the function in the order of DISC → USB or iPod → AUX → Phone Music → DISC ...

Each press of the **MODE** key on the steering wheel will change the audio mode in the order of FM1 → FM2 → AM → XM1 → XM2 → XM3 → DISC → USB or iPod → AUX → Phone Music → FM1...

It is not possible to enter Phone music mode if the mobile phone is not connected or if the audio streaming setting within Bluetooth® handsfree settings has been set to **Disable streaming audio**.



2. The Phone music screen is displayed.

i INFORMATION

While music saved in the mobile phone will automatically begin playing after converting to the Phone music screen, this music player function may not be supported in some mobile phones.

If music does not begin playing even after converting to the Phone music screen, try starting the music directly from the mobile phone.

Selecting Phone music files

1. Press the **⏮**, **⏭** buttons on the Phone music screen or the **SEEK TRACK** key on the system.

The previous or next song will be played each time the button or key is pressed.



i INFORMATION

The file selection function may not be supported in some mobile phones.

MEMO

MEMO
