


2013 **ROGUE**

QUICK REFERENCE GUIDE



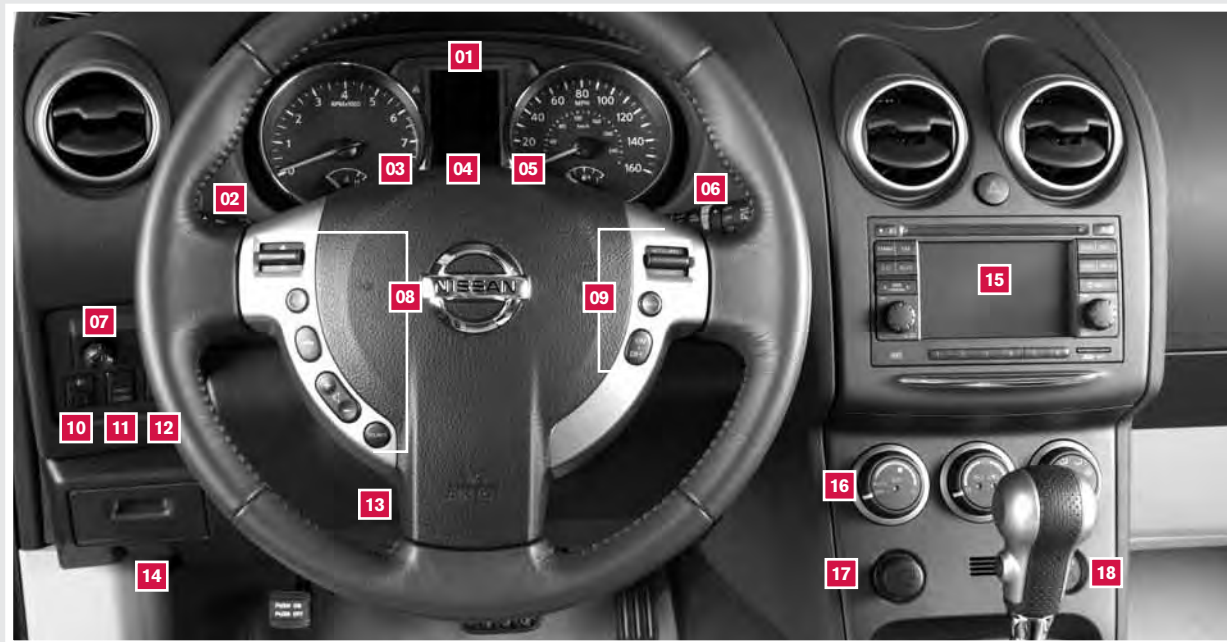

- 01** VEHICLE INFORMATION DISPLAY*
- 02** HEADLIGHT AND TURN SIGNAL CONTROL
- 03** LOW TIRE PRESSURE WARNING LIGHT
- 04** INSTRUMENT BRIGHTNESS CONTROL SWITCH*
- 05** TRIP CHANGE BUTTON*

- 06** WINDSHIELD WIPER / WASHER SWITCH
- 07** OUTSIDE MIRROR CONTROL SWITCH
- 08** STEERING WHEEL SWITCHES FOR AUDIO CONTROL* / BLUETOOTH*
- 09** CRUISE CONTROL
- 10** HEADLIGHT AIMING CONTROL*

- 11** AWD LOCK SWITCH*
- 12** VEHICLE DYNAMIC CONTROL (VDC) OFF SWITCH*
- 13** STEERING WHEEL TILT ADJUSTMENT*
- 14** HOOD RELEASE*

- 15** AUDIO AND NAVIGATION SYSTEM
- 16** AUTOMATIC CLIMATE CONTROLS*
- 17** POWER OUTLET*
- 18** FRONT PASSENGER AIR BAG STATUS LIGHT*

*See your Owner's Manual for information.

NEW SYSTEM FEATURES

Around View™ Monitor (if so equipped)	2
Sport Mode	3
USB/iPod® Interface (if so equipped)	3
Navigation System (if so equipped)	4

ESSENTIAL INFORMATION

Loose Fuel Cap	5
Tire Pressure Monitoring System (TPMS)	5
Towing Your Vehicle	6
Outside Temperature Display	6

FIRST DRIVE FEATURES

NISSAN Intelligent Key® System (if so equipped)	7
Liftgate Release (NISSAN Intelligent Key® models only - if so equipped)	7
Front Seat Adjustments	8
Folding the Front Passenger's Seat Down (if so equipped)	8
Folding the Rear Seatbacks Down	9
Outside Mirror Control Switch	9
Starting/Stopping the Engine (NISSAN Intelligent Key® models only - if so equipped)	9
Headlight Control	10
Windshield Wiper/Washer Switch	11
Manual Climate Controls (if so equipped)	12
FM/AM/SiriusXM™ Satellite Radio with CD Player (if so equipped)	13
Cruise Control	14
Fuel-Filler Door	14

SYSTEM GUIDE

Trip Computer	15
Bluetooth® Hands-free Phone System (if so equipped)	15



- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the **"Safety — Seats, seat belts and supplemental restraint system (section 1)"**, **"Center display, heater, air conditioner, audio, phone and voice recognition systems (section 4)"** and **"Starting and driving (section 5)"** of your Owner's Manual.



To view detailed instructional videos, go to
www.nissanownersinfo.mobi/2013/rogue
 or snap this barcode with an appropriate barcode reader.



Additional information about your vehicle is also available in your Owner's Manual, Navigation System Owner's Manual and at www.nissanusa.com.

new system features

AROUND VIEW™ MONITOR (if so equipped)

- With the ignition switch in the **ON** position, the Around View™ Monitor is activated by pressing the **CAMERA** button **01**, located on the center console, or by moving the shift lever to the **R (REVERSE)** position. The monitor displays various views of the position of the vehicle.
- When the shift lever is in the **P (PARK)**, **N (NEUTRAL)** or **D (DRIVE)** position and the **CAMERA** button **01** is pressed, the following views will display in order:



Start from any Control Panel screen



Press



Front view & bird's-eye view



Press



Front view & front-side view



Press



- When the shift lever is in the **R (REVERSE)** position and the **CAMERA** button **01** is pressed, the following views will display in order:

Rear view & bird's-eye view



Press



Rear view & front-side view




Press



- The colored guide lines on the display screen indicate vehicle width and approximate distances to objects with reference to the vehicle body line.
 - Red 1.5 ft (0.5 m); Yellow 3 ft (1 m); Green 7 ft (2 m) and 10 ft (3 m).
- For information regarding how to access additional viewing cycles, please see your Owner's Manual.

NOTE:

- There are some areas where the system will not detect objects.
 - When in the front or the rear view display, an object below the bumper or on the ground may not be detected **02**.
 - When in the bird's-eye view, a tall object near the seam of the camera detecting areas **03** will not appear in the monitor.
- The distance between objects viewed on the Around View Monitor differs from the actual distance.
- Objects in the bird's-eye view will appear further than the actual distance.

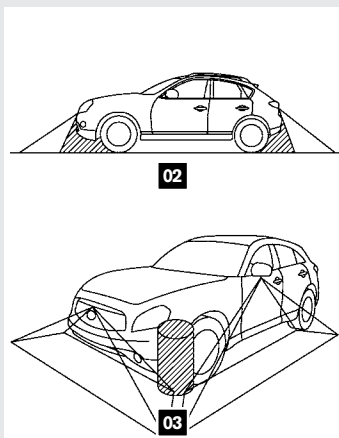

For more information, refer to the “**Center display, heater, air conditioner, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

SPORT MODE

- In the **SPORT** mode, the engine and transmission are controlled to set the engine speed higher than in the **D (DRIVE)** position. This enhances throttle response for a “sporty” driving feeling.
- The **SPORT** mode switch **01** is located on the center console.
- To turn the **SPORT** mode on, push the **SPORT** mode switch. The **SPORT** mode indicator light in the instrument panel illuminates. To turn the **SPORT** mode off, push the **SPORT** mode switch again. The **SPORT** mode indicator light on the instrument panel will turn off.




For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

USB/IPOD® INTERFACE (if so equipped)

- The USB jack is located in the center console under the arm rest **01**.
- When a compatible USB memory device or iPod® is plugged into the USB jack **02**, compatible audio files stored on the device can be played through the vehicle’s audio system.

For more information, refer to the “**Center display, heater, air conditioner, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

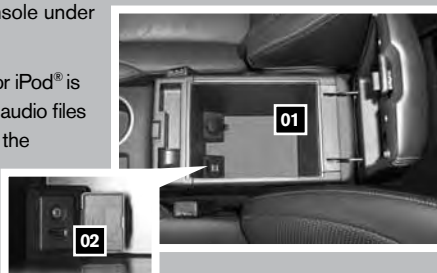

new system features




NAVIGATION SYSTEM (if so equipped)

- Your Navigation System can calculate a route from the current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.

- 01** ☀/☾ button – Press to change the display brightness between day and night modes. While the mode is being displayed, the brightness can be adjusted using the **SCROLL** knob. Press and hold to turn the display off. Press again to turn the display on.
- 02** **NAV** button – Press to access the functions of the Navigation System.
- 03** **TRAF** button – Press to view traffic information on the route (if so equipped).
- 04** **Voice** key – Select to repeat the voice guidance while a route is active. Select and hold to switch the voice guidance on and off.
- 05** **MAP** button – Press to display the current location map screen.
- 06** **SETUP** button – Press to access the system settings.
- 07** ➕ key – Select to zoom the map in.
- 08** Touch screen display.
- 09** ↶ **BACK** button – Press to return to the previous screen.
- 10** ➖ key – Select to zoom the map out.
- 11** **VOL** knob – Turn right to increase the volume or left to decrease the volume.
- 12** **SCROLL** knob – Turn to scroll through the items in a list. Press to select a menu item.
- 13** **Menu** key – Select to access system menu options; “Store Current Position”, “Show Position/GPS Information”, “Show Destination Information” and “Map Setup”.
- 14** SD-card location – An SD-card with map data must be inserted here for map functions to operate.

For more information, refer to your Navigation System Owner's Manual.

LOOSE FUEL CAP


- A **Loose fuel cap** warning message will appear in the vehicle information display **01** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- The warning message will disappear when the vehicle detects the fuel-filler cap is properly tightened and the reset button **02** is pressed.
- If the cap is not properly tightened, the Malfunction Indicator Light  may illuminate.

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.



TIRE PRESSURE MONITORING SYSTEM (TPMS)

- A **Check tire pressure** warning message will appear in the vehicle information display **01** and the low tire pressure warning light **02** will illuminate when one or more tires are low on pressure and air is needed.
 - The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mile (1.6km) at moderate speeds.
- After tire pressures are adjusted, drive the vehicle at speeds above 16 MPH (25km/h). The **Check tire pressure** warning message and low tire pressure warning light will disappear.
- When the low tire pressure warning light flashes for 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked by a NISSAN dealer.
- Tire pressure rises and falls depending on the heat caused by the vehicle’s operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light to illuminate. If the warning light illuminates in low ambient temperature, check the tire pressure in your tires.
 - Check the tire pressure (including the spare tire) often and always prior to long distance trips.
- The Tire and Loading Information label contains valuable information. Please refer to section 9, “Technical and consumer information”, in your Owner’s Manual for the location of the Tire and Loading Information label.

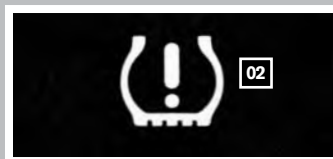

For more information, refer to the “**Instruments and controls (section 2)**”, the “**Starting and driving (section 5)**” and the “**Maintenance and do-it-yourself (section 8)**” of your Owner’s Manual.

TOWING YOUR VEHICLE

■ ALL-WHEEL DRIVE (AWD) VEHICLE

- An all-wheel drive vehicle must be towed with all wheels off the ground.
- For proper towing and to avoid accidental damage to your vehicle, NISSAN recommends that a service operator tow your vehicle after carefully reading the Owner's Manual precautions.

For more information, refer to the “**In case of emergency (section 6)**” of your Owner's Manual.

OUTSIDE TEMPERATURE DISPLAY

- When the ignition switch is in the **ON** position, the outside air temperature will appear in the vehicle information display **01**.
- If the outside air temperature is below 25°F (-4°C), the outside temperature display will blink for 20 seconds then remain on when the ignition is switched on.
- If the outside air temperature is between 27°F and 37°F (-3°C and +3°C), the outside temperature display will blink continuously with the ignition switch in the **ON** position.
- To stop the outside temperature display from blinking, stop the vehicle in a safe place and move the shift lever to the **(P) PARK** position. Perform the following procedure:
 1. Press the control change button **02** until the **Settings** mode is displayed.
 2. Turn the control button until it reaches the **Alarms** mode, then press to select.
 3. Turn the control button until it reaches the **Outside temp** mode, then press to select.
 4. Turn the control button until it reaches the **Off** mode, then press to select.
 5. To exit, press the control button again.



LOW OUTSIDE TEMPERATURE WARNING

- The **Low outside temperature** warning message will appear in the vehicle information display **03** when the outside temperature drops below 37°F (+3°C) with the ignition switch in the **ON** position.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner's Manual.

NISSAN INTELLIGENT KEY® SYSTEM (if so equipped)

The NISSAN Intelligent Key® System allows you to lock or unlock the vehicle, open your liftgate and start the engine.

NOTE: It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

- The operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, push either door handle request switch **01**, push the liftgate request switch **02**, or press the **Ⓛ** button **03** on the keyfob.
- To unlock the vehicle, perform one of the following procedures:
 - Push either door handle request switch **01** once or the liftgate request switch **02** once; the corresponding door will unlock. Push the request switch again within 5 seconds; all other doors will unlock, or
 - Press the **Ⓛ** button **04** on the keyfob to unlock the driver's side door. Press the **Ⓛ** button again; all other doors will unlock.
- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the **🔔** button **05** for more than 1 second. Once activated, the panic alarm and headlights will stay on for 25 seconds.


For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

LIFTGATE RELEASE (NISSAN Intelligent Key® models only – if so equipped)

- To open the liftgate, unlock the liftgate using one of the following methods:
 - Press the **Ⓛ** button **01** on the keyfob twice.
 - Push the liftgate request switch **02**.
- Then push the liftgate release switch **03** just above the license plate and pull the liftgate up.

Note: It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

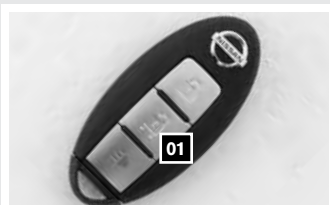

first drive features

FRONT SEAT ADJUSTMENTS

With manual seats (if so equipped):

FORWARD AND BACKWARD

- To move the seat forward or backward, pull up on the lever **01** under the front of the seat



and slide the seat forward or backward. Release the lever to lock the seat in position.



SEAT LIFTER (if so equipped for driver's seat)

- To adjust the seat height, pull up or push down on the adjusting lever **02** repeatedly.

RECLINING

- To adjust your seatback forward or backward, lift the lever **03** on the side of the seat; release the lever when you have found a comfortable angle and the seat belt fits properly.

With power seats (if so equipped):

- To adjust the seat cushion forward or backward, move the control switch **04** forward or backward.



SEAT LIFTER (if so equipped for driver's seat)

- To adjust the front portion of the driver's seat cushion, pull up or press down on the front of the control switch **A**.
- To raise or lower the rear portion of the driver's seat cushion, pull up or press down on the rear of the control switch **B**.

RECLINING

- To move the seatback forward, push the adjusting switch **05** forward; to move the seatback backward, pull it back.

LUMBAR SUPPORT (driver's seat, if so equipped)

- To adjust the lumbar support, push the adjusting switch **06** repeatedly.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)" of your Owner's Manual.

FOLDING THE FRONT PASSENGER'S SEAT DOWN (if so equipped)

To fold the front passenger's seatback down for extra storage length when transporting long items:

- Lift up on the recline lever **01**, located on the outside edge of the seat and fold the seatback forward as far as it will go.
- To return the seatback to a seating position, lift the front passenger's seatback to an upright position.



For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)" of your Owner's Manual.

FOLDING THE REAR SEATBACKS DOWN

- To fold the rear seatbacks down, pull up on the release lever **01** located on the outer edge of the seatbacks and fold the seatbacks forward.

For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.



OUTSIDE MIRROR CONTROL SWITCH

- To select the right or left side mirror, turn the control switch right or left.
- To adjust the mirror angle, move the control switch up, down, right or left.
- To prevent accidentally moving the mirror, turn and set the switch to the middle “neutral” position.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.



STARTING/STOPPING THE ENGINE (NISSAN Intelligent Key® models only – if so equipped)

- Depress the brake pedal.
- Push the ignition switch in.
- Turn the ignition switch to **START**.

NOTE: It is important to make sure the NISSAN Intelligent Key® is with you (that is, in your pocket or purse).

TURNING THE ENGINE OFF

- Move the shift lever to the **P (PARK)** position, apply the parking brake and turn the ignition switch to the **LOCK** position.


For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.



HEADLIGHT CONTROL

HEADLIGHT CONTROL SWITCH

- Turn the headlight control switch to the **01** position to turn on the front parking, side marker, tail, license plate and instrument panel lights. Turn the switch to the **02** position to turn on the headlights.

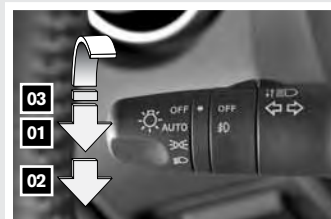


AUTOLIGHT SYSTEM (if so equipped)

- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **03** then turn the ignition switch to **ON**. To deactivate the autolight system, turn the headlight control switch to the **OFF**, **01** or **02** position.

HIGH BEAM SELECT


- Push the headlight control switch forward **04** to select the high beam function. The blue indicator light **05** illuminates in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The blue indicator light goes off.
- Pull and release the headlight control switch **05** to flash the headlight high beams on and off.

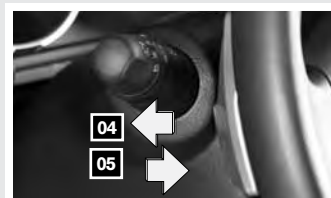

FOG LIGHT SWITCH (if so equipped)

NOTE: The headlights must be on and the low beams selected for the fog lights to operate.


- Turn the switch (inside collar) to the **06** position to turn the fog lights on.
- Turn the switch (inside collar) to the **OFF** position to turn the fog lights off.

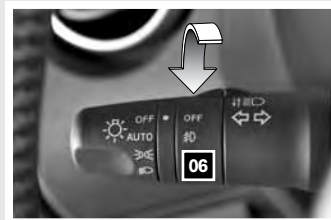


For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.


WINDSHIELD WIPER/WASHER SWITCH



- Move the lever to the following positions to operate the windshield wipers:

- 01** Mist (**MIST**) - One sweep operation of the front wipers.
- 02** Intermittent (**INT**) - Front wipers operate intermittently. The intermittent operation speed can be adjusted by twisting the time control ring **03**.
- 04** Low (**LO**) - Front wipers operate at a continuous low-speed.
- 05** High (**HI**) - Front wipers operate at a continuous high-speed.
- 06** Front Washer  - Pull the lever toward you to activate the front washer. The front wipers will operate several times.

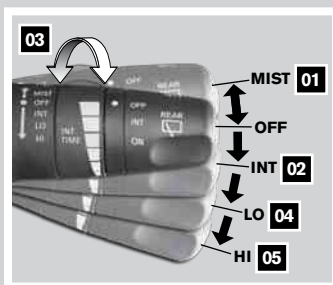


REAR WINDSHIELD WIPER AND WASHER

- 07** Intermittent (**INT**) - Rear wiper operates intermittently.
- 08** Low (**ON**) - Rear wiper operates at a continuous low-speed.
- 09** Rear Washer  - Push the lever forward to activate the rear washer. The rear wiper will operate several times.

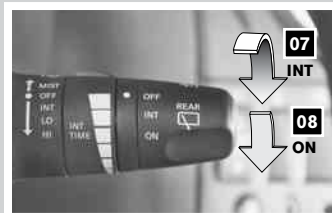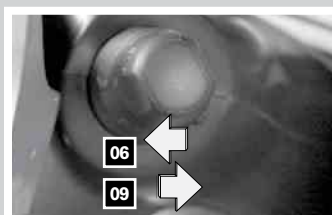


For more information, refer to the “Instruments and controls (section 2)” of your Owner’s Manual.

first drive features

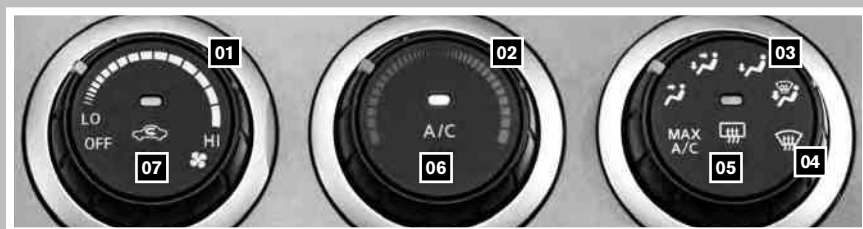

MANUAL CLIMATE CONTROLS (if so equipped)

01 FAN SPEED CONTROL DIAL

 
- Turn the fan speed control dial  to the left (**LO**) or right (**HI**) to control fan speed.


02 TEMPERATURE CONTROL DIAL

- Turn the temperature control dial to set the desired temperature. Turn the control dial to the left for cooler air or right for warmer air.


03 AIR FLOW CONTROL DIAL


- Turn the dial to select the following air flow outlets:


 **MAX A/C** Air flows from center and side vents with maximum cooling (air conditioning).

 Air flows from the center and side vents.


 Air flows from the center, side and foot vents.

 Air flows mainly from the foot vents.

 Air flows from the defroster and foot vents.

 Air flows mainly from the defroster vents.

04 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Turn the air flow control dial to the front window defroster mode . If it is difficult to defog the windows, push the **A/C** button on. This feature removes humidity from the air.
- Turn the temperature control dial left or right to set the desired temperature.
- To set the defroster on high, turn both the fan speed dial **01** and the temperature control dial **02** all the way to the right.


 
 
05 DEFROSTING REAR WINDOW

- Push the rear window defroster switch. Push the switch again to manually turn the defroster off. This function automatically turns off in approximately 15 minutes.

06 A/C ON/OFF BUTTON

- Press the **A/C** button to turn the air conditioner system on or off. This system helps cool and dehumidify the air inside the cabin and defog the windows.

07 AIR RECIRCULATION BUTTON

- The air recirculation button is used to avoid outside odors.
- Press the air recirculation button  once to turn on and press again to turn off.
- The air recirculation mode is only functional when the air flow control dial is in the  or  position.

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Center display, heater, air conditioner, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.



FM/AM/SiriusXM™ SATELLITE RADIO WITH CD PLAYER (if so equipped)

01 VOL/ON-OFF CONTROL KNOB

- Press the **VOL/ON-OFF** control knob to turn the system on or off.
- Turn the **VOL/ON-OFF** control knob to the right or left to increase or decrease the volume.

02 TUNE/SCROLL/AUDIO KNOB

- To manually tune the radio, turn the **TUNE/SCROLL/AUDIO** knob left or right.

03 SEEK/CATEGORY BUTTONS

- To scan through each broadcasting station, press the **SEEK/CATEGORY** buttons.
- To skip from one track to another on a CD, press the **SEEK/CATEGORY** buttons.
- When the **SEEK/CATEGORY** buttons are pressed and held while a CD is playing, the CD will rewind or fast forward. When the button is released, the CD will play at normal speed.

04 STATION SELECT BUTTONS

- Twelve stations can be set for the FM band, six for the AM band and eighteen for SiriusXM™ satellite radio.
- To store a station in a preset you must first select a radio band by pressing the **FM-AM** button 05 or **XM** button 06, then tune to the desired AM, FM or SiriusXM satellite radio station.
- Then press and hold the desired station select button (1-6) until a beep is heard and the sound is briefly muted. The channel indicator will appear on the display and the sound will resume. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then press the corresponding station select button (1-6).

*SiriusXM™ Satellite Radio is only available on vehicles equipped with optional SiriusXM™ satellite subscription service.

For more information, refer to the “**Center display, heater, air conditioner, audio, phone and voice recognition systems (section 4)**” of your Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi


first drive features

CRUISE CONTROL

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 mph.

The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.

- To activate the cruise control, push the **ON-OFF** switch **01**. The **CRUISE** indicator light in the instrument panel will illuminate.
- To set cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch **02** and release. The **SET** indicator light in the instrument panel will illuminate. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **03**. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **02**. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, tap the brake pedal or push the **CANCEL** switch **04**.
- To turn off cruise control, push the **ON-OFF** switch **01**. Both the **CRUISE** indicator light and **SET** indicator light, in the instrument panel, will turn off.

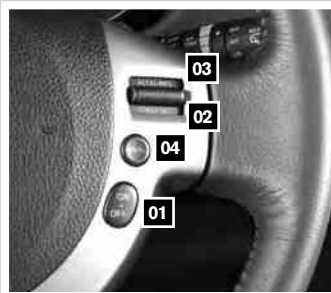

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

FUEL-FILLER DOOR


- The fuel-filler door is located on the right, rear side of the vehicle.
- To open the fuel-filler door, pull the left side of the door.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.



TRIP COMPUTER


- With the ignition switch in the **ON** position, trip computer **01** modes can be selected by pressing the control change button **02** on the instrument panel.
- The following modes can be selected in the display:
 - **Fuel Economy** – displays the current and average fuel consumption.
 - **Average Speed** – displays the average vehicle speed since the last reset.
 - **Driving Distance** – displays the distance driven since the last reset.
 - **Elapsed Time** – displays the time since the last reset.
 - **Range** – displays the estimated distance to empty (dte) the vehicle can be driven before refueling.
 - **Settings** – This menu allows you to set the clock, preferences for alerts, maintenance intervals or language displays. Turn the control change button **02** to select or adjust menu items and press the button to set.

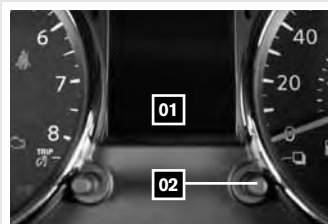


For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

BLUETOOTH® HANDS-FREE PHONE SYSTEM (if so equipped)

- With an overhead microphone and sound transmitted through the audio system speakers, the Bluetooth® Hands-free Phone System utilizes Bluetooth wireless technology and voice recognition to provide hands-free cellular phone communication.
- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.*

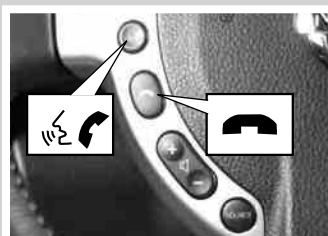
 


SYSTEM OPERATING TIPS

- Reduce background noise as much as possible by closing windows and pointing HVAC vents away from the ceiling.
- Press the  button on the steering wheel to activate voice recognition.
- Wait for the tone before speaking.
- Begin speaking a command within 5 seconds of the tone.
- Speak in a clear and natural voice without pausing between words.
- Look straight ahead and avoid speaking too loudly or too softly.
- To go back to the previous command, say “Go back” or “Correction.”




*Some jurisdictions prohibit the use of cellular telephones while driving.

- To cancel a voice recognition session, simply wait 5 seconds, say “Cancel” or “Quit,” or press and hold the  button for 5 seconds.
- To interrupt the system voice and give a command quickly, press the  button.
- When speaking Phonebook names, please be aware some phones require the last name to be spoken before the first name. For example, “Michael Smith” may be spoken as “Smith Michael”.
- To increase or decrease the volume of the voice prompts, push the volume control switches **+** or **—** on the steering wheel or turn the **VOL/ON-OFF** control knob on the audio system while the system is responding.
- If the Voice Recognition system does not recognize your voice commands, train the system using the Speaker Adaptation Mode. See your Owner's Manual for detailed information.
- Some commands are not available while the vehicle is in motion.
- The “Help” command can be used to hear a list of available commands at any time.
- Please refer to the cellular phone manufacturer's Owner's Manual for detailed information regarding your Bluetooth phone.
- For recommended phones and detailed instructions, please visit **www.nissanusa.com/bluetooth**.

CONNECTING PROCEDURE


NOTE: The vehicle must be stationary when connecting the phone.

1. Press the  button on the steering wheel. The system announces the available commands.
2. Say: “Connect phone”. The system acknowledges the command and announces the next set of available commands.
3. Say: “Add phone”. The system acknowledges the command and asks you to initiate connecting from the phone handset.
4. Initiate connecting from the phone:
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and compatible phones, please visit **www.nissanusa.com/bluetooth**.
 - When prompted for a Passkey code, enter “1234” from the handset. (The Passkey code is assigned by NISSAN and cannot be changed.)
5. Say a name for the phone when the system asks you to provide one. You can give the phone a name of your choice.

PHONEBOOK SETUP

- Depending on your cell phone, the system may automatically download your cell phone's entire phonebook to the vehicle's Bluetooth system.
- If the phonebook does not download automatically, 40 entries can be individually downloaded.


■ To manually download entries:

1. Push the  button on the steering wheel.
2. After the tone, say "Phonebook".
3. After the next tone, say "Transfer Entry". The system acknowledges the command and asks you to initiate the transfer from the phone handset. The new contact phone number will be transferred from the cellular phone to the vehicle.

■ The transfer procedure varies according to each cellular phone. See your cellular phone's owner's manual for details. You can also visit www.nissanusa.com/bluetooth for instructions on transferring phone numbers from NISSAN recommended cellular phones.


4. The system repeats the number and prompts you for the next command. When you have finished entering numbers or transferring an entry, choose "Store."
5. The system confirms the name, location and number.

MAKING A CALL FROM THE PHONEBOOK




1. Press the  button.
2. After waiting for the tone, say "Call".
3. After the next tone, speak a name of a phonebook entry. For example "Michael Smith".
4. Confirm the correct name is recognized by saying "Dial" after the tone.

NOTE: Names stored in all UPPERCASE letters may not be recognized correctly by the voice recognition system.

MAKING A CALL BY PHONE NUMBER

1. Press the  button. A tone will sound.
2. Say: "Call". The system acknowledges the command and announces the next set of available commands.
3. Say: "Phone Number". The system acknowledges the command and announces the next set of available commands.
4. Say the number you wish to call starting with the area code in single digit format.
5. When you have finished speaking the phone number, the system repeats it back and announces the available commands.
6. Say: "Dial". The system acknowledges the command and makes the call.

RECEIVING/ENDING A CALL

- When you receive a phone call, a ring tone sounds through the audio system.
- To accept the call, press the  button. To reject the call, press the  button.
- To hang up the phone at the end of a call or to disconnect during call placement, press the  button.

For more information, refer to the "Center display, heater, air conditioner, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. See your Owner's Manual, which contains important safety warnings and information about the operation and maintenance of your vehicle, for complete details. Nissan North America, Inc. reserves the right to make changes, at anytime, without prior notice, in prices, colors, materials, equipment, specifications, and models and to discontinue models or equipment. Due to continuous product development and other pre- and post-production factors, actual vehicle, materials and specifications may vary. Some vehicles are shown with optional equipment. See the actual vehicle for complete accuracy. Specifications, options and accessories may differ in Hawaii, U.S. territories and other countries. For additional information on availability, options or accessories, see your NISSAN dealer or contact Nissan North America, Inc.



To view detailed instructional videos,
go to **www.nissanownersinfo.mobi/2013/rogue**
or snap this barcode with an appropriate barcode reader.

